



Visit our homepage for additional support [parker.com/pmde](http://parker.com/pmde)



## Truck Hydraulics

Series GPA, GP1, F1, T1, F2, F3, F4, VP1,  
Fixed and Variable Displacement Pumps,  
Motors and Accessories



ENGINEERING YOUR SUCCESS.

## Basic formulas for hydraulic pumps

Flow (q)	D – displacement [cm <sup>3</sup> /rev]
$q = \frac{D \times n \times \eta_v}{1000}$ [l/min]	n – shaft speed [rpm]
Torque (M)	$\eta_v$ – volumetric efficiency
$M = \frac{D \times \Delta p}{63 \times \eta_{hm}}$ [Nm]	$\Delta p$ – differential pressure [bar] (between inlet and outlet)
Power (P)	$\eta_{hm}$ – mechanical efficiency
$P = \frac{q \times \Delta p}{600 \times \eta_t}$ [kW]	$\eta_t$ – overall efficiency $(\eta_t = \eta_v \times \eta_{hm})$

## Conversion factors

1 kg .....	2.20 lb
1 N.....	0.225 lbf
1 Nm.....	0.738 lbf ft
1 bar .....	14.5 psi
1 l.....	0.264 US gallon
1 cm <sup>3</sup> .....	0.061 cu in
1 mm .....	0.039 in
9/5 °C + 32 .....	1°F
1 kW.....	1.34 hp

On our website, [www.parker.com/pmde](http://www.parker.com/pmde), you can find:  
 2D & 3D drawings,  
 Installation Manuals,  
 Service Manuals,  
 Spare Parts Lists

Content

	Page
General product information .....	4
Pump and Line selection.....	13
GPA and GP1 pumps.....	17
F1 Pump ISO .....	23
F1 Pump SAE.....	31
T1 Pump .....	34
F1 Motor .....	38
F2 Twin-flow Pump.....	40
F3 Pump .....	43
F4 Twin-flow Pump.....	48
VP1 Pump .....	54
Suction Fittings.....	62
Auxiliary Valves .....	64
Accessories.....	74
Installation and start-up information .....	78

## GPA and GP1 Pumps

### Light/medium duty pumps

Parker's truck gear pumps are ideal for operators of light trucks for their hydraulic power needs.

The GPA/GP1 series gear pumps are available to suit most applications. They are light and compact, and can be installed in either rear or side mount configuration thanks to their unique dual port layout.

The smaller GPA series is built with an extruded aluminum housing for minimum weight.

The larger GP1 pumps are built with compact cast iron housings for strength.

The gear pumps complement our heavy duty piston pumps and vane pumps.

The performance and characteristics are ideal for many light and/or intermittent applications, including the famous Parker reliability, and they are engineered with long, trouble-free service life.

### Features

- Compact and light weight – easy to install even on small vehicles
- Quiet operation – low noise emissions are important in sensitive areas
- Robust and reliable – means a long, trouble-free service life
- Built for high rpm's – less sensitive to over-speeding
- Bi-directional – easy to install
- Side or rear mount – use the ports on the side or at the rear, whichever is most suitable for the application.

See page 17



Find more information on  
the GP1 product page.



Find more information on  
the GPA product page.



Series GPA



Series GP1

## F1 Pump ISO

Series F1 is a further development of our well known 'truck pump', the F1. The F1 offers many additional values for operators of cargo cranes, hook loaders, skip loaders, forest cranes, concrete mixers and similar truck applications.

Series F1 is a very efficient and straight forward pump design with unsurpassed reliability.

Its small envelope size gives a simple and inexpensive installation.

### Features of the F1 are:

- High selfpriming speeds
- Operating pressures up to 400 bar
- High overall efficiency
- Low noise level
- Small installation dimensions
- Low weight


### ... thanks to:

- 45° bent-axis angle
- Optimal inlet port geometry in the end cap
- Single housing design
- Spherical pistons – high speeds
- Laminated piston rings – low leakage
- Positive synchronisation with timing gear
- Installation above the reservoir level possible
- Tolerates low temperatures and high temperature shocks
- Shaft end and mounting flange meet the ISO standard for all sizes


See page 23



Find more information on  
the F1 product page.

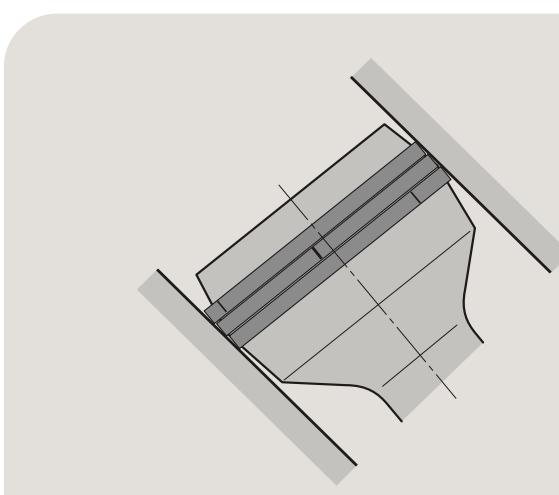

*F1 piston with laminated piston ring.*

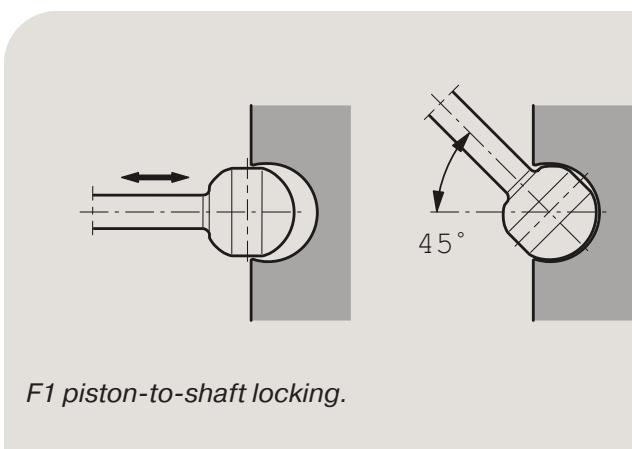

*F1 piston-to-shaft locking.*

## F1 Pump SAE

### Features:

- Laminated piston rings – low leakage
- Positive synchronisation with timing gear
- Operating pressure up to 350 bar
- Installation above the reservoir level possible
- Tolerates low temperatures and high temperature shocks
- Shaft end and mounting flange meet the standard SAE-B
- 4 sizes -25 / -41 / -51 / -61 cm<sup>3</sup>/rev

See page 31



Find more information on the  
F1 pump product page.



## F1 Motor ISO

### Features:

- Laminated piston rings – low leakage
- Positive synchronisation with timing gear
- Operating pressure up to 250 bar
- Tolerates low temperatures and high temperature shocks
- Shaft end and mounting flange meet the ISO standard for all sizes
- Tolerates high acceleration

See page 38



Find more information on the  
F1 motor product page.



## T1 Pump

The T1 fixed displacement pump is a further development of series T1, which was specifically designed to meet the requirements of light duty truck applications with short, non-frequent operating cycles such as tippers, and small loaders.

The design is very similar to that of the F1 series pumps but is even more compact. It utilises our well proven 45° concepts with spherical pistons and laminated piston rings, offering high volumetric and mechanical efficiencies and, thanks also to the small number of parts, unprecedented reliability.

- Shaft speed to 2300 rpm
- Operating pressure up to 350 bar
- High overall efficiency
- Low weight
- Small installation dimensions
- Robust construction

The T1, with shaft and mounting flange configuration conforming to the European standard, can be installed on most European truck gearboxes. Suitable power-take-offs are also available from Parker Hannifin.



### Typical T1 applications

- Front end tippers
- Under body tippers
- Hydraulic system infrequently used and with short cycle times.

See page 34



Find more information on  
the T1 product page.

## F2 Twin-flow Pump

Series F2 is a further development of the twin-flow version of series F1, the very first bent-axis truck pump on the market to feature two entirely independent flows.

With a suitable build-up of the hydraulic system, the main advantage with a twin-flow pump is that three different flows can be provided at the same engine speed.

The twin-flow pump makes it possible to further optimise the hydraulic system and offers:

- Less energy consumption
- Reduced risk of system overheating
- Lower weight
- Easier installation
- Smart system solutions

The twin-flow pump makes it possible to operate two work functions that are independent of each other which leads to higher speed and an increased operating precision.

Another requirement can be a large and a small flow, or two equal flows. All of these alternatives are possible with the twin-flow pump.

The pump can be utilised to provide one flow at high system pressure, and, as soon as the pressure has decreased sufficiently, add the flow from the other circuit.

This eliminates the risk of exceeding the PTO power rating and, at the same time, provide an optimal driving function.



### Typical twin-flow applications

- Large truck loaders
- Forestry cranes
- Hook loaders/lift dumpers
- Tipper/crane combinations
- Refuse collecting vehicles

The pump shaft end/mounting flange meets the ISO standard and suits PTO direct mounting.

See page 40



Find more information on  
the F2 product page.

## F3 Pump ISO

### Disengageable Fixed Displacement – Axial Piston Pump for engine PTO

The new, disengageable F3 series is a global innovation in mobile hydraulics. By engaging and disengaging the pump from the diesel engine on the fly, you can save substantial amounts of fuel. But you also reduce wear and tear on the pump and minimize the risk of costly downtime and standstills – while also reducing the noise level. All that is required is to press a button on the dashboard, without turning off the engine!

#### Save on fuel!

For the average truck running 100,000 kilometres a year, savings can amount to between 200 and 300 litres (45 – 65 gallons) less diesel, with a corresponding reduction in emissions of greenhouse gases and particulates, all due to the F3 pump being completely disconnectable when not in use. This is a unique, patented characteristic now being launched by Parker Hannifin.

#### Enhanced reliability!

When a pump is fitted to an engine PTO, even small mishaps like a ruptured hose can result in having to be recovered and towed to a workshop, with all its downsides by way of major outlay and high downtime costs. With the new F3, you just disconnect the pump and make your way home under your own steam!

#### Reduce noise levels!

Compared to a conventional hydraulic pump in the unloaded position, the new F3 generates considerably lower noise levels in disconnected mode – this makes matching future noise emissions regulations easier.


#### Features of the F3 are:

- Disengageable and engageable
- Air operated
- High selfpriming speeds
- Operating pressures up to 400 bar
- High overall efficiency
- Low noise level
- Small installation dimensions
- Low weight


#### See page 43



Find more information on  
the F3 product page.

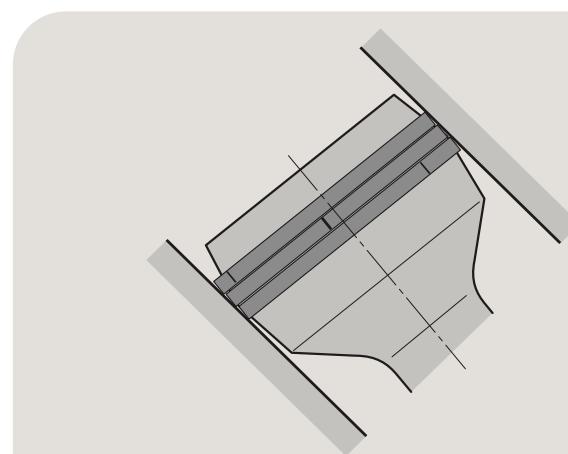

*F3 piston with laminated piston ring.*

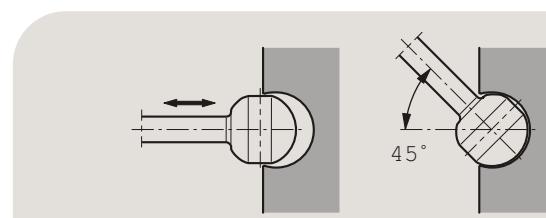

*F3 piston-to-shaft locking.*

#### ... thanks to:

- Integrated coupling enables engaging and disengaging the pump
- 45° bent-axis angle
- Optimal inlet port geometry in the end cap
- Spherical pistons – high speeds
- Laminated piston rings – low leakage
- Positive synchronisation with timing gear
- Installation above the reservoir level possible
- Tolerates low temperatures and high temperature shocks
- Shaft end and mounting flange meet the ISO standard for all sizes

## F4 twin flow truck pump declutchable

The new, disengageable F4 series is a global innovation in mobile hydraulics. By engaging and disengaging the pump from the diesel engine on the fly, you can save substantial amounts of fuel. But you also reduce wear and tear on the pump and minimize the risk of costly downtime and standstills – while also reducing the noise level. All that is required is to press a button on the dashboard, without turning off the engine!

### Save on fuel!

For the average truck running 100,000 kilometres a year, savings can amount to between 200 and 300 litres (45 – 65 gallons) less diesel, with a corresponding reduction in emissions of greenhouse gases and particulates, all due to the F4 pump being completely disengageable when not in use. This is a unique, patented characteristic now being launched by Parker Hannifin.

### Enhanced reliability!

When a pump is fitted to an engine PTO, even small mishaps like a ruptured hose can result in having to be recovered and towed to a workshop, with all its downsides by way of major outlay and high downtime costs. With the new F4, you just disengage the pump and make your way home under your own steam!

### Reduce noise levels!

Compared to a conventional hydraulic pump in the unloaded position, the new F4 generates considerably lower noise levels in disengaged mode – this makes matching future noise emissions regulations easier.

### Smart system solution


The twin-flow pump makes it possible to operate two work functions that are independent of each other which leads to higher speed and an increased operating precision.

Another requirement can be a large and a small flow, or two equal flows. All of these alternatives are possible with the twin-flow pump.


The pump can be utilised to provide one flow at high system pressure, and, as soon as the pressure has decreased sufficiently, add the flow from the other circuit. This eliminates the risk of exceeding the PTO power rating and, at the same time, provide an optimal driving function.

### Features of the F4 are:

- Disengageable and engageable
- Air operated
- High selfpriming speeds
- Operating pressures up to 400 bar
- High overall efficiency
- Low noise level
- Small installation dimensions
- Low weight

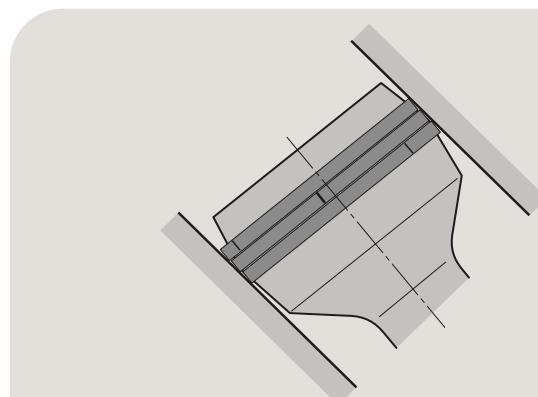

*F4 piston with laminated piston ring.*

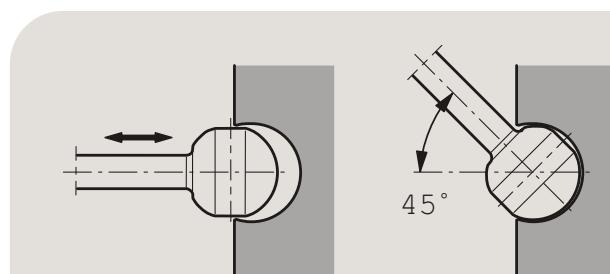

*F4 piston-to-shaft locking.*

### Typical twin-flow applications

- Large truck loaders
- Forestry cranes
- Hook loaders/lift dumpers
- Tipper/crane combinations
- Refuse collecting vehicles



Find more information  
on the F4 product page.

### See page 48

## VP1 Pump

The VP1 is a variable displacement pump for truck applications. It can be close-coupled to a gearbox PTO (power take-off) or to a coupling independent PTO (e.g. an engine PTO) which meets ISO standard 7653-1985.

An application that makes full use of all the features of the VP1 is truck cranes with a load sensing system. The complex systems of refuse collection vehicles and sewage trucks as well as various combinations of tippers, cranes, snow ploughs, and salt/sand spreaders can also be greatly simplified and optimised with the VP1 pump.

The VP1 provides the hydraulic system with the correct amount of fluid at precisely the right moment, effectively reducing energy consumption and heat generation. This means a smoother and quieter hydraulic system with much reduced impact on the environment.

The VP1 is highly efficient and extremely light. It is reliable, economical and easy to install.

The 6 frame sizes, VP1-045, -060 -075, -095, -110 and -130 have small installation dimensions.



The VP1 is suitable for all load sensing systems, regardless of make.

## Design

### Large angle – compact design

The pump design permits a large angle, 20°, between piston and slipper shoe/swashplate, providing compactness and small outer dimensions.

### Tandem coupling

The through-shaft on VP1-045/-060/-075 permits tandem coupling of an additional pump, such as a series F1 fixed displacement pump.

### Long life

The VP1 is designed for trucks with hydraulic load sensing systems. It is sturdy, yet simple, with few moving parts. The result is a reliable pump with long service life.

See page 54



Find more information on  
the VP1 product page.

## Features

- Variable displacement
- Low noise level
- High power-to-weight ratio
- Compact and light
- Highly efficient
- Sturdy design
- Withstands low temperatures
- Can be close coupled and tandem mounted.  
(tandem coupling only for VP1-045/-060/-075)

## Retainer plate

The retainer plate (refer to the cut-away illustration pages 47 ff.) is of a heavy duty design which makes the pump withstand high shaft speeds and fast speed changes. (e.g. engine PTO).

## ● Accessories

**Adaptor kits and accessories  
for F1, T1, F2, F3, F4  
and VP1 pumps**

### Fittings

Suction fittings and fitting kits  
**See page 63**

### Bypass valve

BPV-F1/-T1, BPV-F1-25 and -81, BPV-F2,  
**See page 65 ff**


### Unloading valve

BPV-VP1, BPV-L.  
**See page 73**

### Accessories

Universal PTO air valve kits, PTO adapter kits for engines, cardan shafts, pump couplings and mounting brackets, and splitter boxes  
(SB 1-1,18, 1-1,54)

**See page 74**

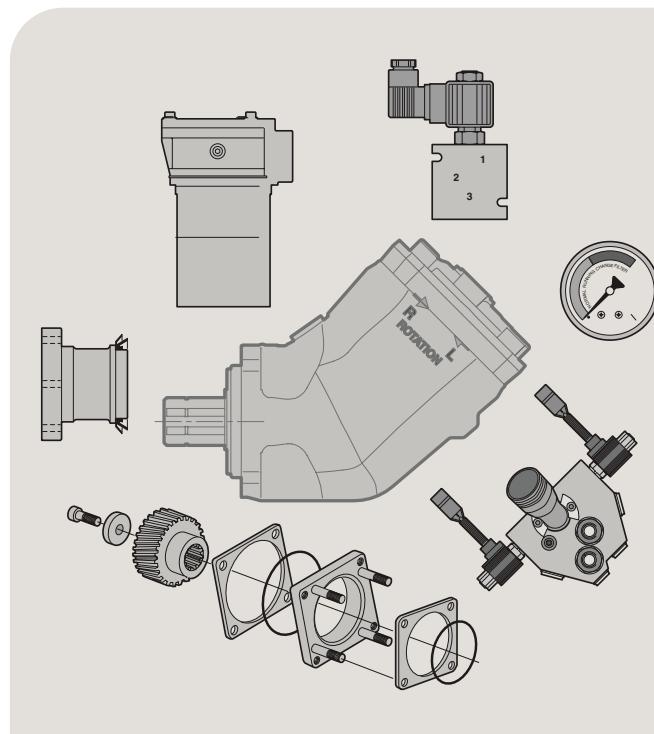

● **Pump and Line selection**

Installation guide lines for GPA, GP1, F1, T1, F2, F3, F4 and VP1 pumps

<b>Contents</b>	<b>Page</b>
<b>Pump selection</b>	
F1, T1, F2, F3 and F4 .....	14
<b>Line selection</b>	
all pumps .....	15
Nomogram .....	16

## Pump selection

### F1, T1, F2, F3 and F4

The following table shows pump flow at selected PTO gear ratios and engine rpm's.

PTO gear ratio	Engine speed [rpm]	Pump flow [l/min]						
		F1-25	F1-41	F1-51	F1-61	F1-81 T1-81 F3-81	F1-101 F3-101	T1-121
1:0.8	800	16	26	33	38	52	66	76
	900	18	29	37	43	59	74	85
	1000	20	33	41	48	65	82	95
	1100	23	36	45	52	72	91	104
	1200	25	39	49	57	78	99	114
1:1.0	800	20	33	41	48	65	82	95
	900	23	37	46	54	73	93	107
	1000	26	41	51	60	82	103	119
	1100	28	45	56	65	90	113	130
	1200	31	49	61	71	98	123	142
1:1.25	800	26	41	51	60	82	103	119
	900	29	46	57	67	92	116	133
	1000	32	51	64	74	102	129	148
	1100	35	56	70	82	111	141	163
	1200	38	61	77	89	122	154	178
1:1.5	800	31	49	61	71	98	123	142
	900	35	55	69	80	110	139	160
	1000	38	61	77	90	122	154	178
	1100	42	67	84	98	135	170	196
	1200	46	74	92	107	147	185	213

#### NOTE:

- Make sure max torque and bending moment (due to the weight of the pump) of the utilised PTO are not exceeded. (The approx. center of gravity of the various pump sizes are shown in the installation drawings).
- Make sure max allowed output torque from the PTO is not exceeded.
- Contact Parker Hannifin if the inlet (suction) pressure is believed to be less than 1.0 bar (absolute); insufficient inlet pressure can cause noise and pump damage because of cavitation.

#### Flow and torque formulas

(no regard to efficiency)

$$\text{Flow: } Q = \frac{D \times n}{1000} \text{ [l/min]}$$

where: D is pump displacement [cm<sup>3</sup>/rev]  
n is shaft speed [rpm]

$$\text{Torque: } M = \frac{D \times p}{63} \text{ [Nm]}$$

where: D is pump displacement [cm<sup>3</sup>/rev]  
p is utilised pressure [bar]

A suitable pump size for a truck application can be selected as follows:

### Operating conditions

As an example, a cargo crane specifies:

- Flow: 60 – 80 l/min
- Pressure: 230 bar
- Diesel engine speed  $\approx$  800 rpm

### Determine pump speed

As example a PTO with a Gear Ratio of 1:1.54.

The pump speed will be:

$$800 \times 1.54 \approx 1200 \text{ rpm}$$

### Select a suitable pump size

Use diagram 1 and select a pump that will provide 60 – 80 l/min at 1200 rpm.

Follow line 'a' (1200 rpm) until it crosses line 'b' (70 l/min).

- F1-61 is a suitable choice

### Required input torque

Make sure the PTO and the gear-box tolerates the pump torque. Use diagram 2 to obtain the required pump torque.

Follow a line from 'c' (230 bar) until it crosses the F1-61 line (the selected pump).

- Read 220 Nm (at 'd')

**NOTE:** A rule-of-thumb is to select the highest PTO ratio and the smallest pump size that meets the crane specification without exceeding the pump speed, pressure, and power limitations.

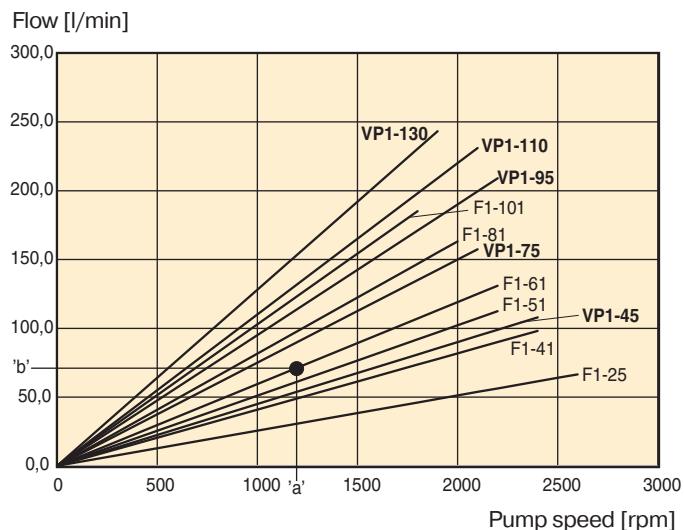


Diagram 1.

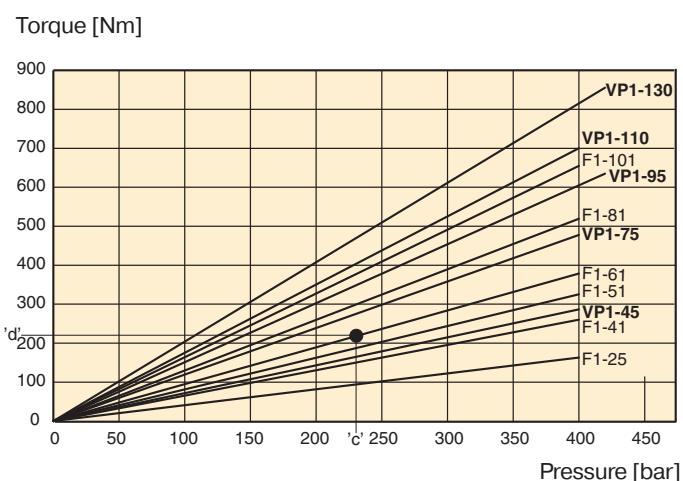


Diagram 2.  
F3-81=F1-81  
F3-101=F1-101

## Line selection

all pumps

Line type	Flow velocity [m/s]						
Inlet (suction)	max 1.0						
Outlet (pressure)	max 5.0						

Flow rate [l/min]	Flow velocity [m/s] at selected line sizes [mm/inches]						
	19 / 3/4 "	25 / 1"	32 / 1 1/4 "	38 / 1 1/2 "	51 / 2"	64 / 2 1/2 "	75 / 3"
25	1.5	0.8	0.5	0.4	0.2	0.1	0.1
50	2.9	1.7	1.0	0.7	0.4	0.3	0.2
75	4.4	2.5	1.6	1.1	0.6	0.4	0.3
100	5.9	3.4	2.1	1.5	0.8	0.5	0.4
150	8.8	5.1	3.1	2.2	1.3	0.8	0.5
200	-	-	4.1	2.9	1.6	1.1	0.7
250	-	-	5.3	3.7	2.1	1.3	0.9

Inlet (suction)  
line

Table 1. Outlet (pressure) line

In order to obtain sufficient inlet (suction) pressure to the pump, low noise level and low heat generation, flow speeds shown in table 2, right, should not be exceeded.

From table 1 (page 15), select the smallest line dimension that meets the flow speed recommendation; example:

- At 100 l/min, a 50 mm suction line and a 25 mm pressure line is needed.

**NOTE:** Long inlet (suction) lines, low inlet pressure (caused by e.g. a reservoir positioned below the

pump) and/or low temperatures may require larger line dimensions.

Alternatively, the pump speed will have to be lowered to avoid pump cavitation (which may cause noise, deteriorating performance and pump damage).

Line type	Flow velocity [m/s]
Inlet (suction)	max 1.0
Outlet (pressure)	max 5.0

Table 2.

## Nomogram

Flow – Line dimension – Flow velocity

Example 1  
Pressure line  
 $Q = 65 \text{ l/min}$   
 $d = 3/4"$   
 $v = 3.8 \text{ m/s}$

Example 2  
Suction line  
 $Q = 50 \text{ l/min}$   
 $v = 0.8 \text{ m/s}$   
 $d = 1 \frac{1}{2}"$

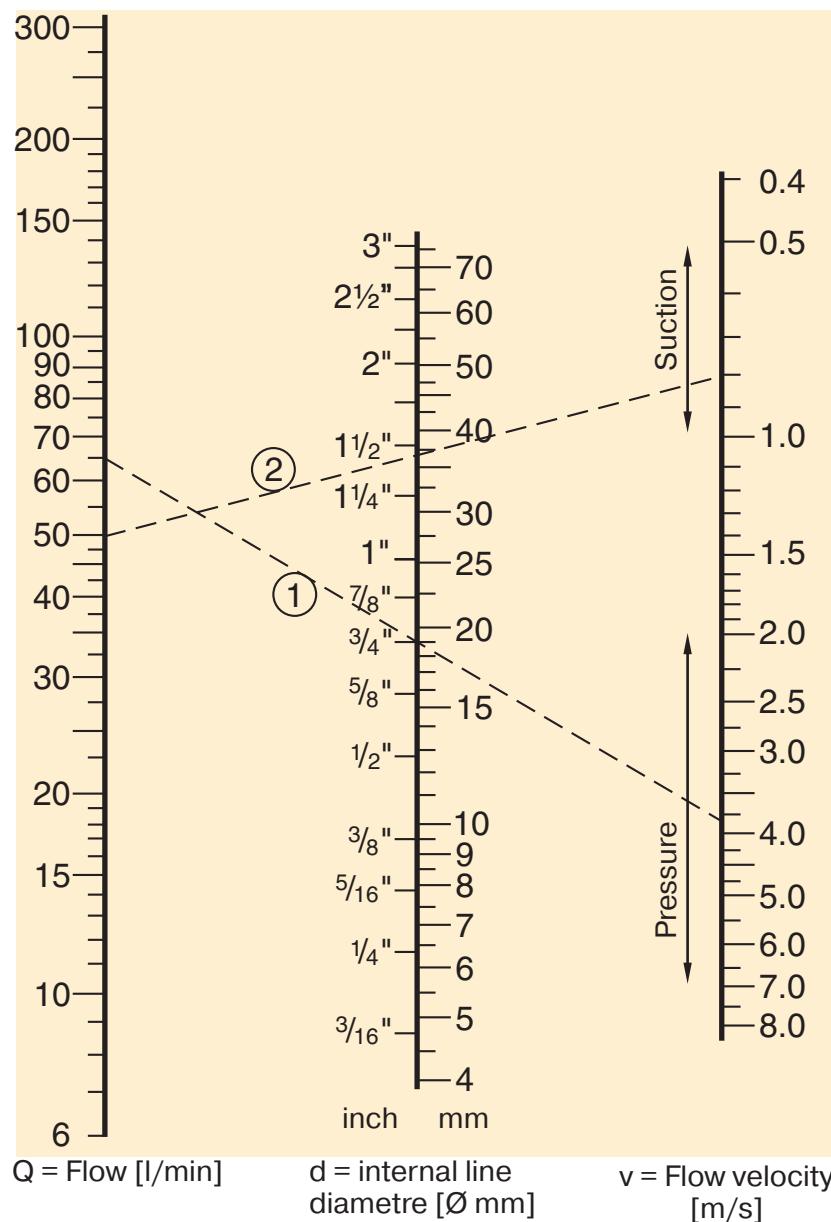


Table 3.

## GPA and GP1 Pumps



<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications.....	18
Installation Dimensions.....	19 – 21
Ordering Information/Ordering code.....	22
Suction fittings.....	62
Installation and start up.....	82

## **GPA and GP1** Specifications

### **Series GPA** (aluminum body; 4-bolt)

Frame size GPA*	008	011	014	016	019
<b>Displacement [cm<sup>3</sup>/rev]</b>	8	11	14	16	19
<b>Max pressure [bar]</b>	250				
<b>Speed [rpm]</b> (at max pressure) min	500	500	500	500	500
max	2000	2000	2000	1750	1500
<b>Weight [kg]</b>	4.9	5.05	5.2	5.3	5.4




\* Multi-section GPA pumps available on request.

### **Series GP1** (cast iron body; 4-bolt)

Frame size GP1*	023	029	041	046	060	080
<b>Displacement [cm<sup>3</sup>/rev]</b>	23	29	41	46	60	80
<b>Max pressure [bar]</b>	250	250	220	210	250	210
<b>Speed [rpm]</b> min	500	500	500	500	500	500
max	2000	2000	2000	2000	1800	1600
<b>Weight [kg]</b>	7.3	7.7	8.5	8.8	13.5	14.0

\* Multi-section with GPA pumps available on request.


**GPA-008/-011/-014/-016/-019 4-bolt**

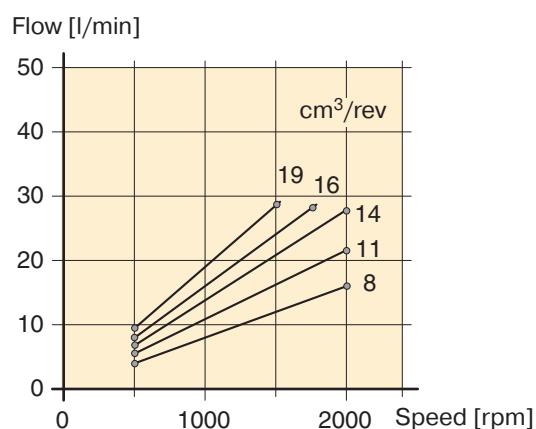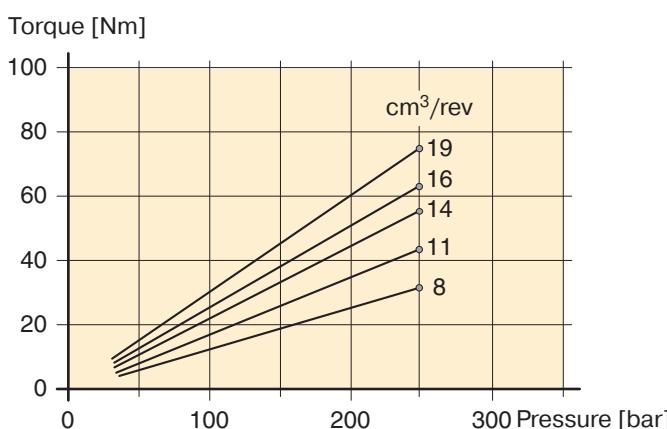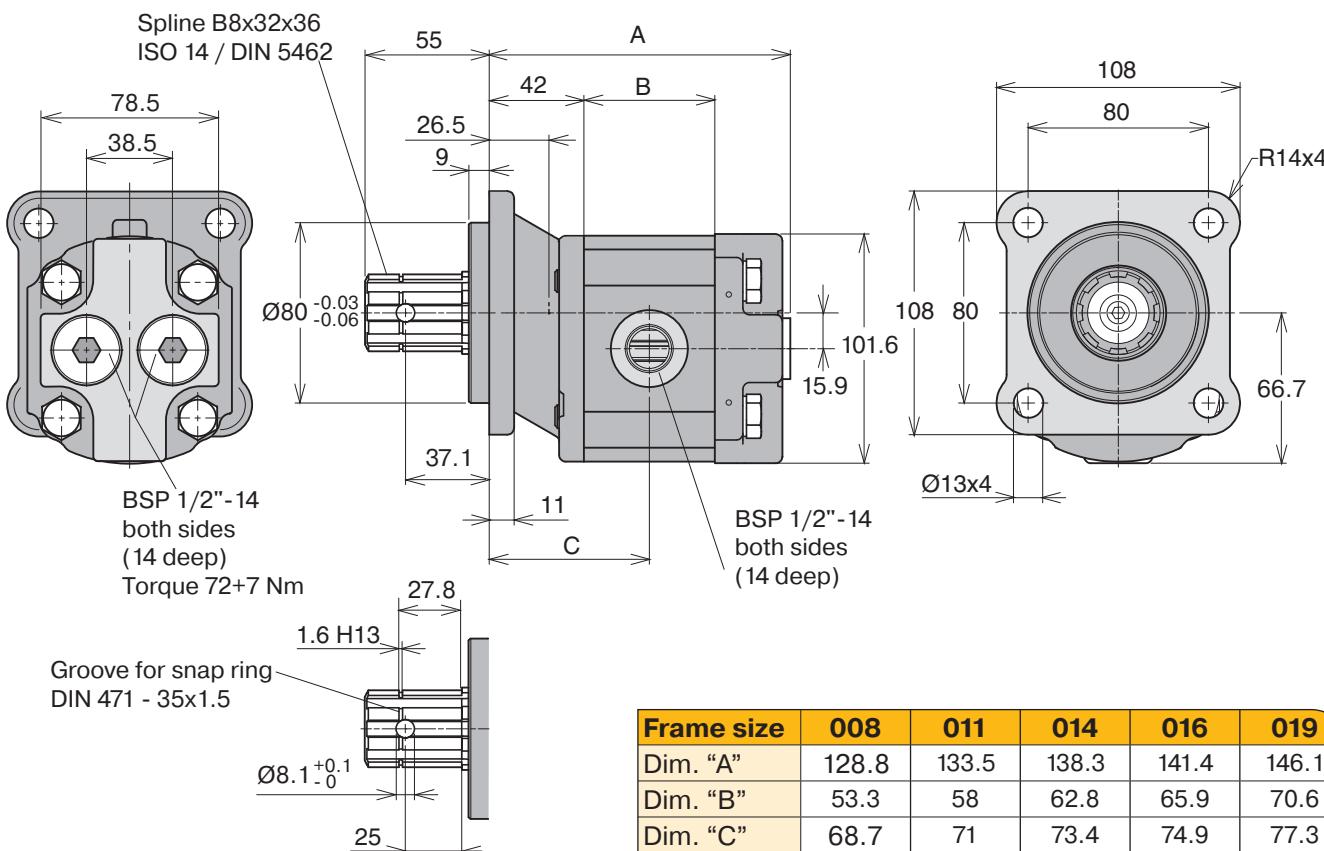



Diagrams reflect theoretical values

Direction of rotation: Bi-directional  
Input pressure: 0.8 to 2.0 bar (absolute)  
Fluid temperature: -15 °C to +80 °C  
Range of operating viscosity: 8 to 1000 mm²/s (cSt)

● GP1-023/-029/-041/-046 4-bolt

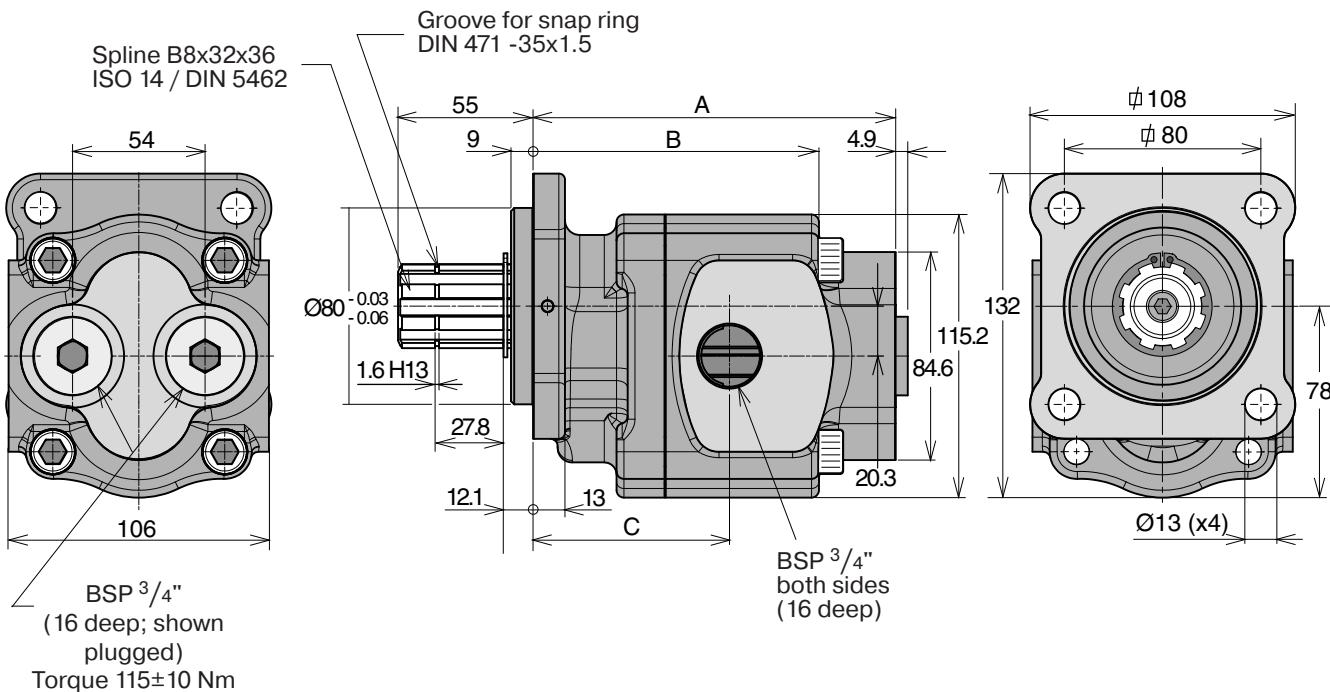


Frame size	023	029	041	046
Dim. "A"	128.5	134.3	147.7	153.2
Dim. "B"	97.3	103.3	116.4	121.9
Dim. "C"	77.1	76.0	80.0	84.8

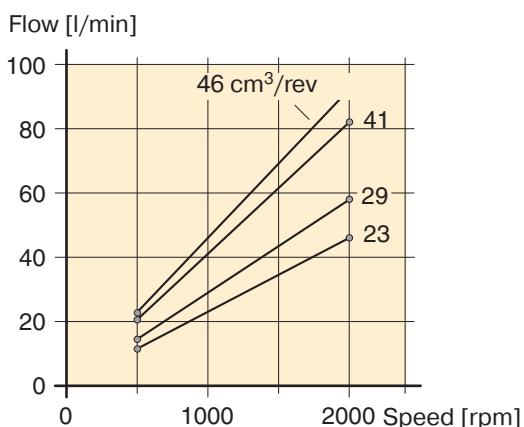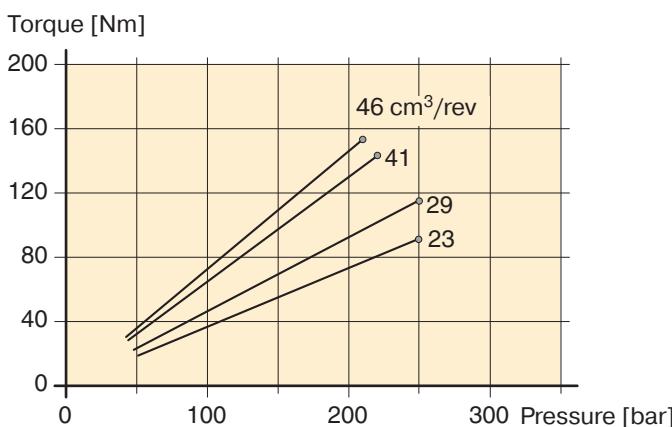

Diagrams reflect theoretical values


Direction of rotation: Bi-directional  
Input pressure: 0.8 to 2.0 bar (absolute)  
Fluid temperature: -15 °C to +80 °C  
Range of operating viscosity: 8 to 1000 mm<sup>2</sup>/s (cSt)

## GP1-060/-080 4-bolt

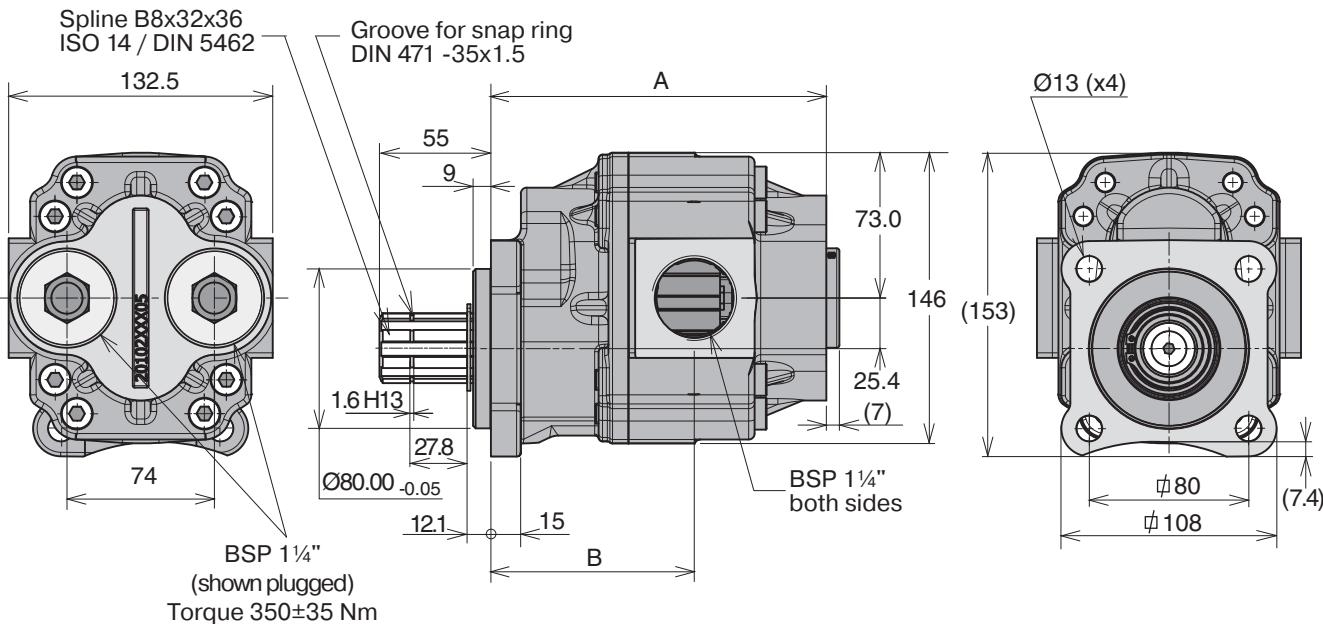


Frame size	060	080
Dim. "A"	168.3	186.5
Dim. "B"	102	108

Torque [Nm]

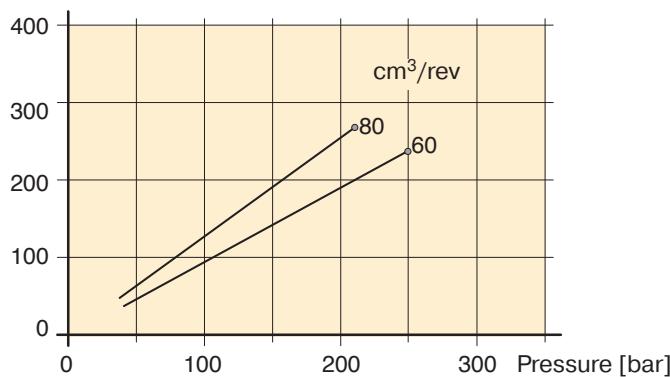

Flow [l/min]

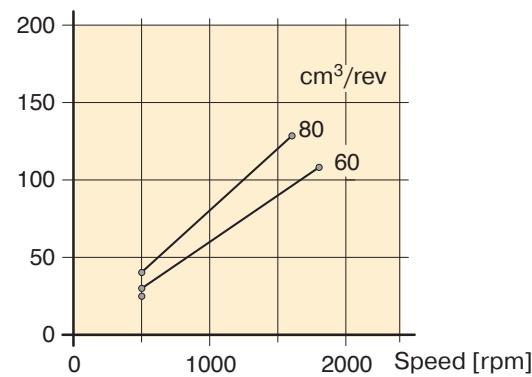

Diagrams reflect theoretical values

- Direction of rotation: Bi-directional  
 Input pressure: 0.8 to 2.0 bar (absolute)  
 Fluid temperature: -15 °C to +80 °C  
 Range of operating viscosity: 8 to 1000 mm<sup>2</sup>/s (cSt)

## Ordering code

Example:

GPA- 008 - 4

A Aluminium body  
1 Cast iron body

Frame size \_\_\_\_\_  
**A = 008, 011, 014, 016 or 019**  
**1 = 023, 029, 041, 046, 060 or 080**

4 4 bolt flange

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62 ff.

## Standard versions

### Aluminium 4 bolt

Designation	Ordering no.
GPA-008-4	334 9113 940
GPA-011-4	334 9113 941
GPA-014-4	334 9113 942
GPA-016-4	334 9113 943
GPA-019-4	334 9113 944

### Cast iron 4 bolt

Designation	Ordering no.
GP1-023-4	722 9113 005
GP1-029-4	722 9113 006
GP1-041-4	722 9113 007
GP1-046-4	722 9113 008
GP1-060-4	704 9113 942
GP1-080-4	704 9113 944

## Sealkits for GPA and GP1

Designation	Ordering no.
Seal kit GPA 8-19 CC	391 1842 645
Seal kit GP1 23-46 CC	391 1842 636
Seal kit GP1 60-80 CC	391 1832 690

**F1 Pump**

**F1-ISO**



<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
F1-25 to -101, ISO.....	24
Specifications and pump cross section .....	24
Installation Dimensions, F1-25, to -61 .....	25
Ordering code and standard versions .....	25
Installation Dimensions F1-81 and -101 .....	26
Port size and standard versions .....	26
F1-12 ISO with BSP port treads .....	27
Specifications and pump cross section .....	27
Installation Dimensions, F1-12 with BSP port treads.....	28
Ordering code and standard versions .....	28
Installation Dimensions, F1-25 to -101 with BSP port treads.....	29
Ordering code, port size and standard versions.....	29
Suction fittings.....	62
Installation and start up.....	80

## F1-25 to -101, ISO

### Specifications

Frame size F1-	25	41	51	61	81	101
<b>Displacement [cm<sup>3</sup>/rev]</b>	25.6	40.9	51.1	59.5	81.6	102.9
<b>Max flow<sup>1)</sup> [l/min]</b>	78	104	125	143	180	216
<b>Max operating pressure [bar]</b>	400	400	400	400	400	400
<b>Mass moment of inertia J [kgm<sup>2</sup>]</b>	0.00274	0.00266	0.00261	0.00257	0.00532	0.00524
<b>Shaft speed [rpm]</b>						
- short circuited pump (low press.)	3100	2700	2700	2700	2300	2300
- max selfpriming speed <sup>2)</sup>	3050	2550	2450	2400	2200	2100
<b>Torque<sup>1)</sup> [Nm]</b>	163	260	324	378	518	653
<b>Max Input power<sup>3)</sup> [kW]</b>	45	61	73	83	105	126
<b>Weight [kg]</b>	8.5	8.5	8.5	8.5	12.3	12.1


<sup>1)</sup> Theoretical values

<sup>2)</sup> Valid at an inlet pressure of 1.0 bar (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).

<sup>3)</sup> Max 6 seconds in any one minute.

**NOTE:** For noise level information, contact Parker Hannifin

### Pump cross section

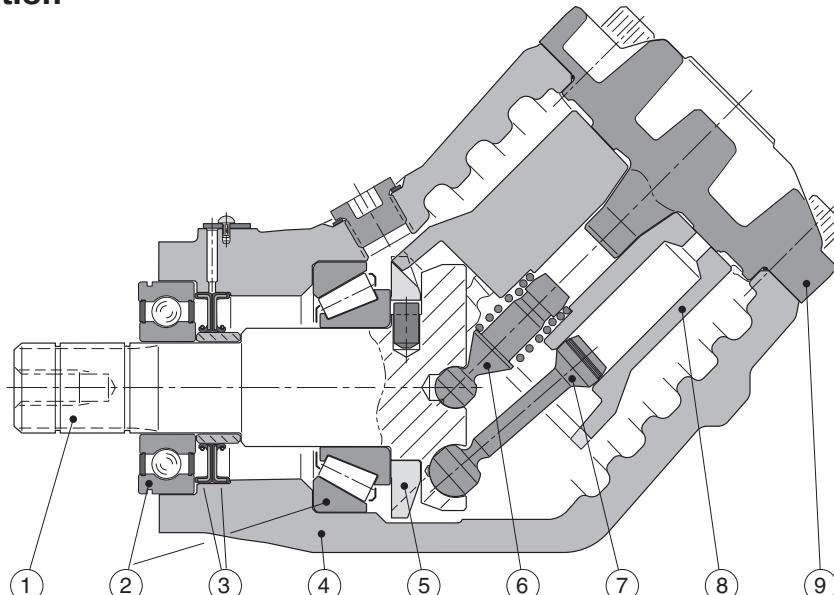


1. Input shaft  
2. Bearings  
3. Shaft seals

4. Housing  
5. Timing gear  
6. Barrel support

7. Piston with piston ring  
8. Cylinder barrel  
9. End cap

**F1-25, -41, -51 and -61**

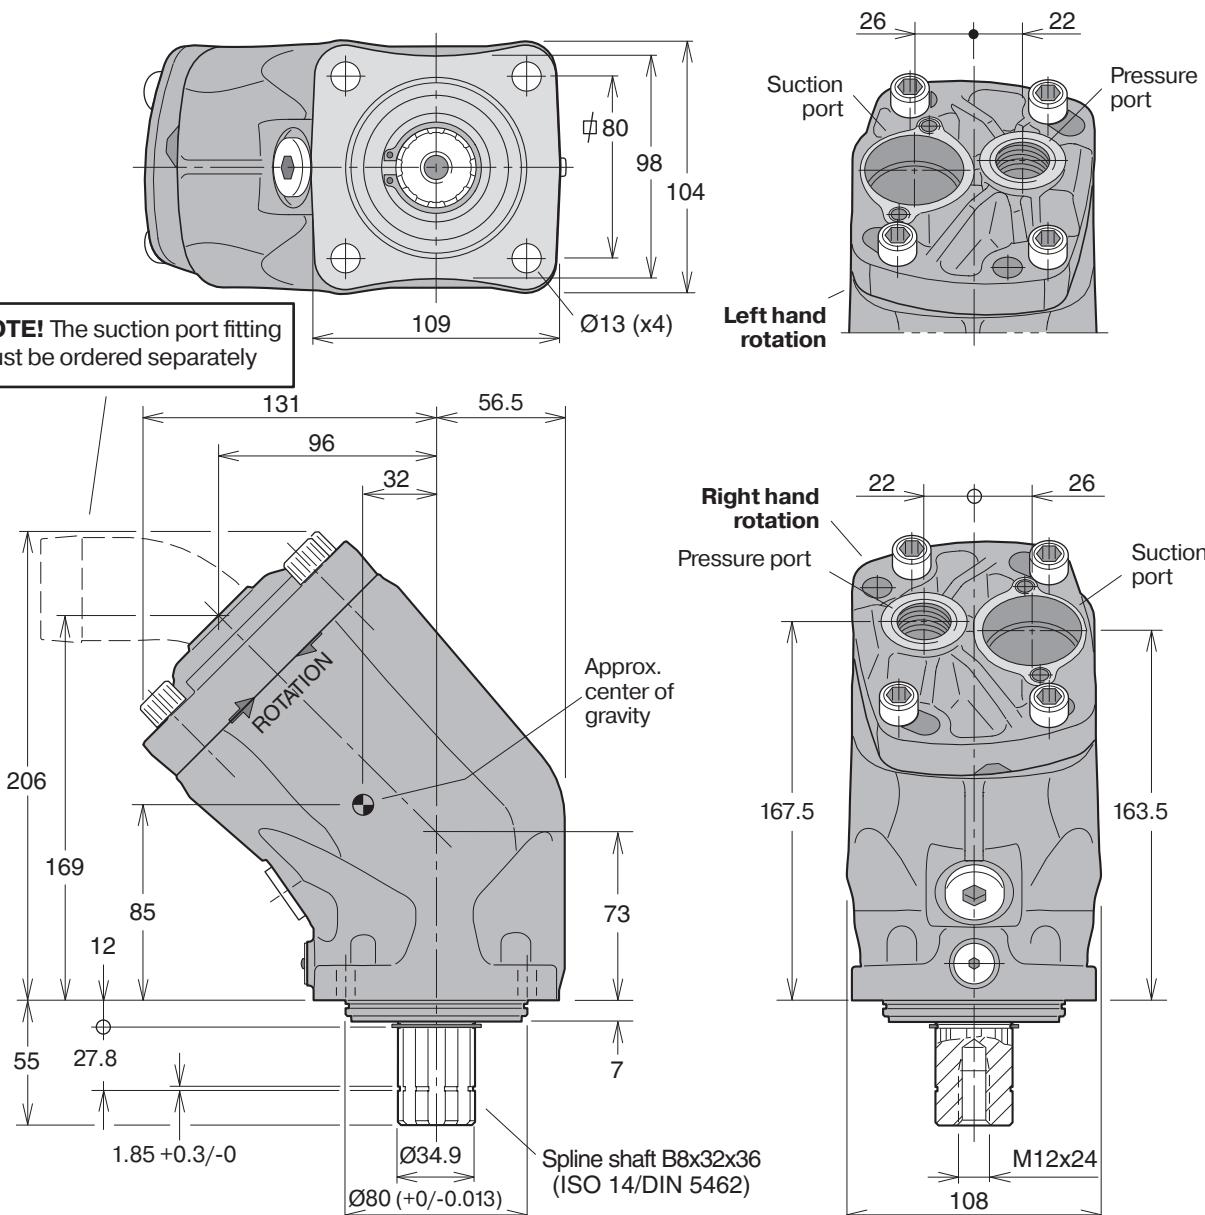

**Ordering code**


Example:  
F1 frame size  
**25, 41, 51, 61, 81 or 101**      **F1 - 81 - R**  
Shaft rotation  
**R** Right hand  
**L** Left hand

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

**Standard versions**

Designation	Ordering no.
F1-25-R	378 1024
F1-25-L	378 1025
F1-41-R	378 1040
F1-41-L	378 1041
F1-51-R	378 1050
F1-51-L	378 1051
F1-61-R	378 1060
F1-61-L	378 1061

## F1-81 and -101

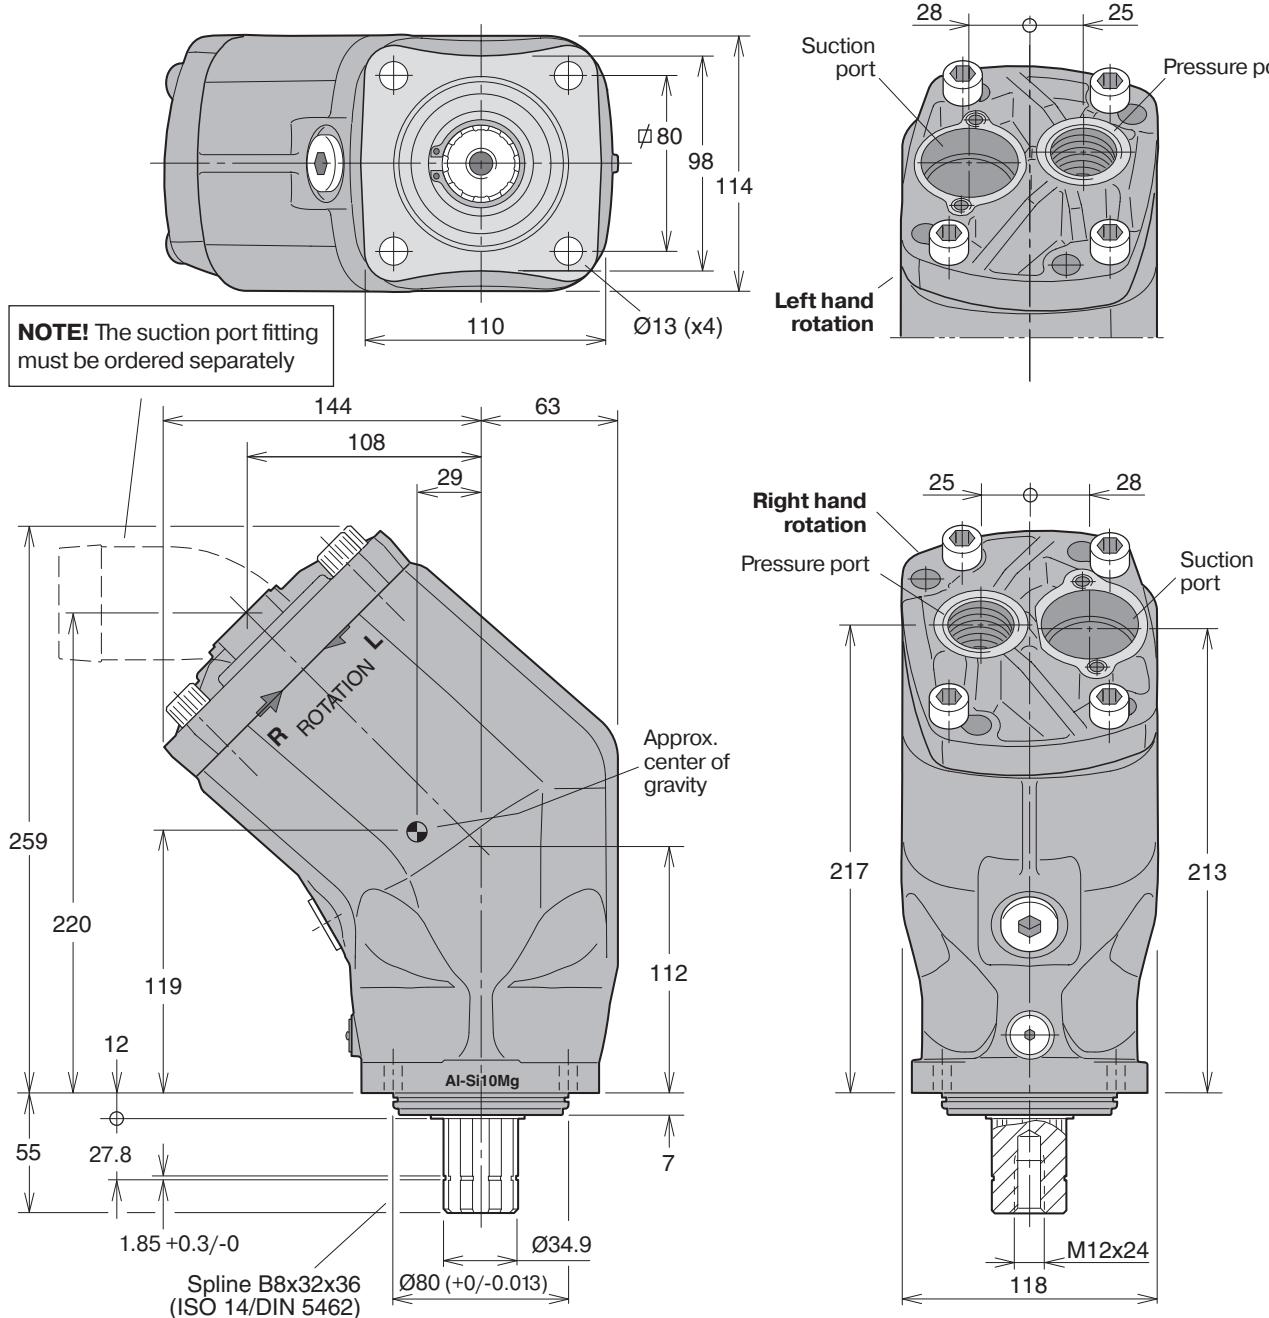

## Port size

F1 frame size	Pressure port <sup>1)</sup>
-25	3/4"
-41	3/4"
-51	3/4"
-61	3/4"
-81	1"
-101	1"

<sup>1)</sup> BSP thread (fitting not included)

## Standard versions

Designation	Ordering no.
F1-81-R	378 1080
F1-81-L	378 1081
F1-101-R	378 1100
F1-101-L	378 1101

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

## F1-12 ISO with BSP port treads

### Specifications


Frame size F1-	12
<b>Displacement</b> [cm <sup>3</sup> /rev]	12
<b>Max flow</b> <sup>1)</sup> [l/min]	28
<b>Max operating pressure</b> [bar]	350
<b>Shaft speed</b> [rpm]	
- short circuited pump (low press.)	3100
- max selfpriming speed	2300
<b>Torque</b> <sup>1)</sup> [Nm]	67
<b>Max input power</b> [kW]	16
<b>Weight</b> [kg]	6.7

<sup>1)</sup> Theoretical values

### NOTE:


For noise level information, contact Parker Hannifin

## Pump cross section

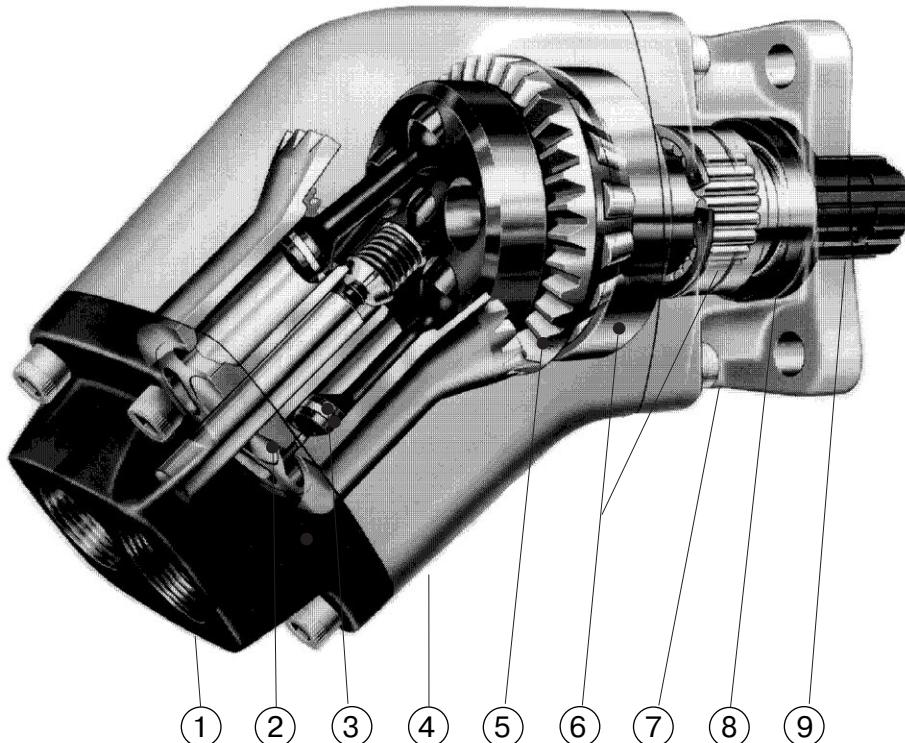

- |                           |                   |                               |
|---------------------------|-------------------|-------------------------------|
| 1 End cap                 | 4 Barrel housing  | 7 Bearing housing with flange |
| 2 Cylinder barrel         | 5 Timing gear     | 8 Shaft seals                 |
| 3 Piston with piston ring | 6 Roller bearings | 9 Input shaft                 |

● F1-12 with BSP port treads

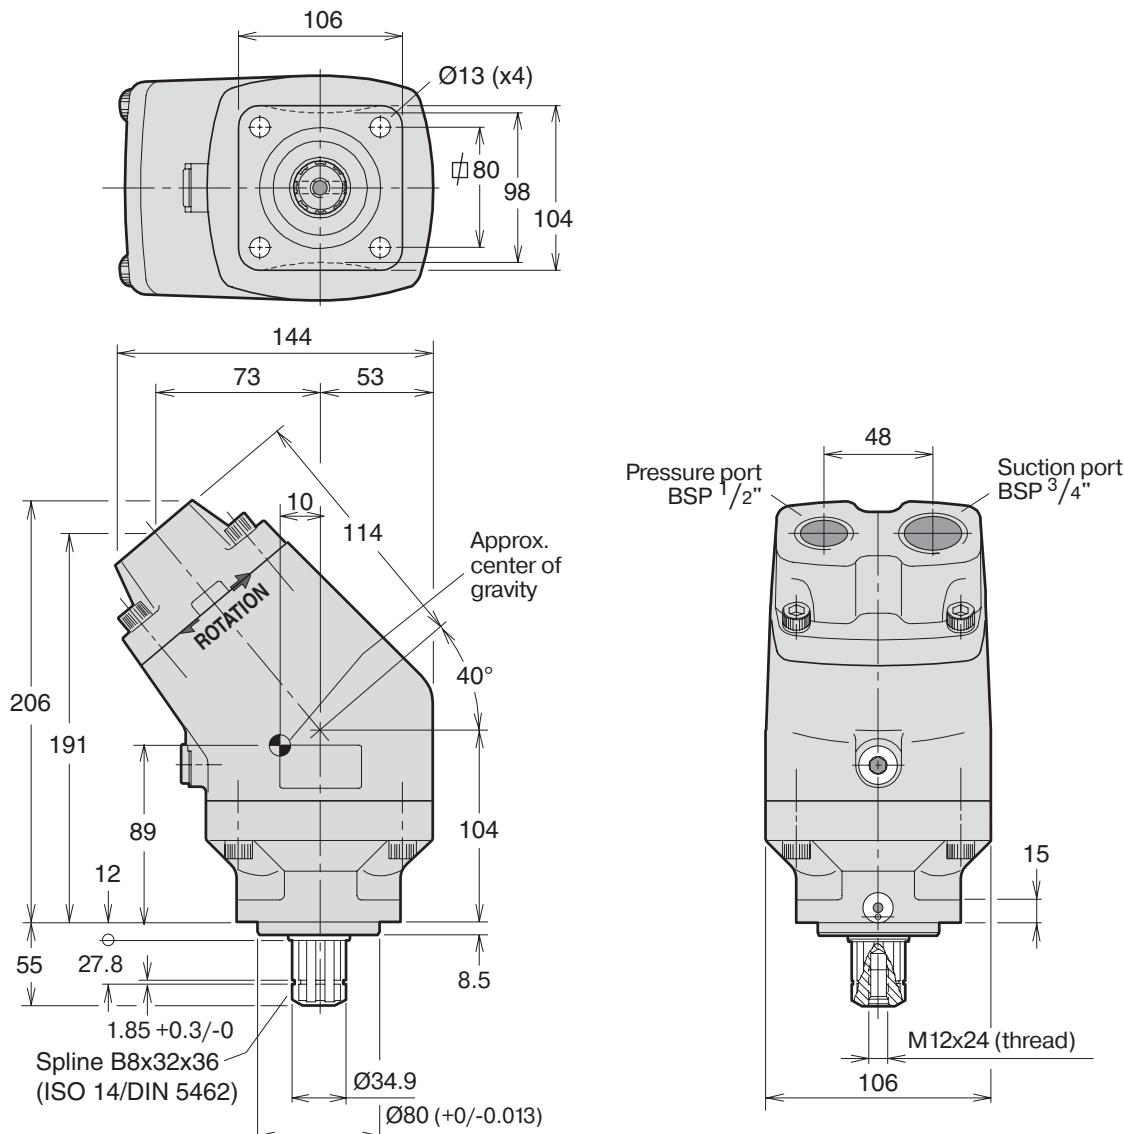

● Ordering code

Example:

**F1 - 12 - R**

F1 frame size **12**


Shaft rotation  
**R** Right hand  
**L** Left hand

Standard versions

Designation	Ordering no.
F1-12-R	378 2212
F1-12-L	378 2211

**NOTE:** The pump **does not** include a suction fitting;  
it must be ordered separately. See page 62ff.

● F1-25, -41, -51 and -61 with BSP port treads

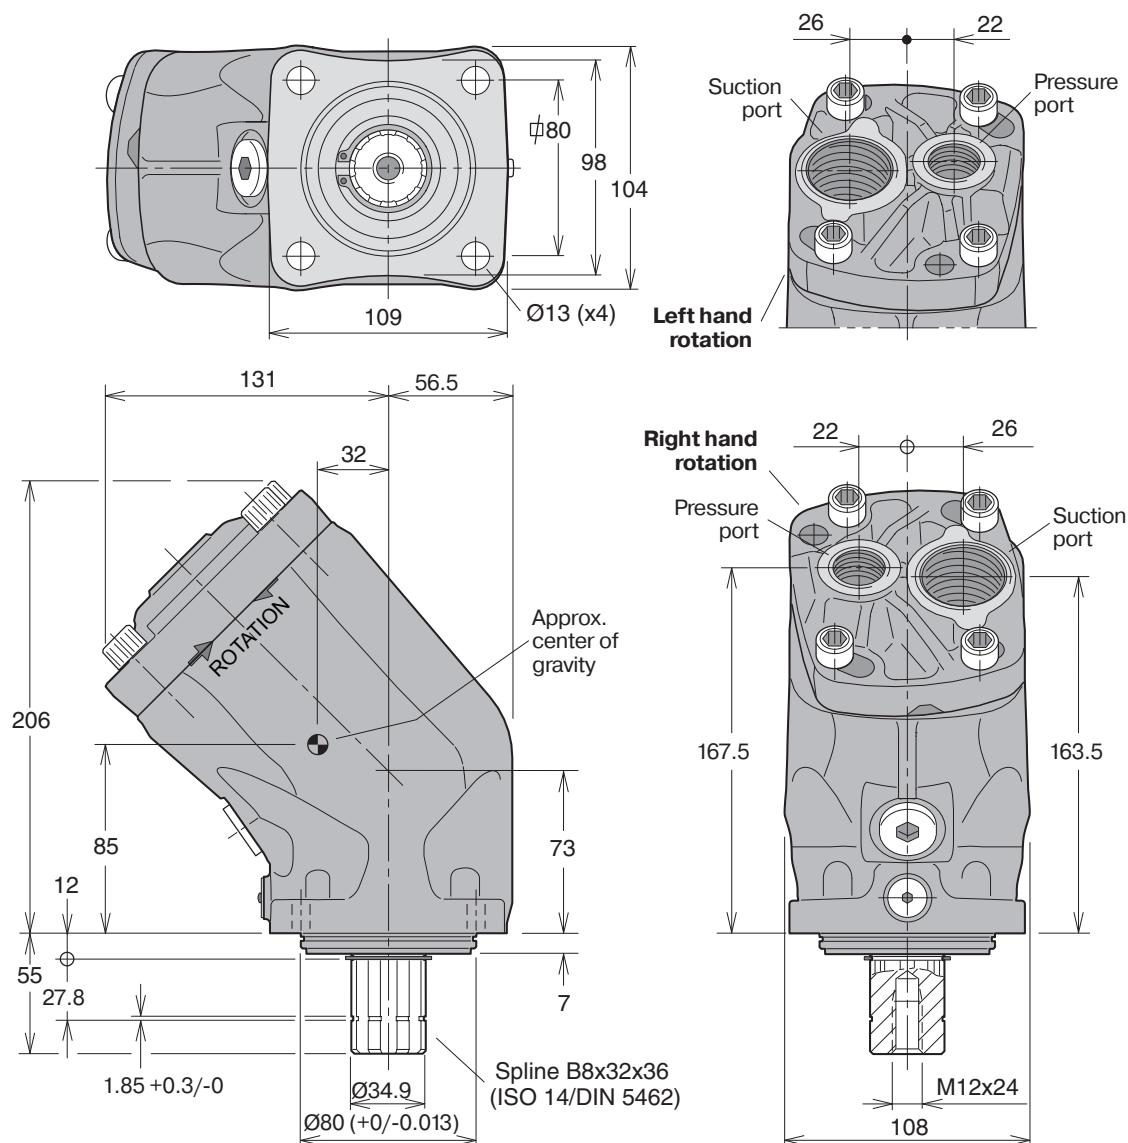

● Port size (all ports are BSP)

F1 frame size	Pressure port <sup>1)</sup>	Suction port
-25	3/4"	1"
-41	3/4"	1"
-51	3/4"	1"
-61	3/4"	1"

● Ordering code

Example: **F1 - 61 - RB**

F1 frame size 25, 41, 51, 61, 81 or 101


Shaft rotation/port threads RB Right hand/BSP  
LB Left hand/BSP

Standard versions

Designation	Ordering no.
F1-25-RB	378 4024
F1-25-LB	378 4025
F1-41-RB	378 4040
F1-41-LB	378 4041
F1-51-RB	378 4050
F1-51-LB	378 4051
F1-61-RB	378 4060
F1-61-LB	378 4061

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

● F1-81 and -101 with BSP port treads

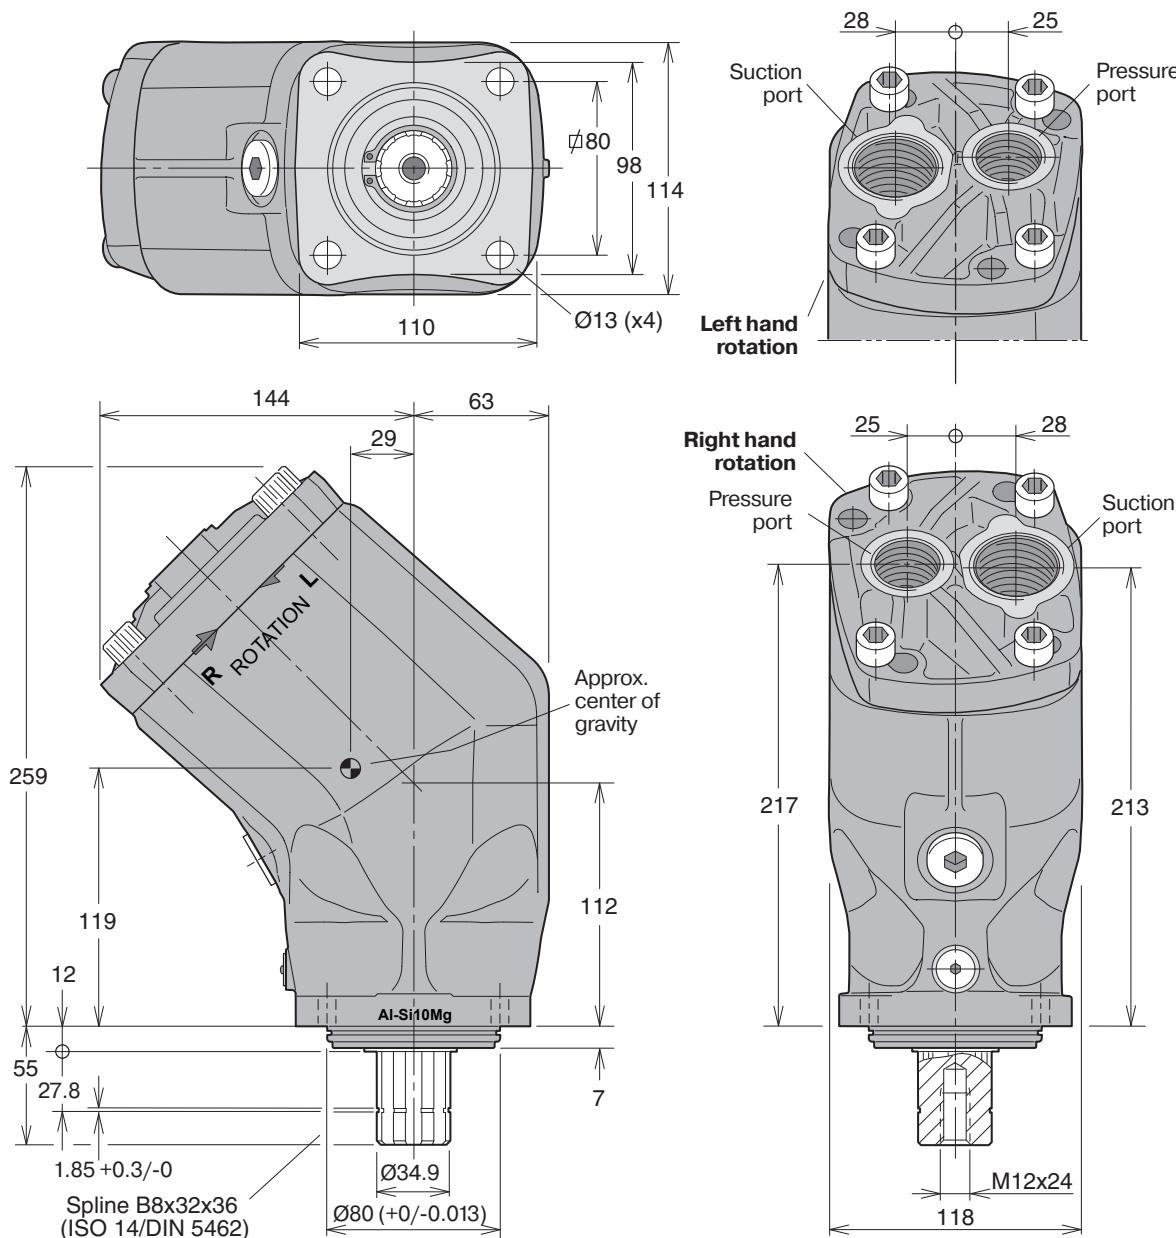

● Port size (all ports are BSP)

F1 frame size	Pressure port <sup>1)</sup>	Suction port
-81	1"	1 1/4"
-101	1"	1 1/4"

● Ordering code

Example: **F1 - 81 - RB**

F1 frame size **25, 41, 51, 61, 81 or 101**

Shaft rotation/port threads **RB Right hand/BSP**  
**LB Left hand/BSP**


Standard versions

Designation	Ordering no.
F1-81-RB	378 4080
F1-81-LB	378 4081
F1-101-RB	378 4100
F1-101-LB	378 4101

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

**F1 Pump**

**F1-SAE**

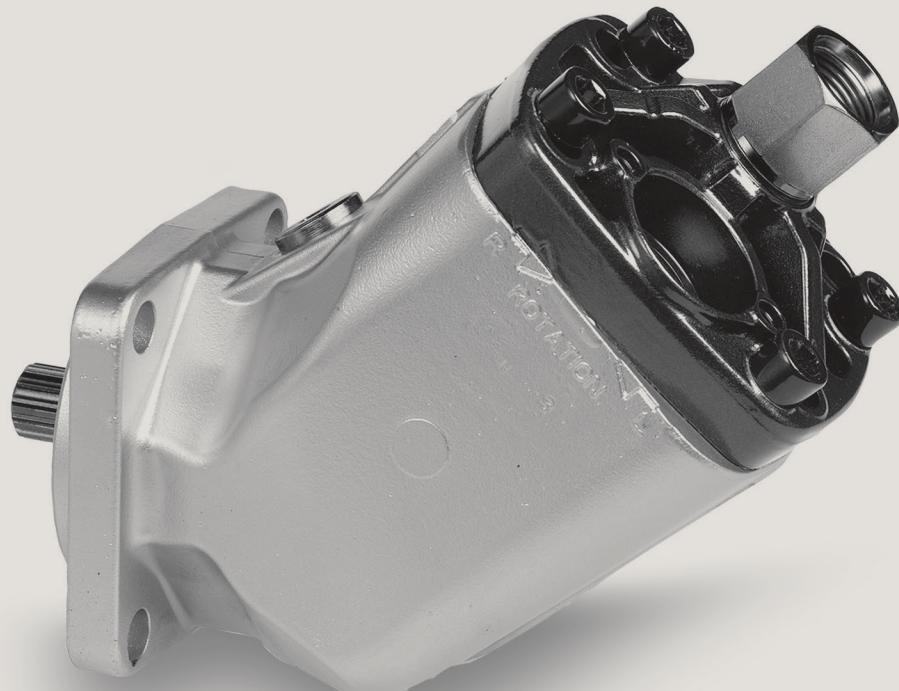

<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications.....	32
Pump cross section.....	32
Installation Dimensions, F1-25, -41, -51 and -61 (SAE) .....	33
Ordering code (SAE).....	33
Port size and standard versions.....	33
Suction fittings.....	62
Installation and start up.....	80


## Specifications

Frame size F1-	25	41	51	61
<b>Displacement</b> [cm <sup>3</sup> /rev]	25.6	40.9	51.1	59.5
[cu in/rev]	1.56	2.50	3.12	3.63
<b>Max flow</b> <sup>1)</sup> [l/min]	78	104	125	143
[gpm]	20.6	27.5	33.0	37.8
<b>Max operating pressure</b> [bar]	350	350	350	350
[psi]	5800	5800	5800	5800
<b>Shaft speed</b> [rpm]				
- short circuited pump (low press.)	3100	2700	2700	2700
- max selfpriming speed <sup>2)</sup> )	3050	2550	2450	2400
<b>Torque</b> <sup>1)</sup>				
at 350 bar [Nm]	142	227	284	331
at 5000 psi [lbf ft]	105	168	210	244
<b>Input power</b>				
[kW]	45	61	73	83
[hp]	60	82	98	111
<b>Weight</b> [kg]	8.5	8.5	8.5	8.5
[lbs]	18.7	18.7	18.7	18.7

<sup>1)</sup> Theoretical values


<sup>2)</sup> Valid at an inlet pressure of 1.0 bar/15 psi (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt)/150 SUS.

## Pump cross section

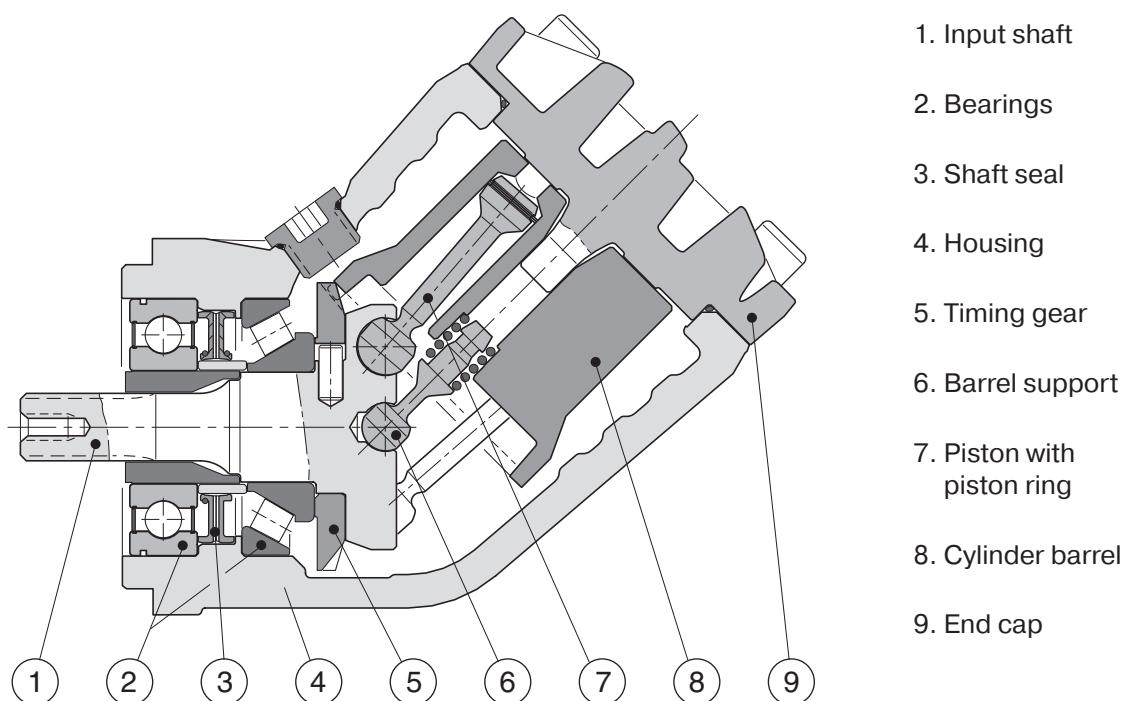

## Installation dimensions, F1-25, -41, -51 and -61 (SAE)

Dimensions in mm [inches]

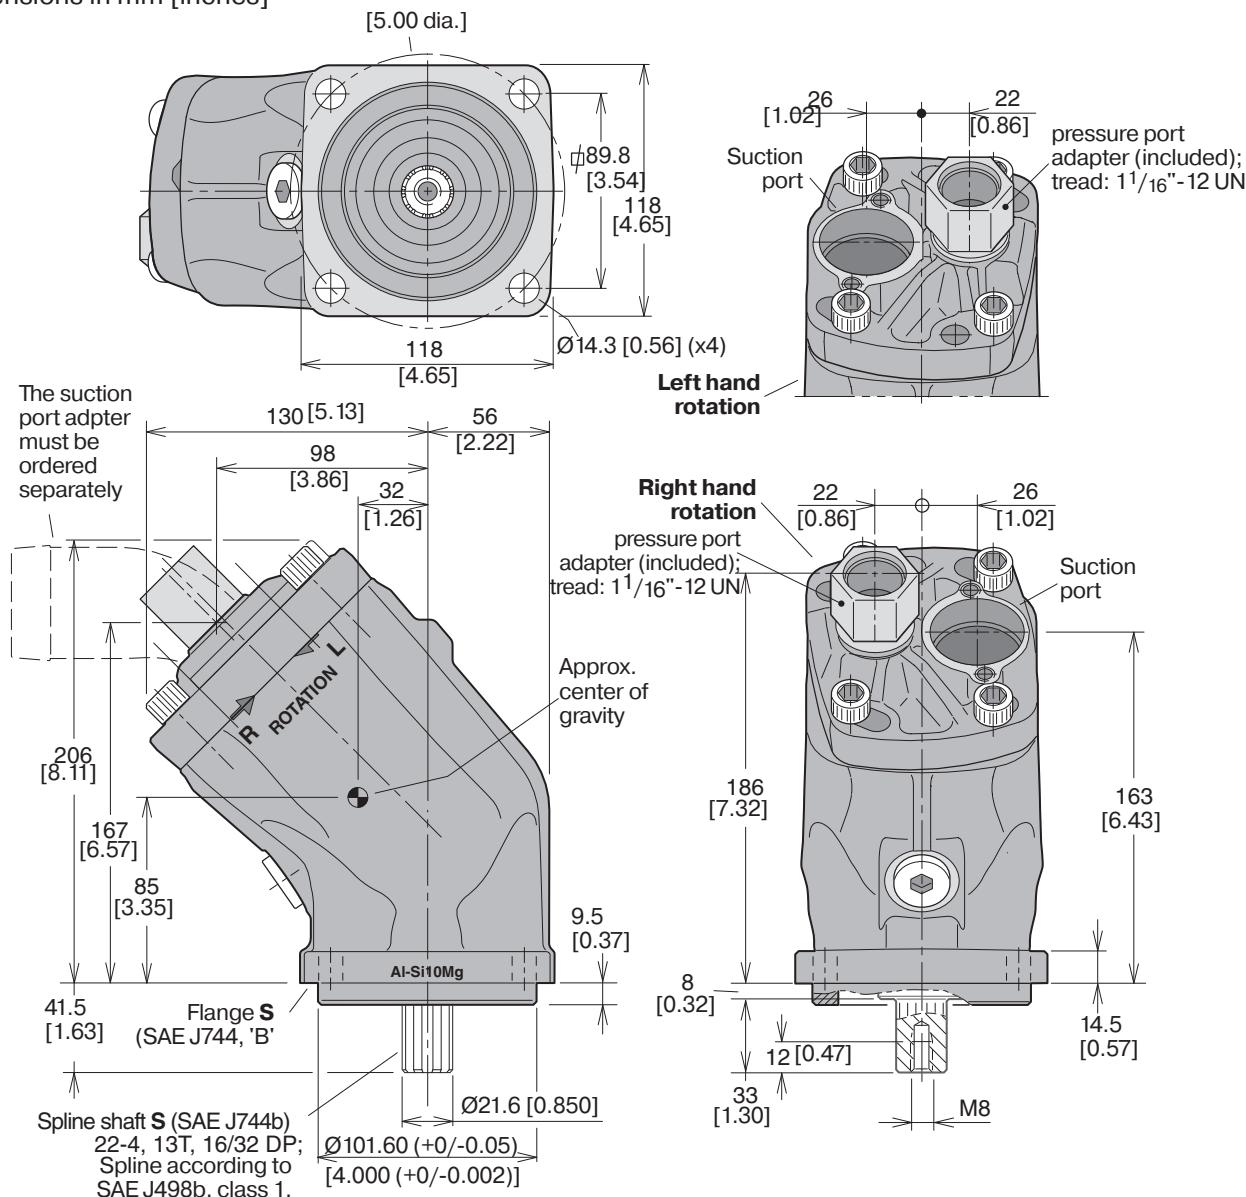

## Ordering code (SAE)

Example: **F1 - 61 - R U - S V - S**

F1 frame size **25, 41, 51 or 61**

Shaft rotation **R** Right hand  
**L** Left hand

Main port **U** SAE O-ring, UN threads

Shaft end **S** SAE spline "B" spline

Shaft seal **V** FPM

Mounting flange **S** SAE "B"

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

## Port size

F1 frame size	Pressure port <sup>1)</sup>
-25	1 <sup>1</sup> / <sub>16</sub> "-12 UN
-41	1 <sup>1</sup> / <sub>16</sub> "-12 UN
-51	1 <sup>1</sup> / <sub>16</sub> "-12 UN
-61	1 <sup>1</sup> / <sub>16</sub> "-12 UN

<sup>1)</sup> BSP-to-SAE adapter (included)

## Standard SAE versions

Designation	Ordering no.
F1-25-RU	378 1424
F1-25-LU	378 1425
F1-41-RU	378 1440
F1-41-LU	378 1441
F1-51-RU	378 1450
F1-51-LU	378 1451
F1-61-RU	378 1460
F1-61-LU	378 1461

**T1 Pump**



<b>Contents.....</b>	<b>Page</b>
Pump and Line selection .....	13
Specifications .....	35
Pump cross section .....	35
Installation Dimensions .....	36 – 37
Ordering code .....	36
Standard versions .....	36
Port size .....	36
Suction fittings .....	62
Installation and start up .....	80

## Specifications

Frame size T1-	81	121
<b>Displacement [cm<sup>3</sup>/rev]</b>	81.5	118.5
<b>Max flow<sup>1)</sup> [l/min]</b>	163	190
<b>Max operating pressure [bar]</b>		
continuous	250	250
intermittent <sup>3)</sup>	350	350
<b>Shaft speed [rpm]</b>		
- short circuited pump (low press.)	2300	2300
max speed <sup>2)</sup>	2000	1600
<b>Torque<sup>1)</sup> [Nm]</b>		
at 200 bar	258	376
at 350 bar	453	658
<b>Max input power<sup>3)</sup> [kW]</b>	95	111
<b>Weight [kg]</b>	8.5	12.5

<sup>1)</sup> Theoretical values


<sup>2)</sup> Valid at an inlet pressure of 1.0 bar (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).

<sup>3)</sup> Max 6 seconds in any one minute.

**NOTE:** For noise level information, contact Parker Hannifin.

## Pump cross section

(T1-121 shown)

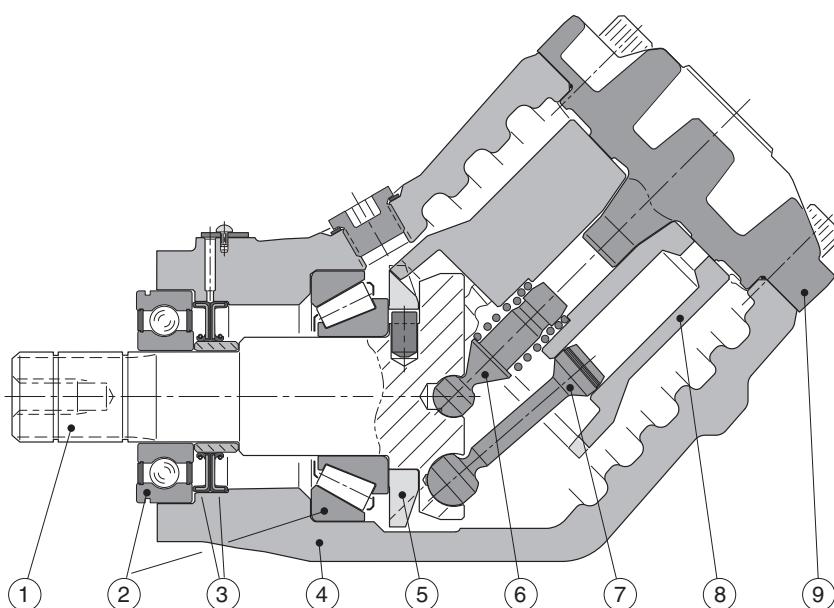


- 1. Input shaft
- 2. Bearings
- 3. Shaft seals

- 4. Housing
- 5. Timing gear
- 6. Barrel support

- 7. Piston with piston ring
- 8. Cylinder barrel
- 9. End cap

## T1-81

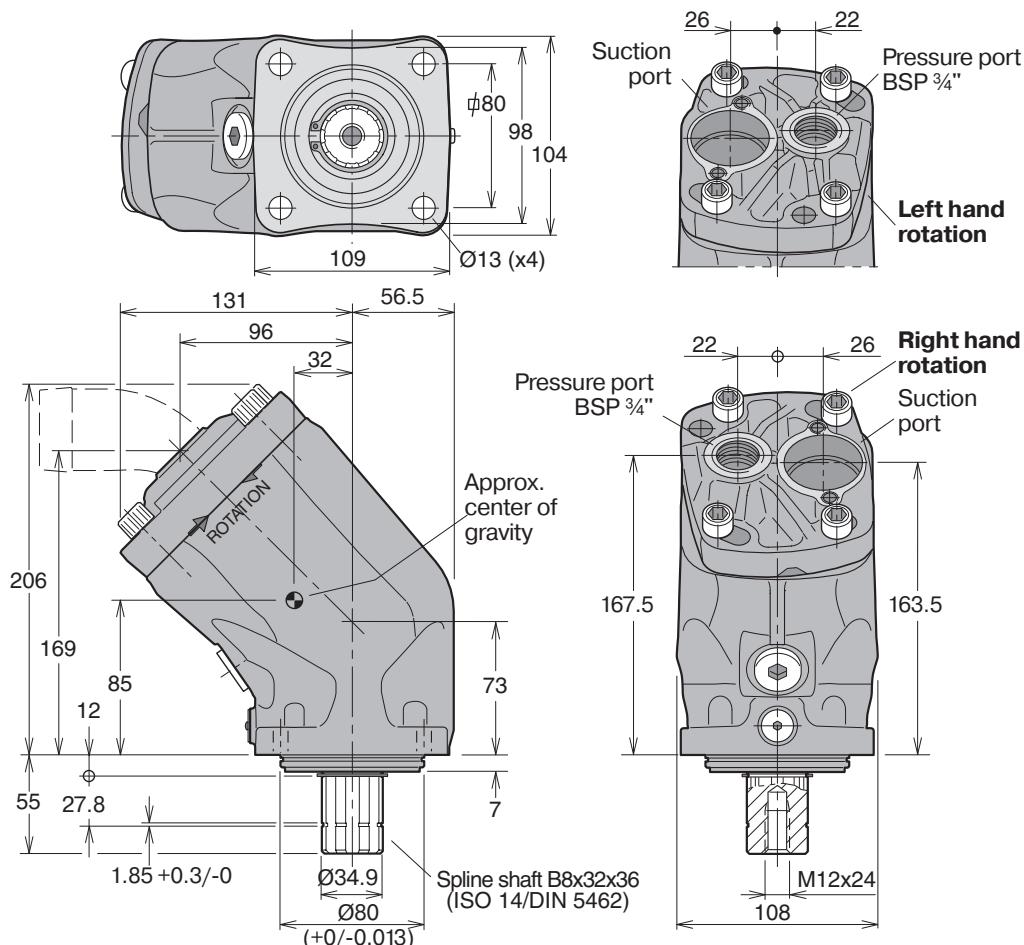

### Ordering code

Example:

**T1 - 81 - R**

T1 frame size  
**81** or **121**

Shaft rotation  
**R** Right hand  
**L** Left hand

### Port size

T1 frame size	Pressure port <sup>1)</sup>
-81	3/4"
-121	1"


<sup>1)</sup> BSP thread (fitting not included).

### Standard versions

Designation	Ordering no.
T1-81-R	378 2180
T1-81-L	378 2181
T1-121-R	378 2120
T1-121-L	378 2121

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

**T1-121**

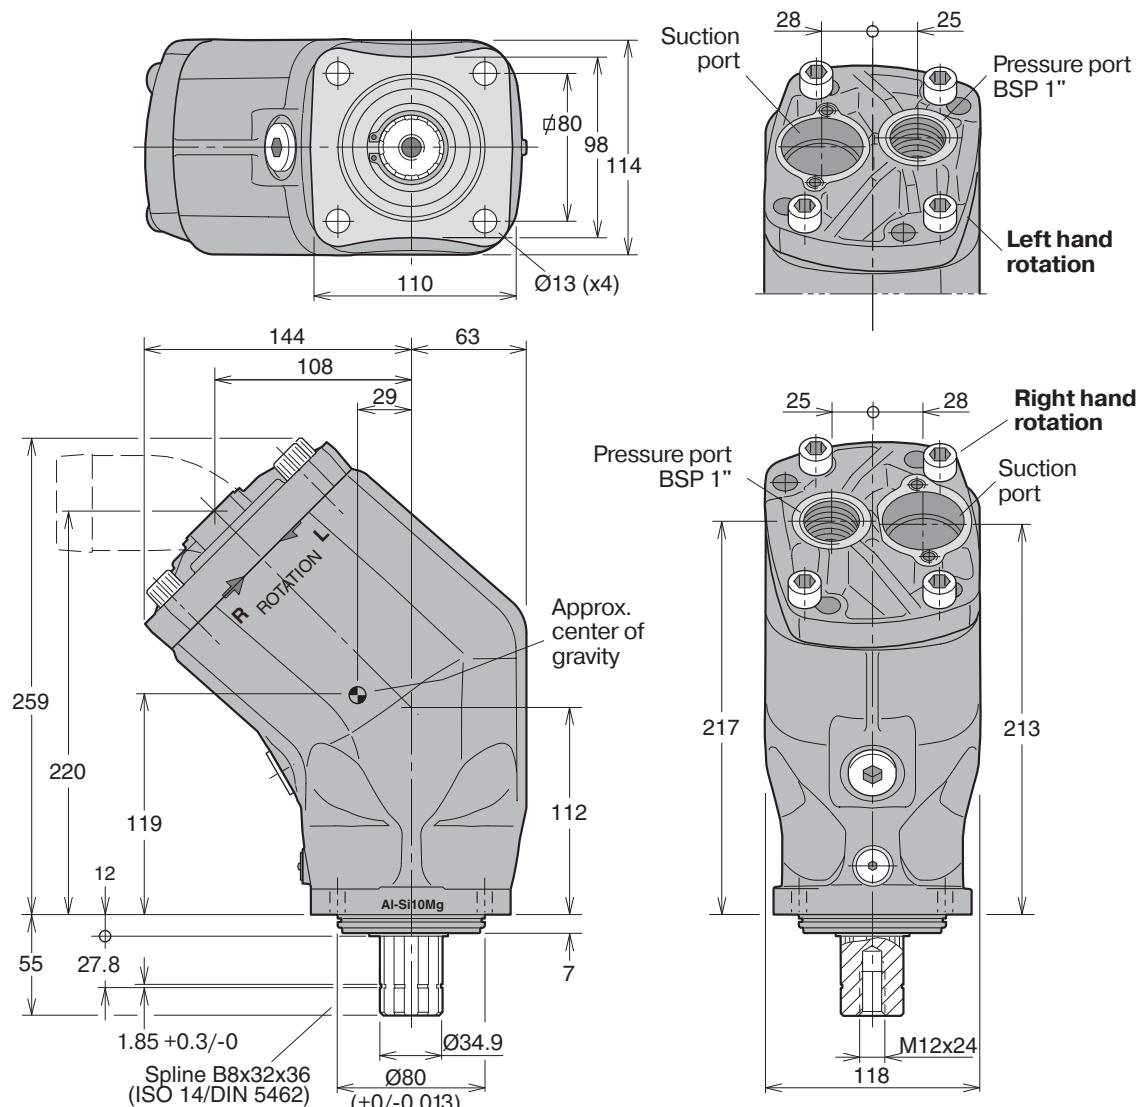

● **F1 Motor**



<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications .....	39
Ordering code .....	39
Installation.....	39
Port size .....	39
Standard versions .....	39
Suction fittings.....	62
Installation and start up .....	80

## Specifications

<b>Motor frame size F1-</b>	<b>25-M</b>	<b>41-M</b>	<b>51-M</b>	<b>61-M</b>	<b>81-M</b>	<b>101-M</b>	<b>121-M</b>
<b>Displacement [cm<sup>3</sup>/rev]</b>	25.6	40.9	51.1	59.5	81.6	102.9	118.5
<b>Max operating pressure [bar]</b>							
continuous	250	250	250	250	250	250	250
intermittent <sup>1)</sup>	350	350	350	350	350	350	350
<b>Max Shaft speed [rpm]</b>							
- continuous	2 300	2 000	1 800	1 700	1 500	1 400	1 300
- intermittent	3 000	2 700	2 400	2 200	2 000	1 800	1 700
<b>Torque (theor.) [Nm]</b>							
at 200 bar	81	130	162	189	259	327	376
at 350 bar	142	227	284	331	453	572	658
<b>Max output power [kW]</b>	45	64	72	76	95	108	117
<b>Weight [kg]</b>	8.5	8.5	8.5	8.5	12.5	12.5	12.5

<sup>1)</sup> Max 6 seconds in any one minute.

## Ordering code

Example: **F1 - 81 - M**

F1 Motor frame size \_\_\_\_\_  
**25, 41, 51, 61, 81, 101 or 121**


## Port size

<b>F1 motor frame size</b>	<b>Port size</b>
F1-25/41/51/61	3/4"
-81/101/121	1"


## Standard versions

<b>Designation</b>	<b>Ordering no.</b>
F1-25-M	378 1724
F1-41-M	378 1740
F1-51-M	378 1750
F1-61-M	378 1760
F1-81-M	378 1780
F1-101-M	378 1800
F1-121-M	378 4120


## Installation dimensions

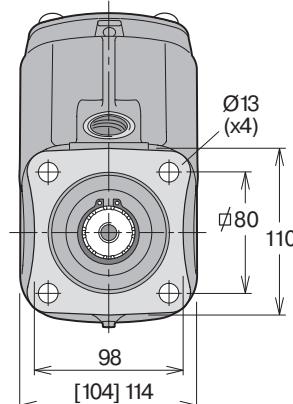

**NOTE:**  
Dimensions, in mm, are valid for all frame sizes, except those in brackets [ ] which are valid for F1-25/-41/-51/-61-M only.

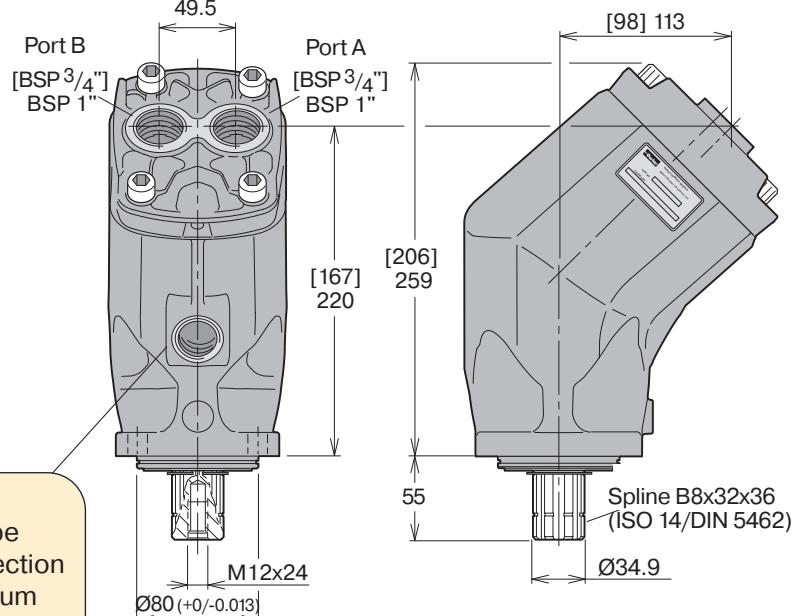

● **F2 Twin-flow Pump**

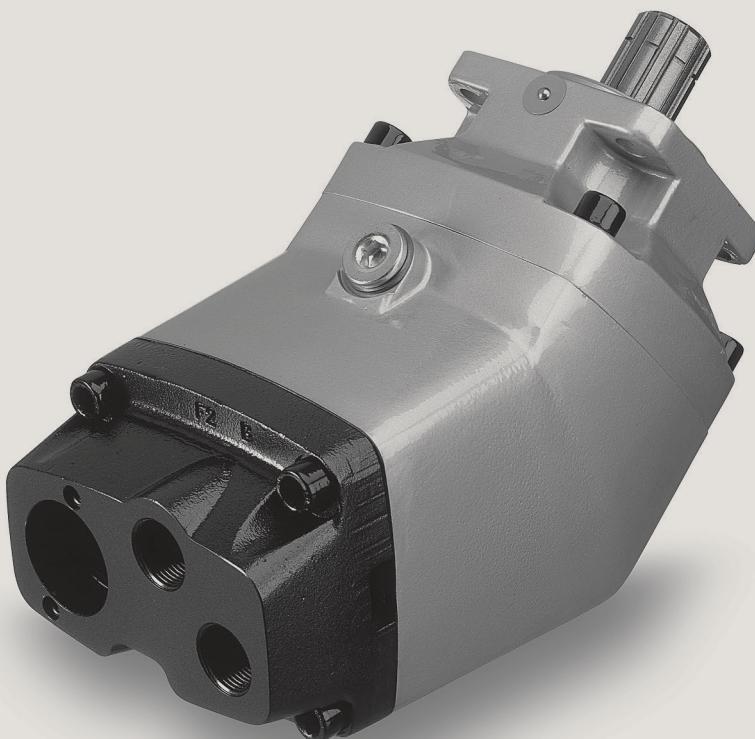


<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications .....	41
Installation Dimensions.....	42
Ordering code .....	42
Standard versions .....	42
Suction fittings.....	62
Installation and start up .....	80


## Specifications

Frame size F2-	42/42	53/53	55/28	70/35	70/70
<b>Displacement [cm<sup>3</sup>/rev]</b>					
Port A	43	55	55	69	68
Port B	41	52	28	36	68
<b>Max operating pressure [bar]</b>					
continuous	350	350	350	350	300
intermittent <sup>3)</sup>	400	400	400	400	350
<b>Mass moment of inertia J [kgm<sup>2</sup>]</b>	0.0092	0.0091	0.0091	0.0090	0.0104
<b>Max Shaft speed [rpm]</b>					
(unloaded pump; low pressure)	2550	2550	2550	2550	– <sup>3)</sup>
<b>Max selfpriming speed [rpm]</b>					
Ports A <sup>1)</sup> and B <sup>1)</sup> pressurised	1800	1800	1800	1800	1650
Port A <sup>1)</sup> unloaded, pressure in port B	2100	2100	2100	2100	2100
<b>Max input power<sup>2)</sup> [kW]</b>	100	127	100	126	131
<b>Weight [kg]</b>	19	19	19	19	19

### 'Left hand' and 'right hand' end caps

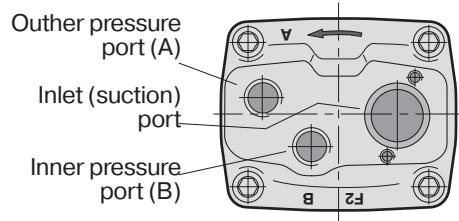

End cap for right hand rotating pump

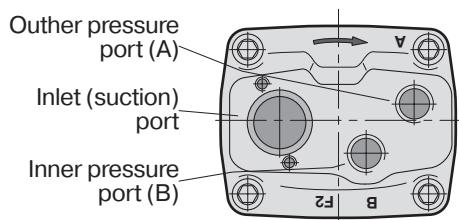

End cap for left hand rotating pump

<sup>1)</sup> Valid at an inlet pressure of 1.0 bar (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).

<sup>2)</sup> Max 6 seconds in any one minute.




<sup>3)</sup> Please contact Parker Hannifin for more information

## Flow vs. shaft speed (theoretical)

Pump speed [rpm]	800	1000	1200	1400	1600	1800	1900	2000	2100
<b>F2-53/53 flow [l/min]</b>									
Port A	43	54	65	76	86	97	-	-	-
Port B	42	52	62	73	83	94	99	104	109
Total (ports A + B)	85	106	127	149	169	191	-	-	-
	<b>Note: 42/42 values is 80 % of 53/53 values</b> <b>70/70 values is 130 % of 53/53 values</b>								
<b>F2-70/35 flow [l/min]</b>									
Port A	55	69	83	97	110	124	-	-	-
Port B	29	36	43	50	58	65	68	72	76
Total (ports A + B)	84	105	126	147	168	189	-	-	-
	<b>Note: 55/28 values is 80 % of 70/35 values</b>								

## Shaft torque vs. pressure (theoretical)

Pressure [bar]	150	200	250	300	350
<b>F2-53/53 torque [Nm]</b>					
Port A	129	171	214	257	300
Port B	124	165	206	248	289
Total (ports A + B)	253	336	420	505	589
	<b>Note: 42/42 values is 80 % of 53/53 values</b> <b>70/70 values is 130 % of 53/53 values</b>				
<b>F2-70/35 torque [Nm]</b>					
Port A	164	219	274	329	383
Port B	86	114	143	171	200
Total (ports A + B)	250	333	417	500	583
	<b>Note: 55/28 values is 80 % of 70/35 values</b>				

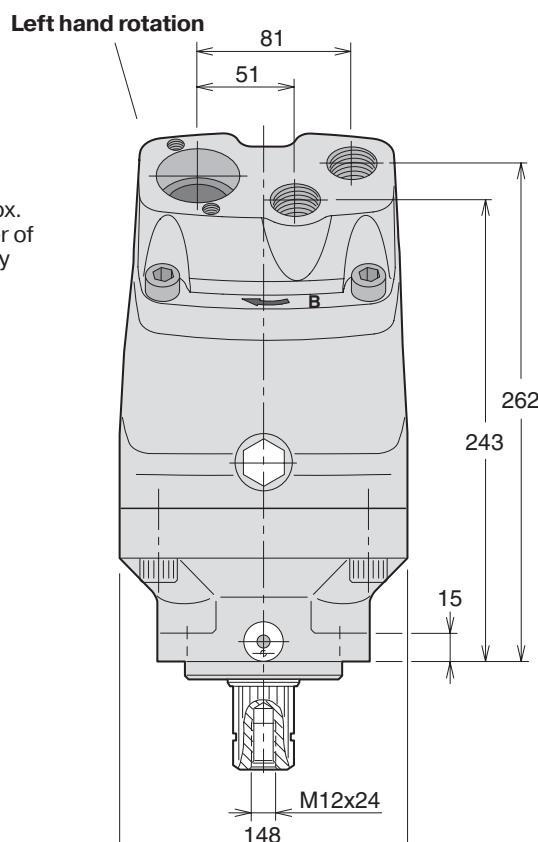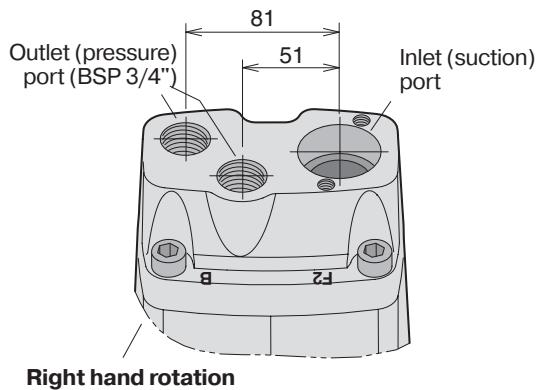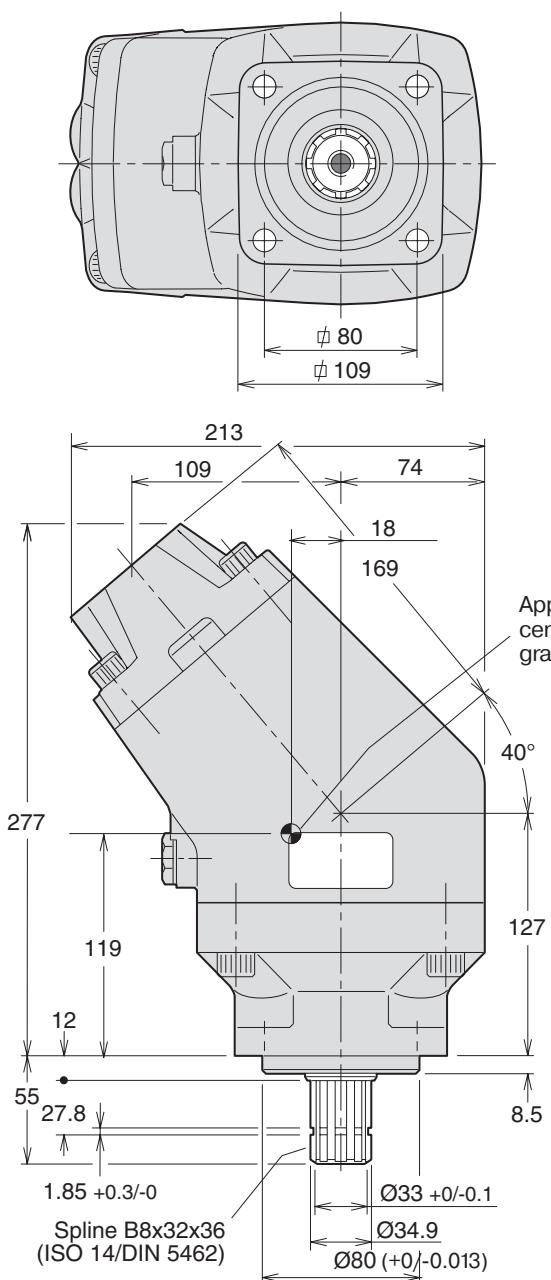

## Ordering code

Example: **F2 - 53/53 - L**

Frame size [cm<sup>3</sup>/rev] **42/42**  
**53/53**  
**55/28**  
**70/35**  
**70/70**

Direction of rotation **L** Left hand  
**R** Right hand

### NOTE:

- Before start-up, tighten the inspection port plug to 70 – 100 Nm.
- To change the direction of rotation, **the end cap must be replaced.**

### NOTE:

The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

## Standard versions

Designation	Ordering no.
F2-42/42-R	378 4042
F2-42/42-L	378 4043
F2-53/53-R	378 1453
F2-53/53-L	378 1454
F2-55/28-R	378 4128
F2-55/28-L	378 4129
F2-70/35-R	378 1470
F2-70/35-L	378 1471
F2-70/70-R	378 4070
F2-70/70-L	378 4071

## F3 Pump



<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications F3-81 and -101 .....	44
Pump cross section.....	44
BPV-F3 Bypass valve 12 or 24 VDC without manual override .....	44
Installation Dimensions, F3-81 and -101 .....	45 – 46
Port size .....	45 – 46
Standard versions .....	45 – 46
Block diagram engaging the F3 pump and Product Demand .....	47
Interface .....	47
suction fittings .....	62
Installation and start up .....	80

## F3-81 and -101, ISO Specifications

Frame size F3-	81	101
<b>Displacement [cm<sup>3</sup>/rev]</b>	81.6	102.9
<b>Max flow<sup>1)</sup> [l/min]</b>	180	216
<b>Max operating pressure [bar]</b>	400	400
<b>Shaft speed [rpm]</b>		
- short circuited pump (low press.)	2300	2300
- max selfpriming speed <sup>2)</sup>	2200	2100
<b>Torque<sup>1)</sup> [Nm]</b>	518	653
<b>Max input power<sup>3)</sup> [kW]</b>	105	126
<b>Weight [kg]</b>	20.3	20.1

<sup>1)</sup> Theoretical values

<sup>2)</sup> Valid at an inlet pressure of 1.0 bar (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).

<sup>3)</sup> Max 6 seconds in any one minute.

**NOTE:** For noise level information, contact Parker Hannifin.


## BPV-F3 Bypass valve 12 or 24 VDC Without manual override

Bypass valve, type	BPV-F3
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage	12 or 24 VDC,
Power requirement	14 W
Operating mode	Activated solenoid: Check valve closed

Accessories / Spare Parts see page 64

- As the BPV valve is symmetrical, it can be 'turned 180°' to prevent interference with chassis components; it can be utilised for either left hand or right hand pumps.
- The valve function must only be activated or released (by means of the 24 VDC solenoid) at no-load (below 20 bar) system pressure.

## Pump cross section

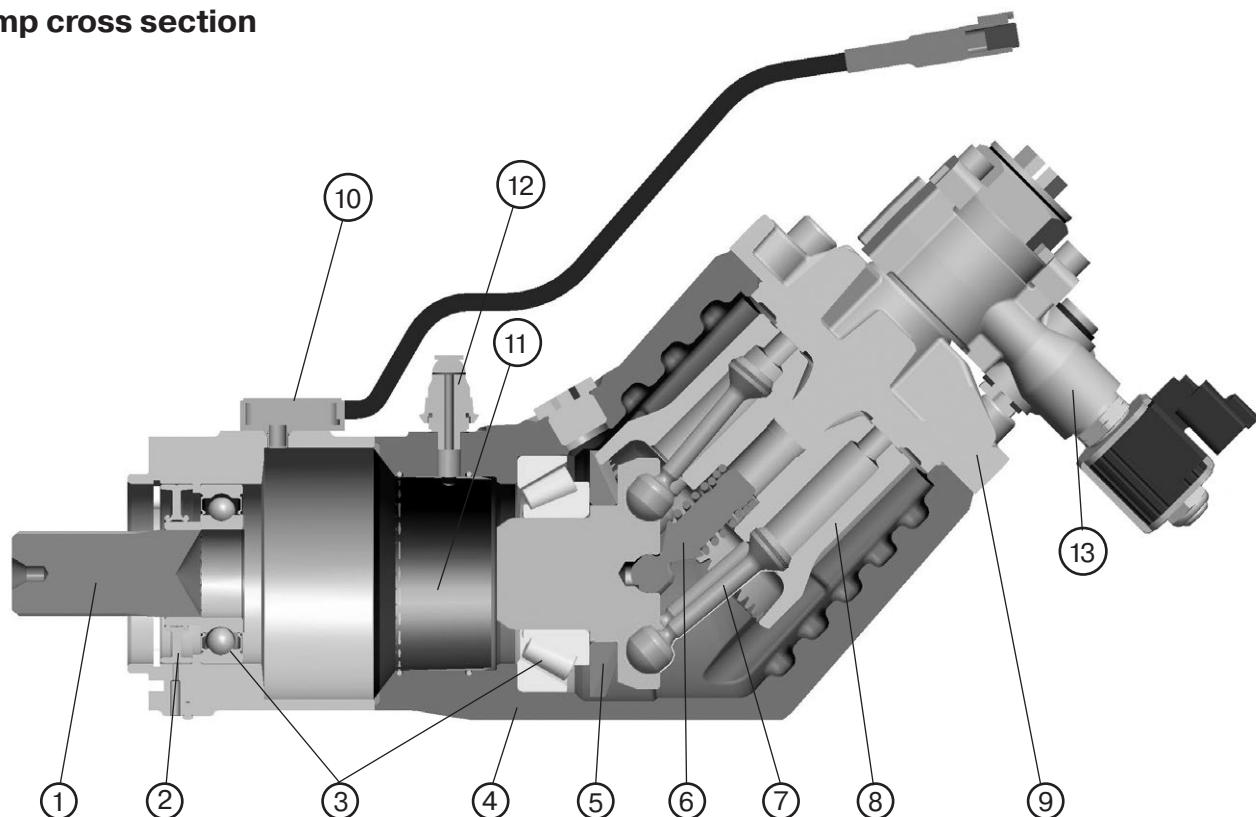

1. Input shaft  
2. Shaft seals  
3. Bearings  
4. Housing





5. Timing gear  
6. Barrel support  
7. Piston with piston ring  
8. Cylinder barrel

9. End cap  
10. Position sensor  
11. Air cylinder  
12. Air fitting

13. Bypass Valve

### F3-81 and -101

Right hand rotation

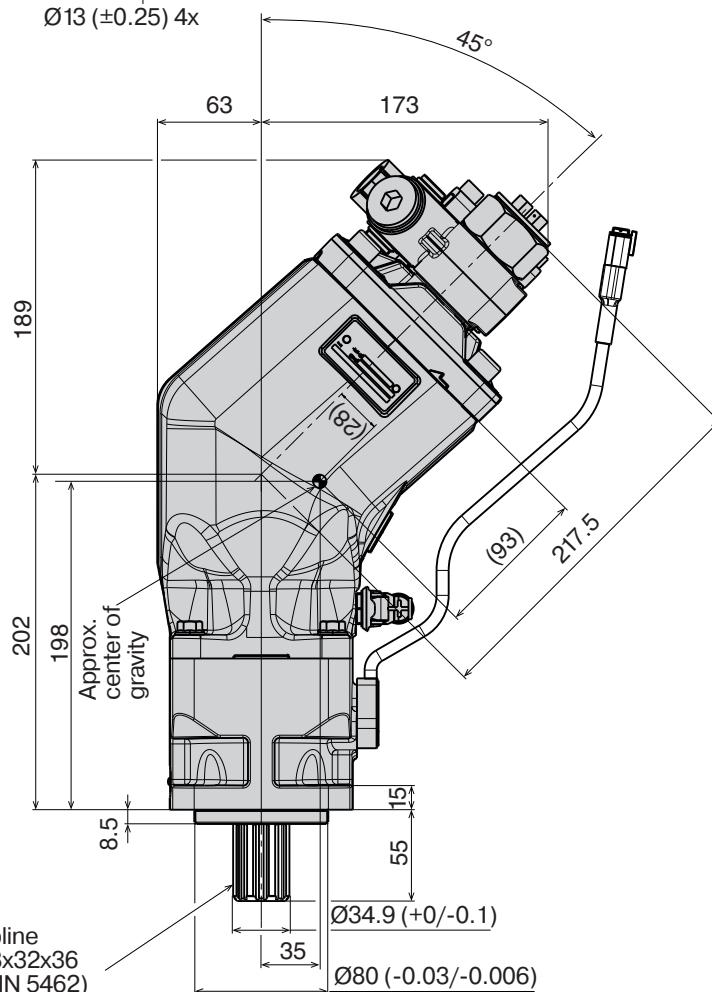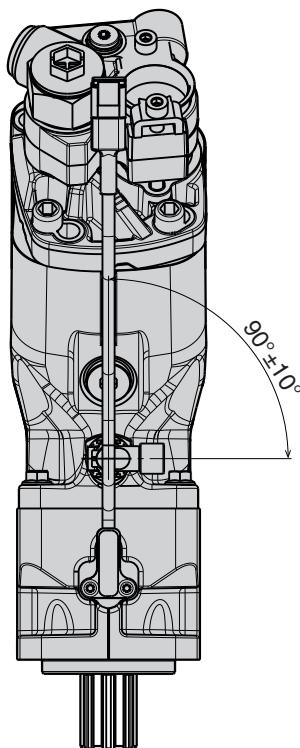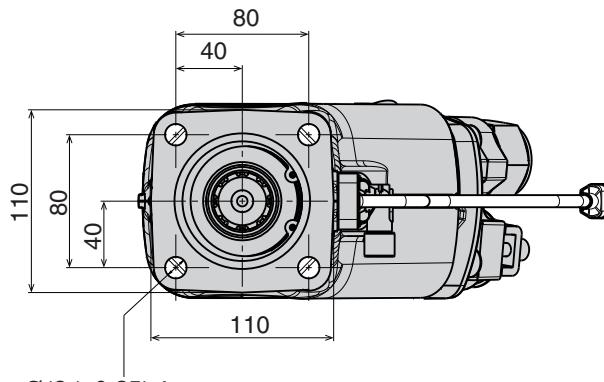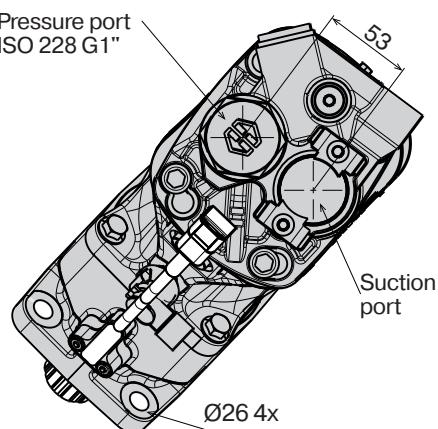

### Port size

F3 frame size	Pressure port <sup>1)</sup>
-81	1"
-121	1"





<sup>1)</sup> BSP thread (fitting not included).

### Standard versions

Designation	Ordering no. 24 VDC	Ordering no. 12 VDC
F3-81-R-	372 0091	3720382
F3-101-R-	372 0093	3720384

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

● **F3-81 and -101**  
Left hand rotation

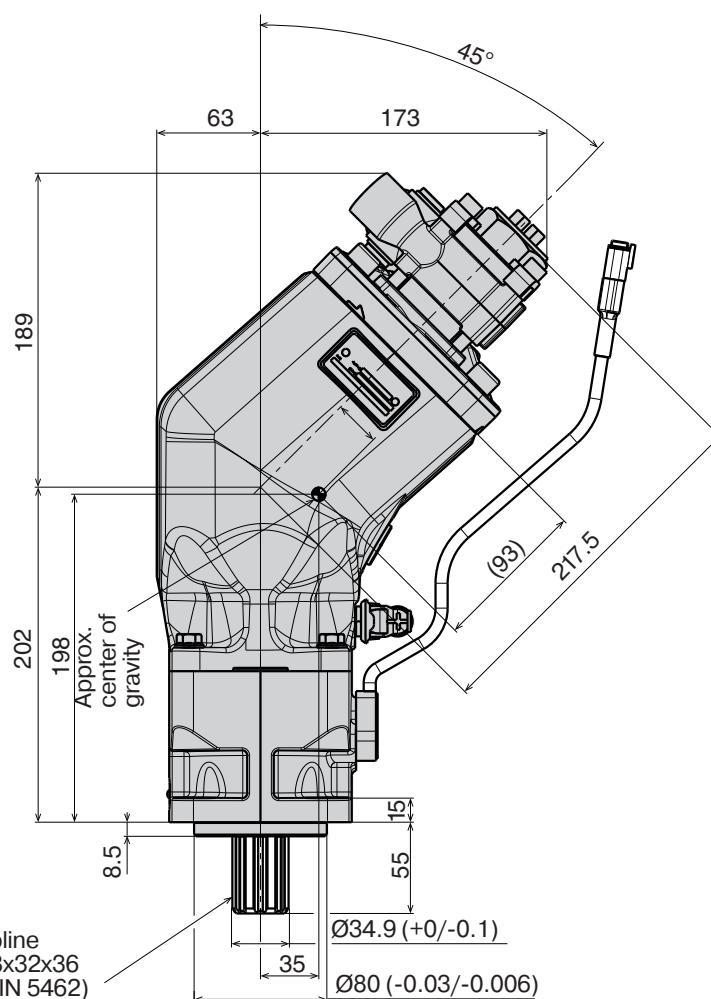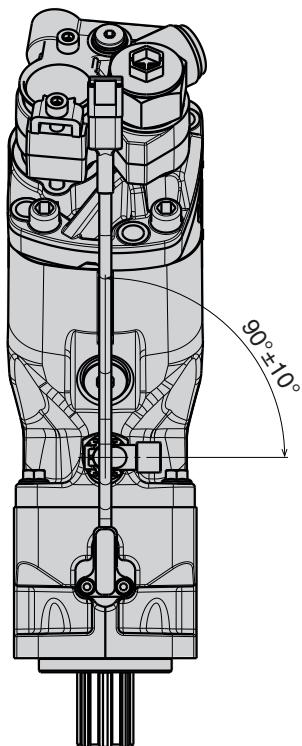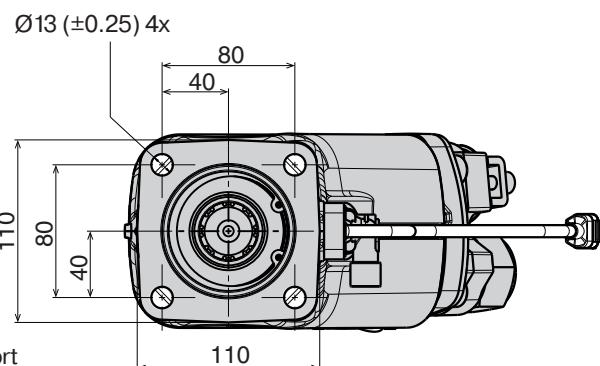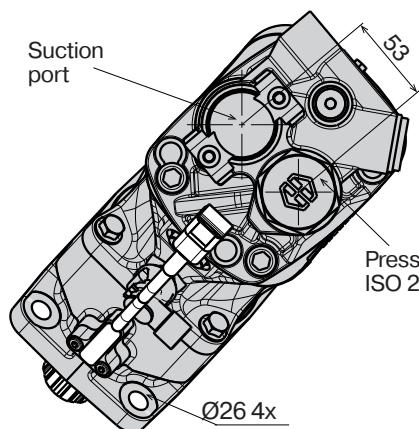

● **Port size**

F3 frame size	Pressure port <sup>1)</sup>
-81	1"
-121	1"


<sup>1)</sup> BSP thread (fitting not included).

**Standard versions**

Designation	Ordering no. 24 VDC	Ordering no. 12 VDC
F3-81-L-	372 0092	3720383
F3-101-L-	372 0094	3720385

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

## Block diagram engaging the F3 pump

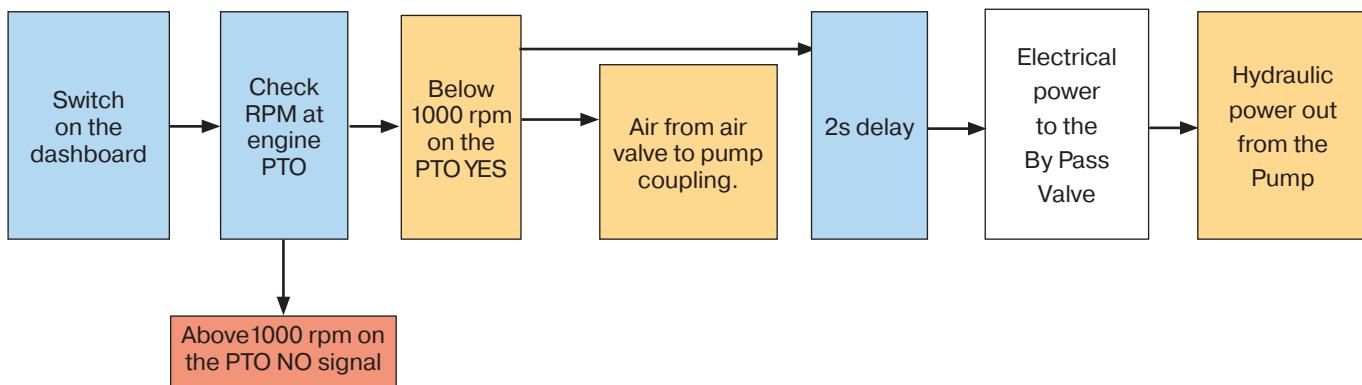


## Product Demand


- Max pump shaft speed before the F3 can be engaged is 1000 rpm. (verify engine PTO speed)
- Air pressure > 5 bar before the clutch can start to engage the pump

- \* For electrical diagram, contact Parker Hannifin
- \* Check the bending torque limit on the PTO mount.  
F3 - Bending torque 33 Nm

## Interface

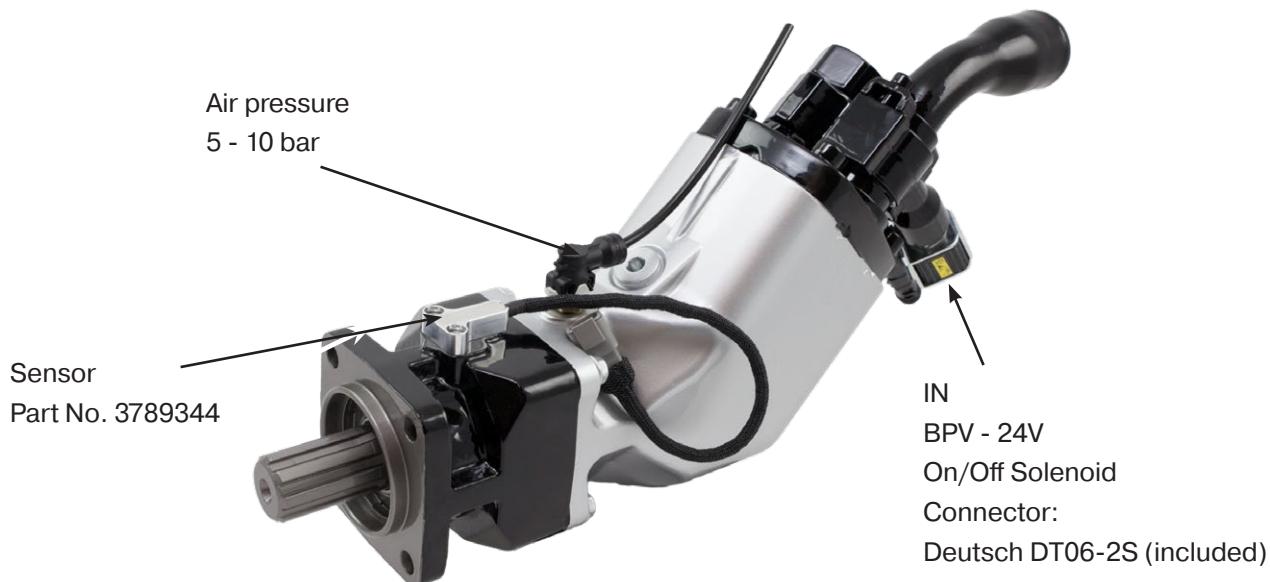

## **F4 Twin-flow Pump**

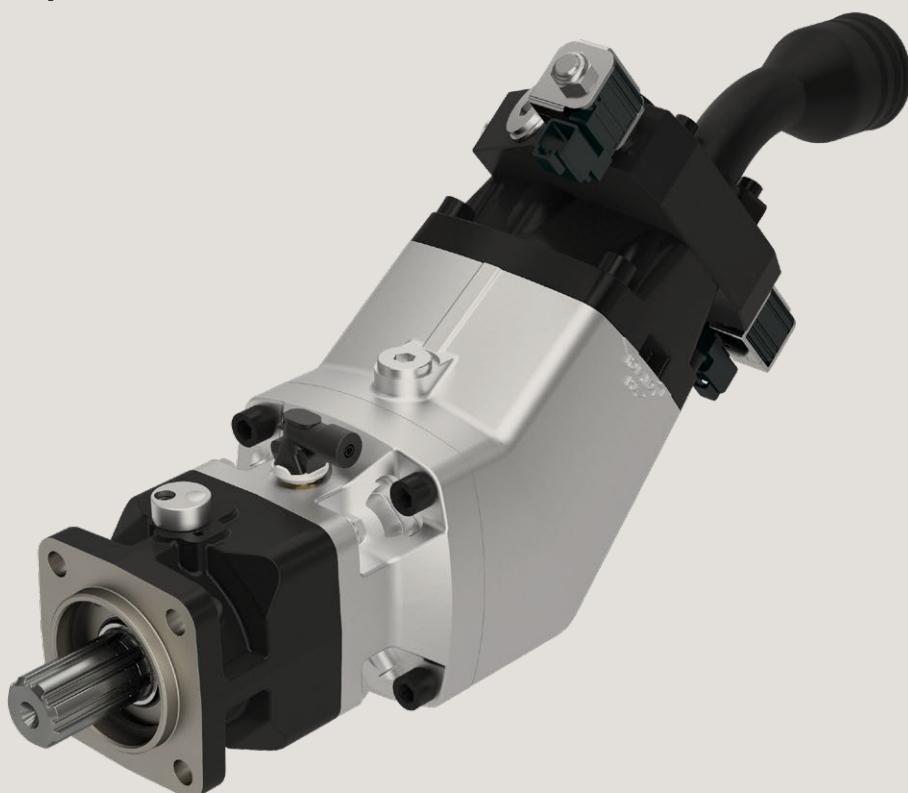

<b>Contents.....</b>	<b>Page</b>
Pump and Line selection.....	13
Specifications .....	49
Pump cross section.....	50
Installation Dimensions and Ordering Code .....	51
Block diagram engaging the F4 pump and Product Demand .....	52
Interface .....	52
suction fittings .....	62
Installation and start up .....	80

## Specifications

Frame size F4-	53/53	70/35
<b>Displacement [cm<sup>3</sup>/rev]</b>		
Port A	55	69
Port B	52	36
<b>Max operating pressure [bar]</b>		
continuous	350	350
intermittent <sup>2)</sup>	400	400
<b>Mass moment of inertia J [kgm<sup>2</sup>]</b>	0.0091	0.0090
<b>Max Shaft speed [rpm]</b>		
(unloaded pump; low pressure)	2550	2550
<b>Max selfpriming speed [rpm]</b>		
Ports A <sup>1)</sup> and B <sup>1)</sup> pressurised	1800	1800
Port A <sup>1)</sup> unloaded, pressure in port B	2100	2100
<b>Max input power<sup>2)</sup> [kW]</b>	127	110
<b>Weight [kg]</b>	29.5	29.5

<sup>1)</sup> Valid at an inlet pressure of 1.0 bar (abs.) when operating on mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).

<sup>2)</sup> Max 6 seconds in any one minute.

## BPV-F4 Bypass valve 12 or 24 VDC Without manual override

Bypass valve, type	BPV-F4
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage	24 VDC,
Power requirement	14 W
Operating mode	Activated solenoid: Check valve closed

Accessories / Spare Parts see page 64.

- It can be utilised for either left hand or right hand pumps.
- The valve function must only be activated or released (by means of the 24 VDC solenoid) at no-load (below 20 bar) system pressure.


## Flow vs. shaft speed (theoretical)

Pump speed [rpm]	800	1000	1200	1400	1600	1800	1900	2000	2100
<b>F4-53/53 flow [l/min]</b>									
Port A	43	54	65	76	86	97	-	-	-
Port B	42	52	62	73	83	94	99	104	109
Total (ports A + B)	85	106	127	149	169	191	-	-	-
<b>F4-70/35 flow [l/min]</b>									
Port A	55	69	83	97	110	124	-	-	-
Port B	29	36	43	50	58	65	68	72	76
Total (ports A + B)	84	105	126	147	168	189	-	-	-

## Shaft torque vs. pressure (theoretical)


Pressure [bar]	150	200	250	300	350
<b>F4-53/53 torque [Nm]</b>					
Port A	129	171	214	257	300
Port B	124	165	206	248	289
Total (ports A + B)	253	336	420	505	589
<b>F4-70/35 torque [Nm]</b>					
Port A	164	219	274	329	383
Port B	86	114	143	171	200
Total (ports A + B)	250	333	417	500	583

Pump cross section

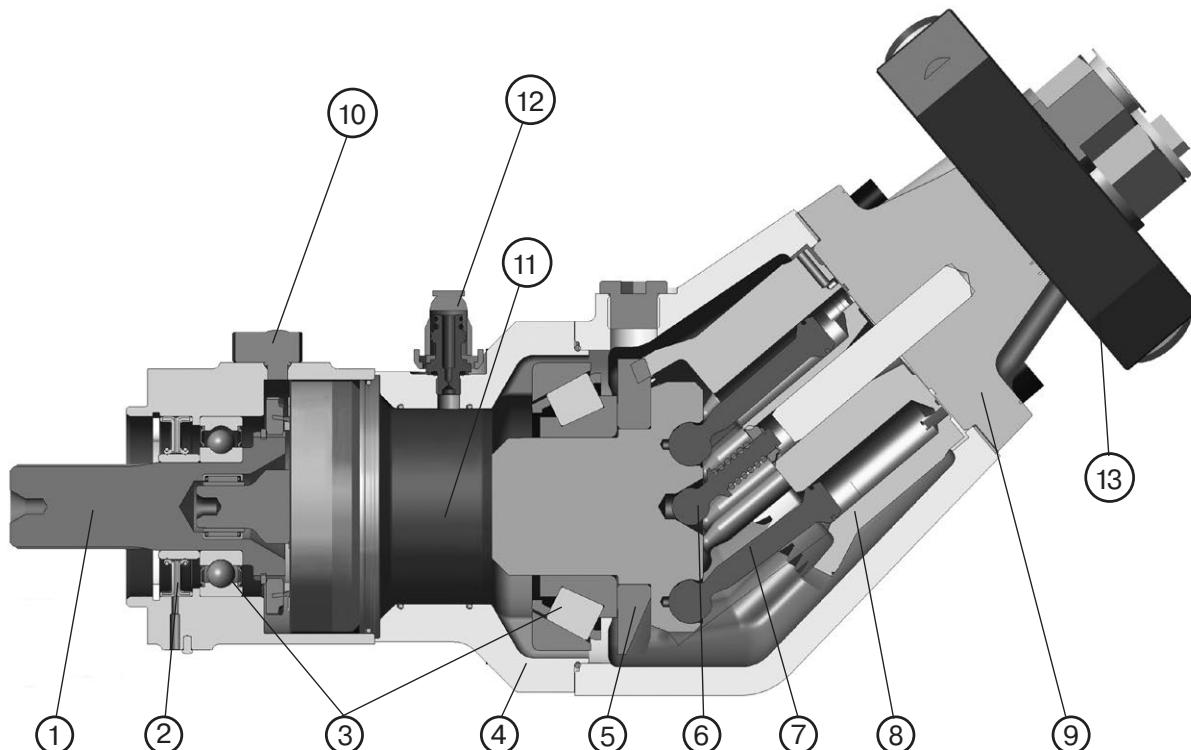

- |                |                            |                  |                  |
|----------------|----------------------------|------------------|------------------|
| 1. Input shaft | 5. Timing gear             | 9. End cap       | 13. Bypass Valve |
| 2. Shaft seals | 6. Barrel support          | 10. Magnet       |                  |
| 3. Bearings    | 7. Piston with piston ring | 11. Air cylinder |                  |
| 4. Housing     | 8. Cylinder barrel         | 12. Air fitting  |                  |

F4-53/53 and -70/35

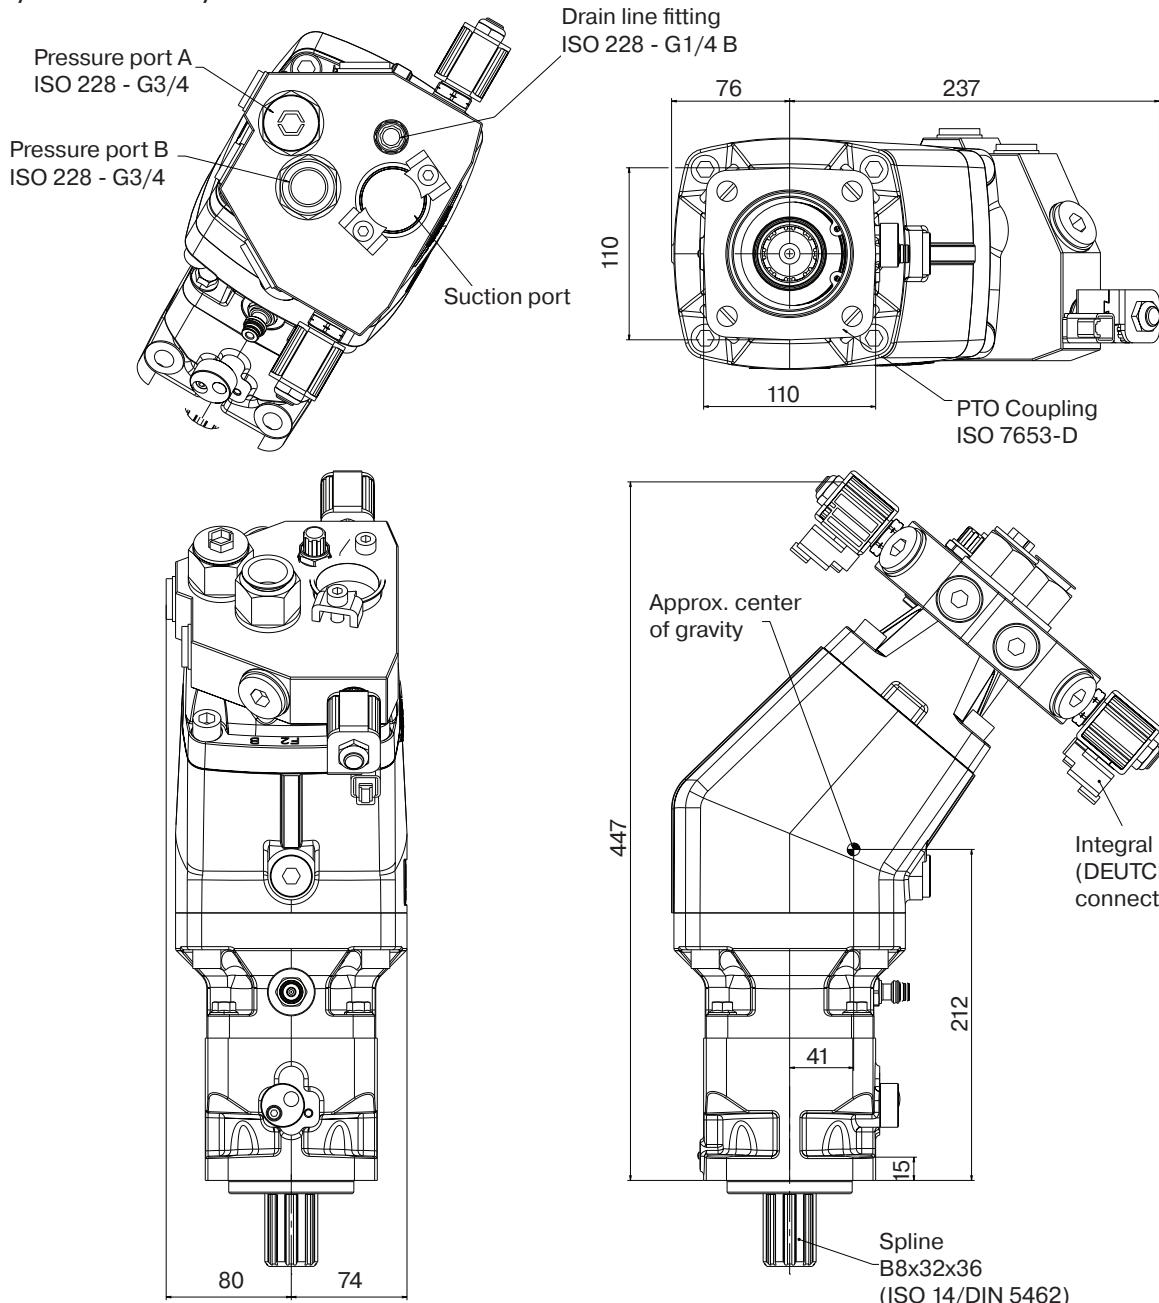

Ordering code

Example: **F4 - 53/53 - L**

Frame size [cm<sup>3</sup>/rev] **53/53**  
**70/35**

Direction of rotation  
**L** Left hand  
**R** Right hand

**NOTE:**

- Before start-up, tighten the inspection port plug to 70 – 100 Nm.
- To change the direction of rotation, **the end cap must be replaced.**


**NOTE:**

The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

Standard versions

Designation	Ordering no.
F4-53/53-L	3724263
F4-53/53-R	3724262
F4-70/35-L	3724264
F4-70/35-R	3724153

## Block diagram engaging the F4 pump

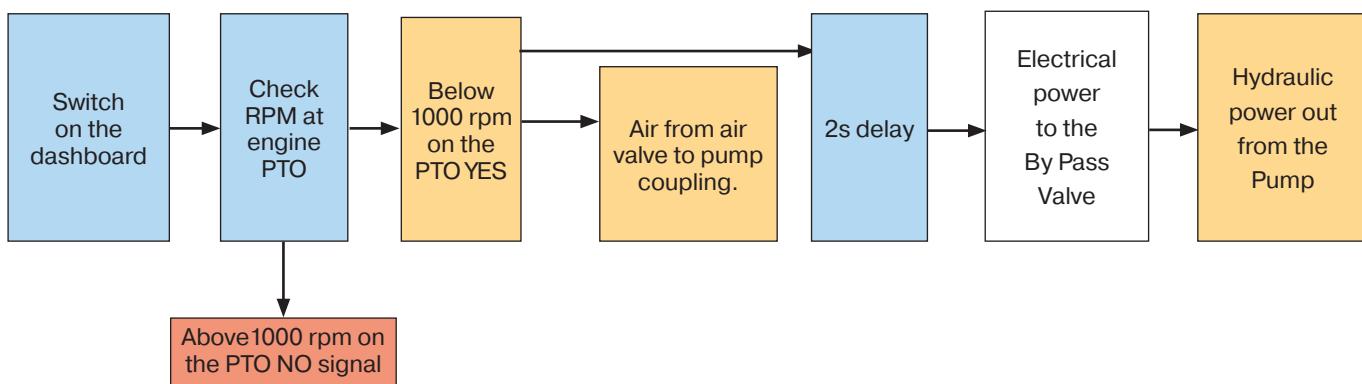


## Product Demand

- Max pump shaft speed before the F4 can be engaged is 1000 rpm. (verify engine PTO speed)
- Air pressure > 5 bar before the clutch can start to engage the pump


- \* For electrical diagram, contact Parker Hannifin
- \* Check the bending torque limit on the PTO mount.  
F4 - Bending torque 60 Nm

## Interface

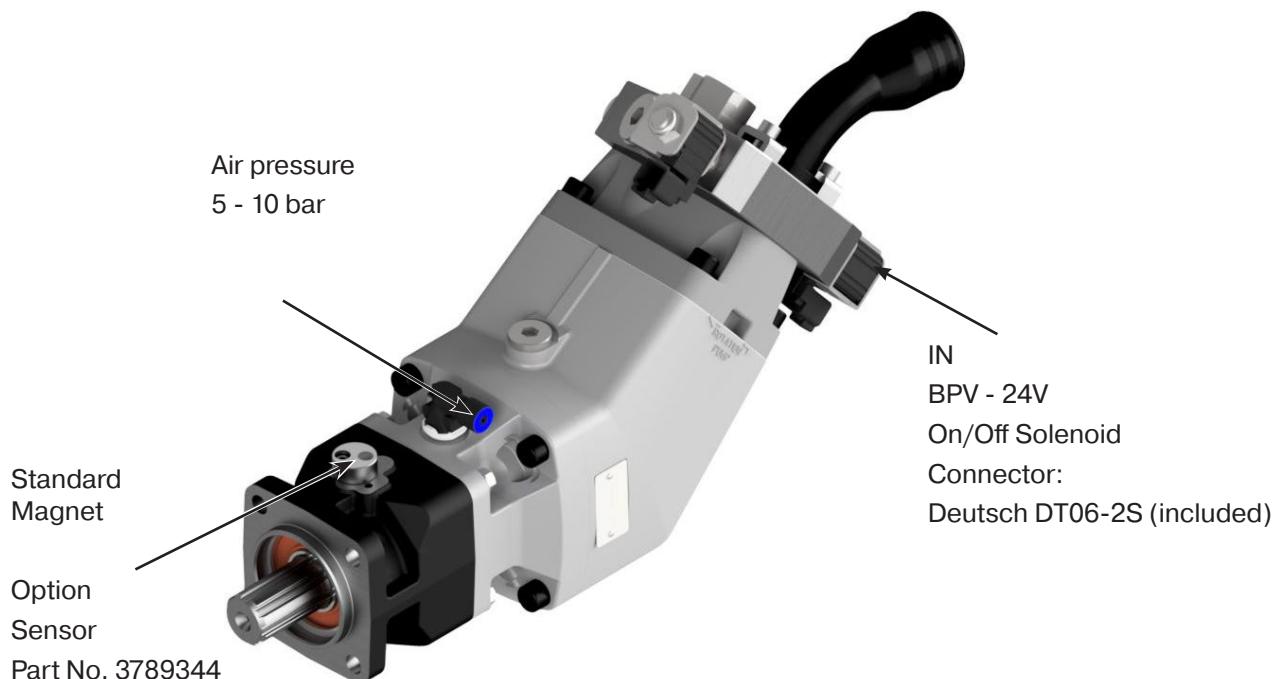



● **VP1 Pump**

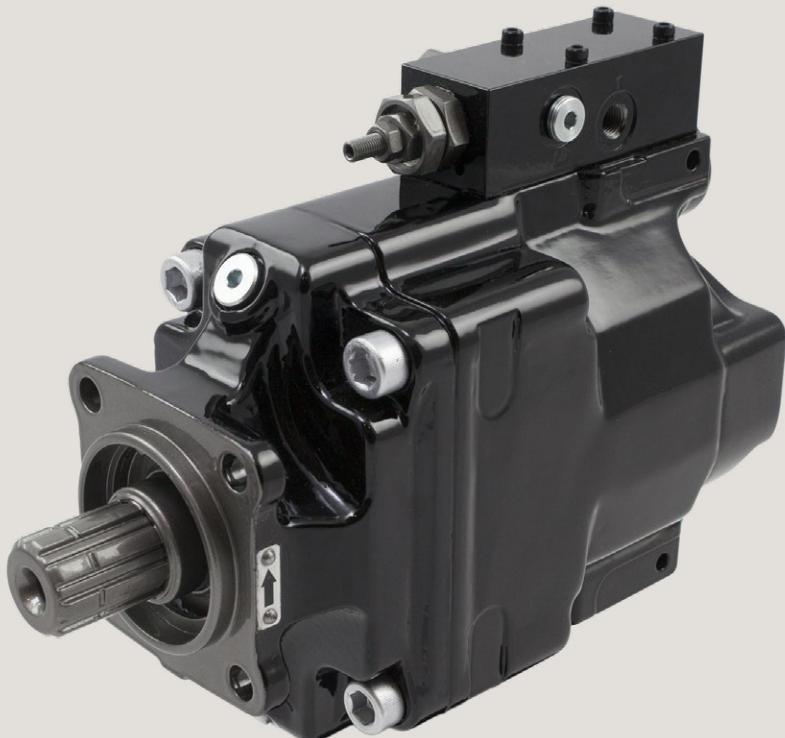

<b>Contents.....</b>	<b>Page</b>
Pump and Line selection .....	13
Specifications .....	55
VP1-045/-060/-075 cross section .....	55
Installation Dimensions, VP1-045, -060 and -075 .....	56
LS valve block VP1-045/-060/-075 .....	57
Through-shaft coupling VP1-045/-060/-075 .....	57
VP1-095/-110/-130 cross section .....	58
LS control (for VP1-095/-110/-130) .....	58
Installation Dimensions, VP1-095/-110/-130 .....	59
System Information .....	60
Ordering information .....	60
VP1 in load sensing systems and Systems comparison .....	60
LS load sensing control function and LS control adjustments .....	61
Suction fittings .....	62
Installation and start-up for VP1 .....	82

## Specifications

Frame size VP1-	045	060	075	095	110	130
<b>Displacement [cm<sup>3</sup>/rev]</b>	45	60	75	95	110	128
<b>Max operating pressure [bar]</b>						
continuous	350	350	350	400	400	400
intermittent <sup>1)</sup>	400	400	400	420	420	420
<b>Mass moment of inertia J [kgm<sup>2</sup>]</b>	0.00606	0.00606	0.00606	0.00681	0.00690	0.00690
<b>Shaft speed<sup>2)</sup> [rpm]</b>						
- short circuited pump (low press.)	3000	3000	3000	3000	3000	3000
- max selfpriming speed <sup>2)</sup>	3000	2700	2500	2300 <sup>3</sup>	2200 <sup>3</sup>	2100 <sup>3</sup>
<b>Control type</b>	LS					
<b>Shaft end spline</b>	DIN 5462					
<b>Mounting flange</b>	ISO 7653-1985					
<b>Weight (with control) [kg]</b>	27					


<sup>1)</sup> Max 6 seconds in any one minute.

<sup>2)</sup> At an inlet pressure of 1.0 bar (abs.) with mineral oil at a viscosity of 30 mm<sup>2</sup>/s (cSt).


<sup>3)</sup> Valid with 3" inlet (suction) line

## VP1-045/-060/-075 cross section

1. Inlet port
2. 'Top' purge plug
3. Return spring
4. Control
5. Setting piston (one of two)
6. Swash plate
7. Bearing shell
8. End cover
9. Spline (for mounting an auxiliary pump)
10. Plain bearing
11. Hold-down plunger
12. Valve plate
13. Cylinder barrel
14. Barrel housing
15. 'Bottom' purge plug
16. Piston with piston shoe
17. Retainer plate
18. Bearing housing
19. Roller bearing
20. Shaft seals with carrier
21. Input shaft

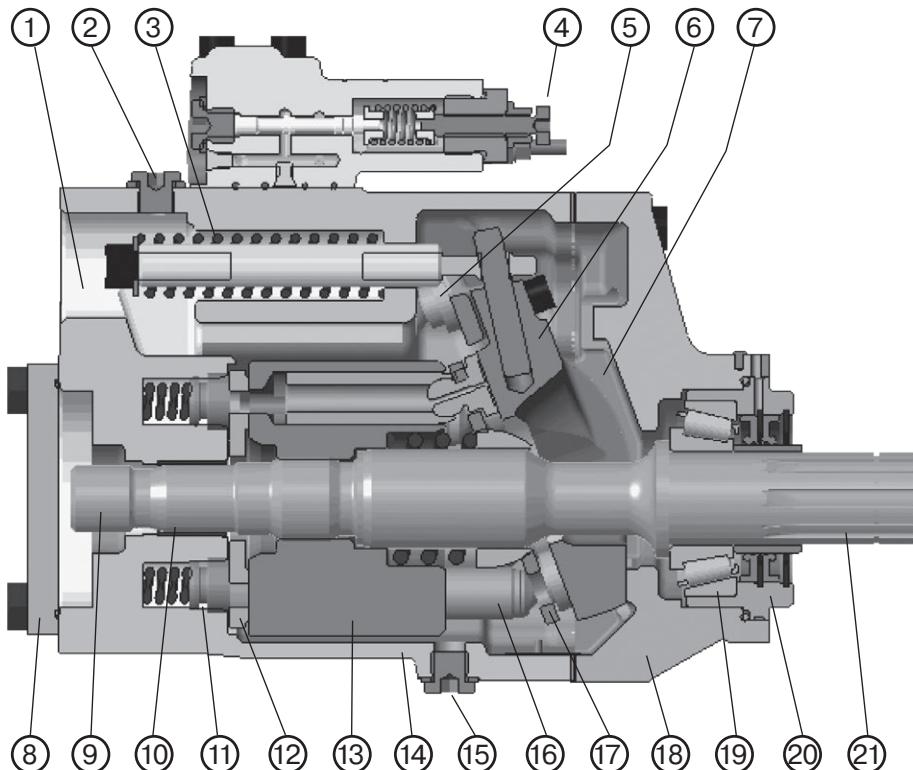

## Installation Dimensions VP1-045, -60 and -075

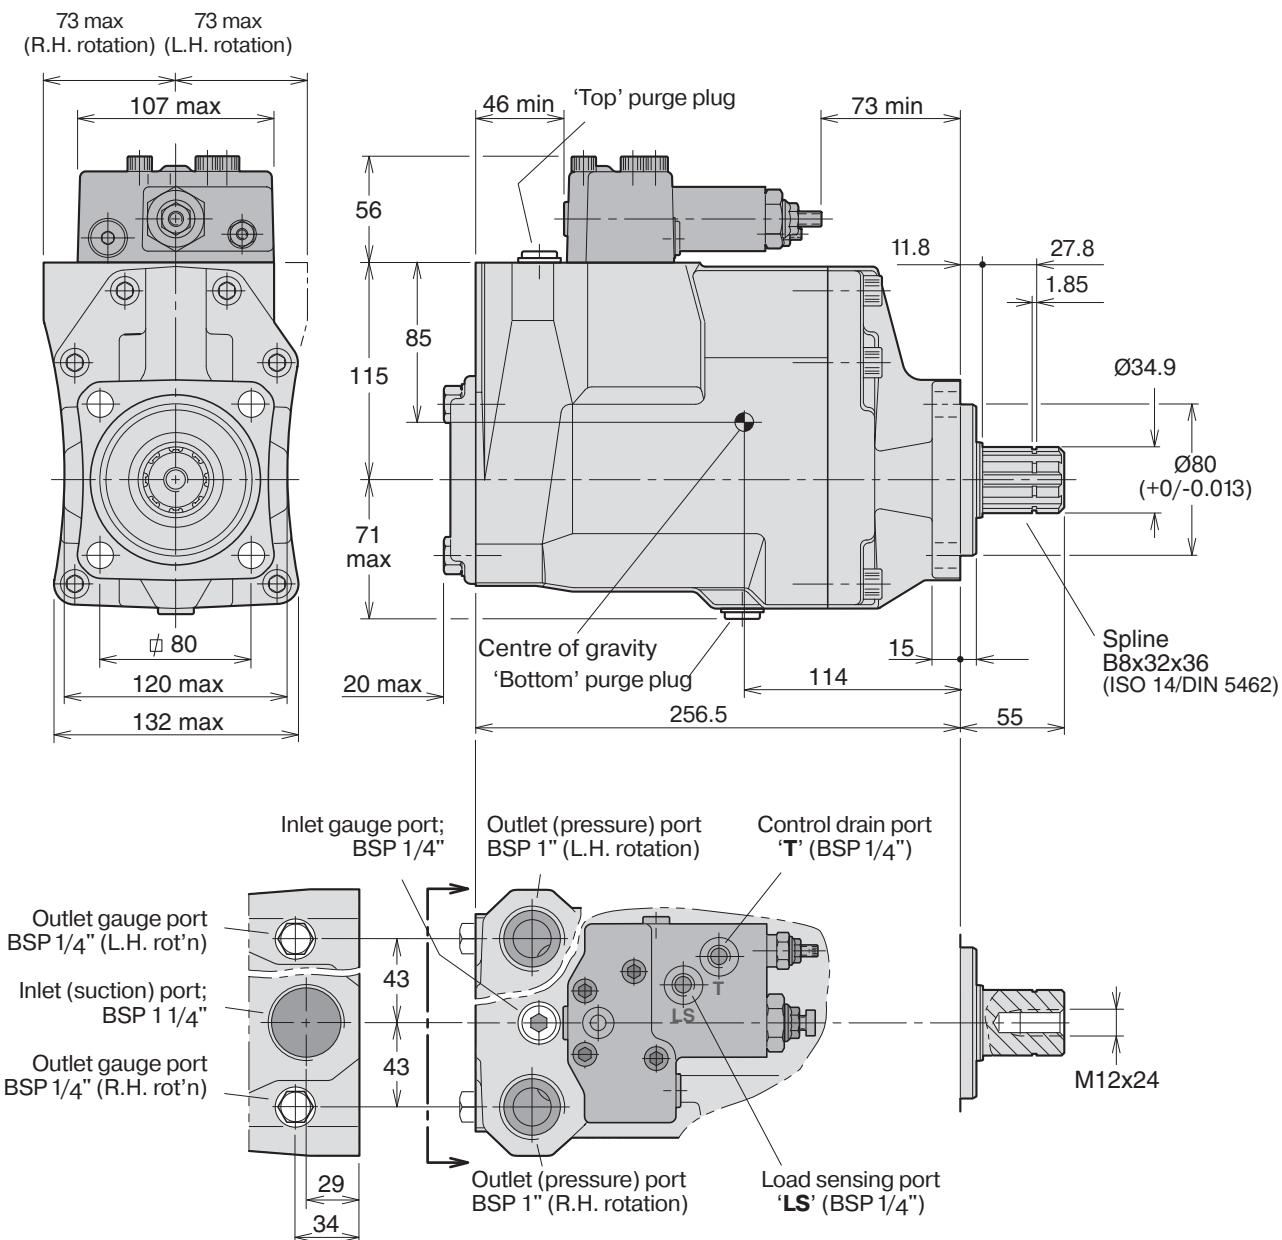

### IMPORTANT

The control is not drained through the pump case. An external line must be installed between the control drain port 'T' and the reservoir.

**NOTE:** The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

### LS valve block VP1-045/-060/-075

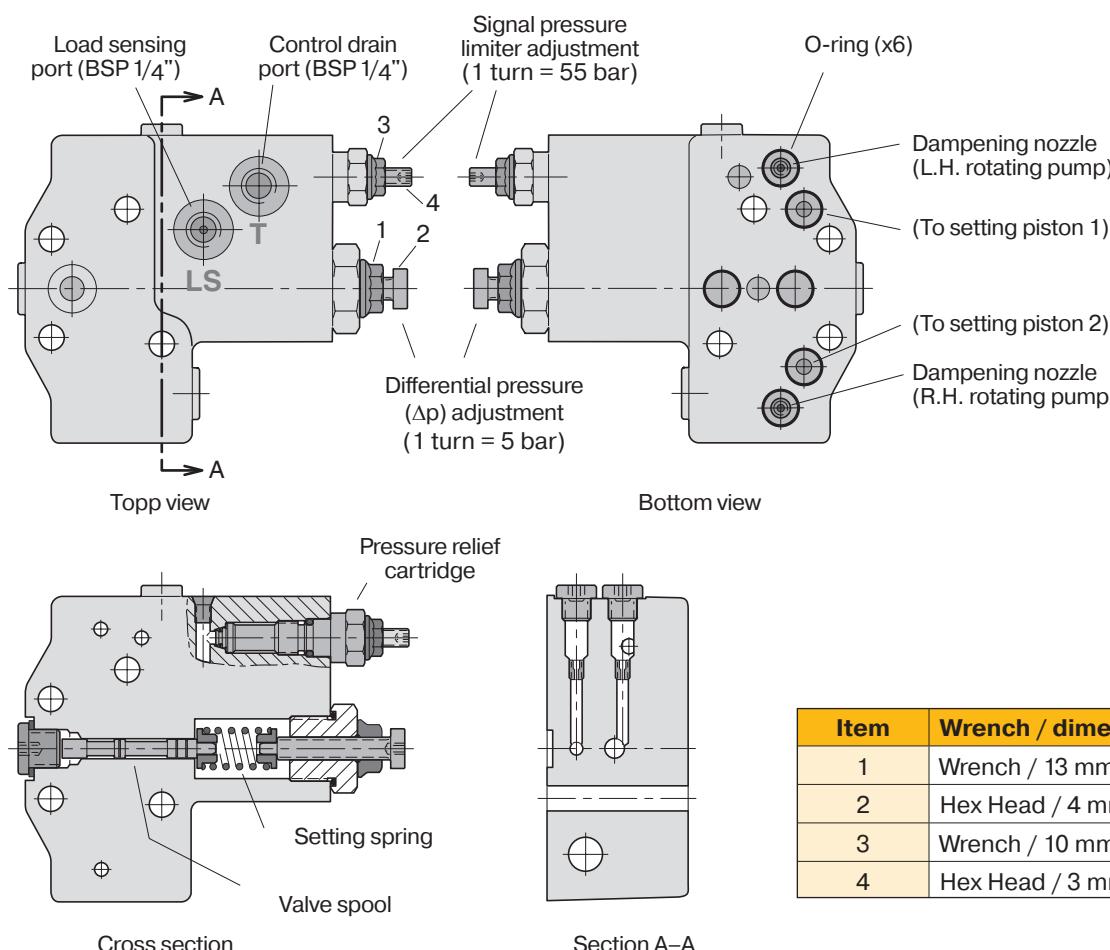


Fig. 2. LS valve block.

### Through-shaft coupling VP1-045/-060/-075

The VP1 pump has a through-shaft which means that an additional pump, such as a fixed displacement F1, can be installed in tandem with the VP1 by means of an adaptor kit (fig. 3).

**NOTE:** The bending moment caused by the weight of a tandem assembly normally exceeds that allowed by the PTO.

To prevent damage, the auxiliary pump should be supported by a bracket attached

to the gearbox; it must not be fastened to the truck chassis.

Likewise, when the tandem assembly is installed on a separate bracket and driven by a cardan shaft, the auxiliary pump should have a support attached to the pump bracket.

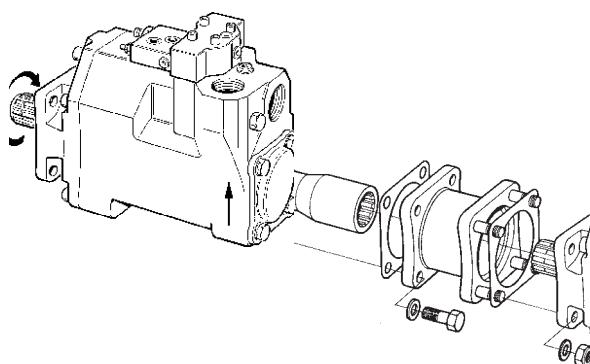


Fig. 3. Adaptor kit (P/N 379 7795) for tandem coupling.


#### IMPORTANT

Contact Parker Hannifin for additional information when considering tandem mounting a second VP1 pump.


The maximum torque that can be transmitted through the first pump VP1-045/-060/-075 in tandem is 420 Nm.

● VP1-095/-110/-130 cross section

1. Shaft seal
2. Roller bearing
3. 'Upper' purge plug
4. Bearing shell
5. Setting screw (pressure relief valve)
6. Setting bushing (standby pressure)
7. Control
8. Piston with piston shoe
9. 'Upper' setting piston (control pressure)
10. Needle bearing
11. Shaft
12. Drain hole, shaft seals
13. 'Lower' purge plug
14. Bearing housing
15. Swash plate
16. Retainer plate
17. 'Lower' setting piston (pump pressure)
18. Cylinder barrel
19. Valve plate
20. Barrel housing

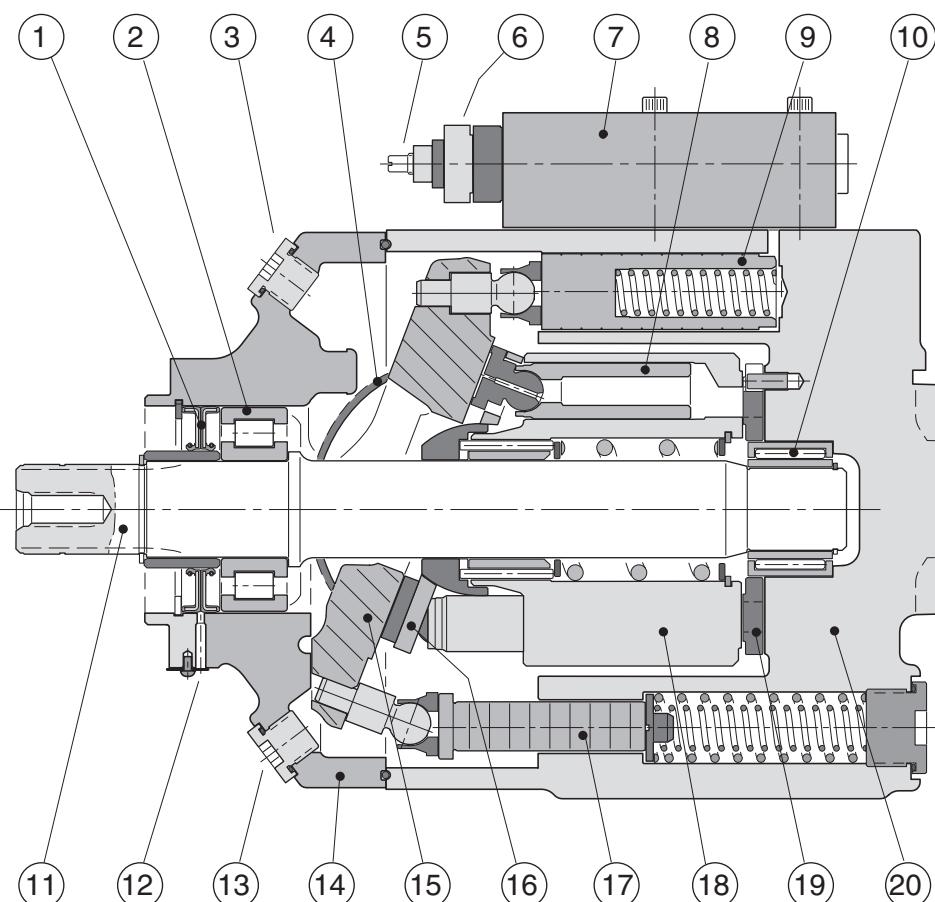


● LS control (for VP1-095/-110/-130)

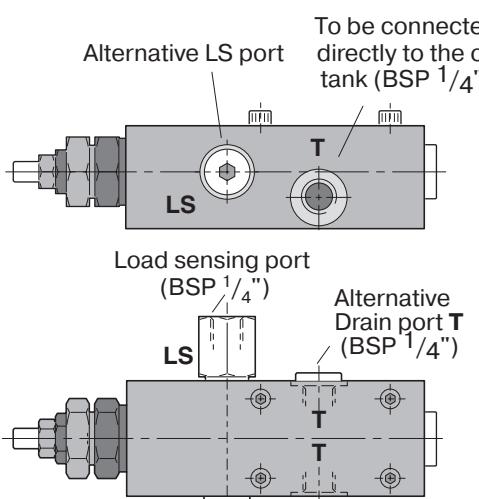

LS control ports.

**NOTE:**


Always run a function, after adjusting the standby pressure or the max pressure setting, before you read the value.

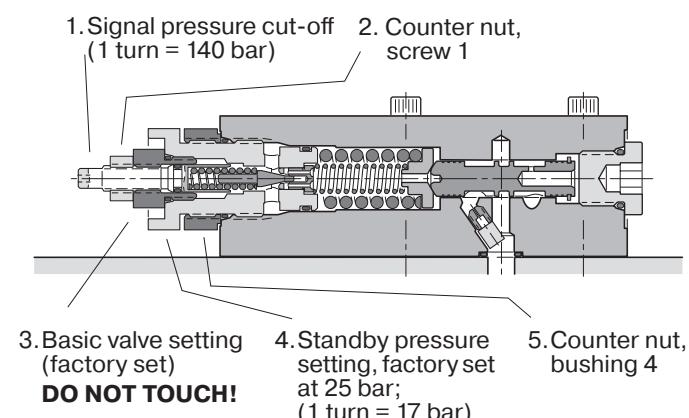

LS control cross section.

Item	Wrench / dimension
1	Hex Head Wrench / 4 mm
2	Wrench / 13 mm
3	<b>DO NOT TOUCH</b>
4	Wrench / 27 mm
5	Wrench / 27 mm

● VP1-095/-110/-130


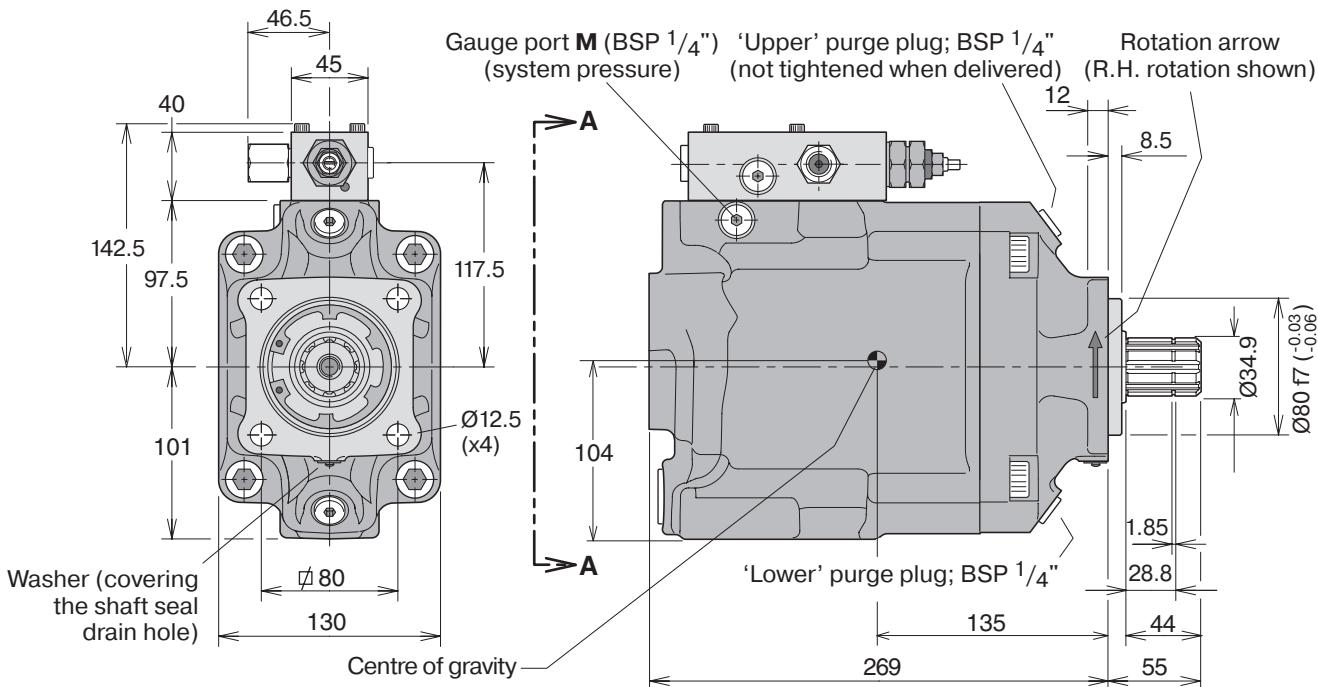


**NOTE:**


The pump **does not** include a suction fitting; it must be ordered separately. See page 62ff.

**IMPORTANT!**

The control is **not** drained through the pump case; an external drain line must be installed from control port T and, directly, to the oil tank.

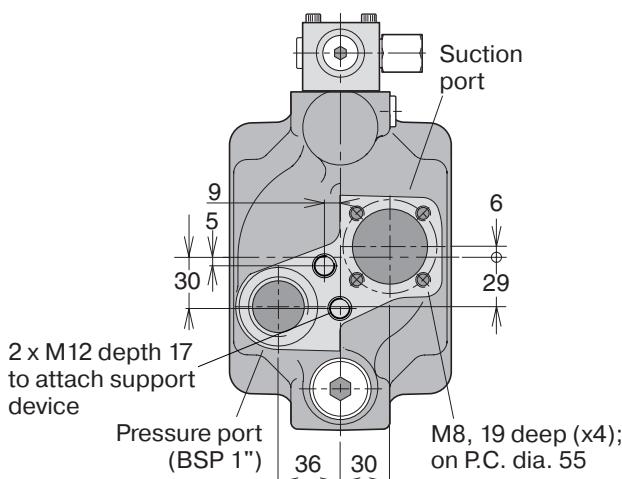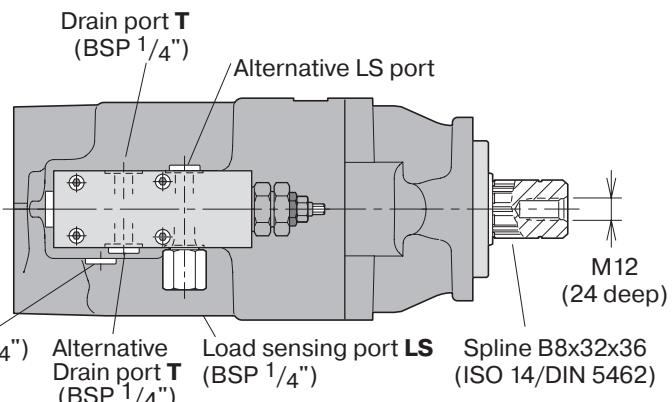

**View A-A**  
**Left hand rotating pump**

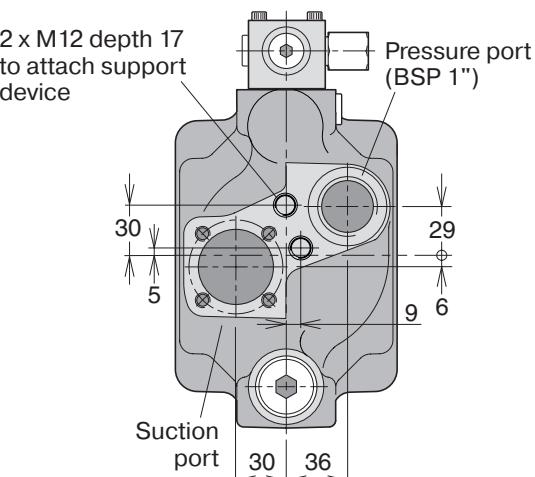

**View A-A**  
**Right hand rotating pump**

## Ordering information

Example:

**VP1 - 045 - L**

Frame size

**045, 060, 075, 095, 110 or 130**

Direction of rotation

- L** Left hand
- R** Right hand

### NOTE:

The VP1 is uni-directional.

Consequently, the desired direction of rotation must be stated when ordering.

## VP1 in load sensing systems

When installed in a load sensing system, the VP1 supplies the correct amount of flow required by the various work functions currently engaged.

This means that energy consumption and heat generation are minimised and much reduced in comparison with a fixed displacement pump used in the same system.

Diagram 1 shows the required power (flow times pressure) in a constant flow system with a fixed displacement pump.

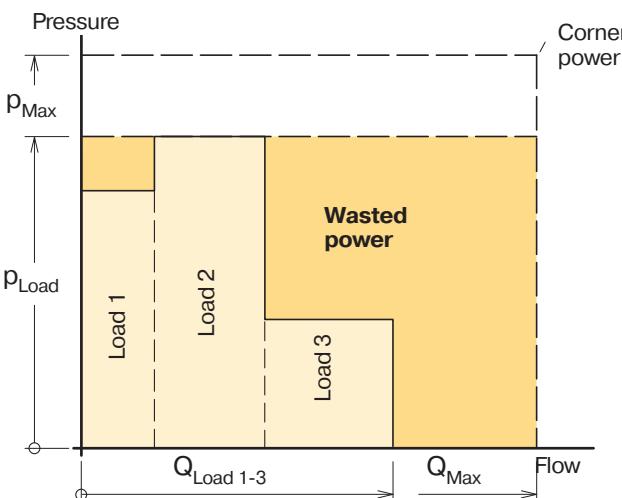


Diagram 1. Constant flow system with a fixed displacement pump.

## Standard model numbers

Designation	Ordering no. No Paint	Ordering no. Black Paint
VP1-045-R	378 0334	378 6169
VP1-045-L	378 0335	378 6170
VP1-060-R	372 2283	372 2285
VP1-060-L	372 2284	372 2286
VP1-075-R	378 0336	378 6171
VP1-075-L	378 0337	378 6172
VP1-095-R	378 6000	378 6003
VP1-095-L	378 6001	378 6002
VP1-110-R	378 4110	378 3814
VP1-110-L	378 4111	378 3815
VP1-130-R	378 4500	378 4507
VP1-130-L	378 4501	378 4508

Diagram 2 shows the sharply reduced power requirement in a load sensing system with a variable displacement pump such as the VP1.

In both cases the pump pressure is slightly higher than what is required by the heaviest load ('Load 2') but the VP1, because of the much smaller flow being delivered, needs only the power indicated by the shaded area 'Load power'. In a constant flow system, on the other hand, excess fluid is shunted to tank and the corresponding power, 'Wasted power' (shown in diagram 1), is a heat loss.

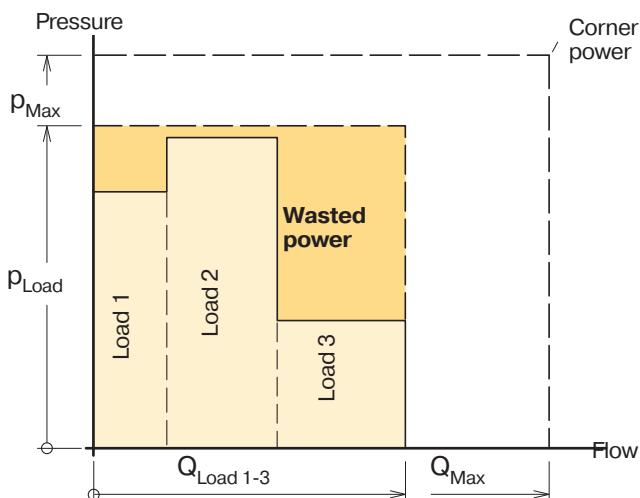


Diagram 2. Constant flow system with a variable displacement pump (e.g. VP1).

## Systems comparison

System	Constant flow	Load-sensing
Pump	Fixed displ.	VP1 variable displ.
Pump adjustments	Pressure only	Pressure and flow
Load*	Some influence	Some influence
Energy		
consumption	High	Low
Heat generation	High	Low

\* Simultaneous operation of loads with non-equal flows and pressures; refer to the above diagrams.

## LS load sensing control function

Refer to corresponding hydraulic schematic below.

A selected 'opening' of the directional control valve spool corresponds to a certain flow to the work function. This flow, in turn, creates a pressure differential over the spool and, consequently, also a  $\Delta p$  between the pump outlet and the LS port.

When the differential pressure decreases (e.g. the directional valve is 'opened' further) the  $\Delta p$  also decreases and the LS valve spool moves to the left. The pressure to the setting pistons then decreases and the pump displacement increases.

The increase in pump displacement stops when the  $\Delta p$  finally reaches the setting (e.g. 25 bar) and the forces acting on the valve spool are equal.

If there is no LS signal pressure (e.g. when the directional valve is in the neutral, no-flow position) the pump only delivers sufficient flow to maintain the standby pressure as determined by the  $\Delta p$  setting.

## LS control adjustments

### Pressure limiter

Pump size	Factory setting [bar]	Max pressure intermittent [bar]
VP1-045/060/075	350	400
VP1-095/110/130	350	420


### LS load sensing valve

Pump size	Factory setting [bar]	Min pressure [bar]	Max pressure [bar]
VP1-045/060/075	25	20	35
VP1-095/110/130	25	15	40

The factory setting, and the standard orifice sizes shown in the corresponding schematic below, will usually provide an acceptable directional valve characteristic as well as system stability.


For additional information, contact Parker Hannifin.

### Hydraulic schematic for VP1-45/-060/-075

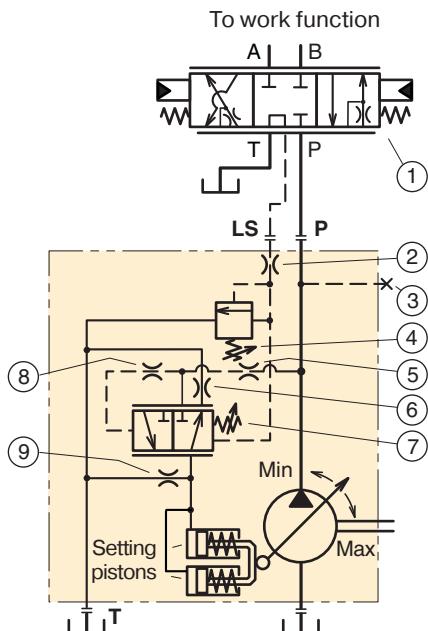

1. Directional, load sensing control valve
2. Load signal orifice (1.0 mm; fixed)
3. Gauge port
4. Signal pressure limiter adjustment
5. System pressure dampening nozzle (2.0 mm)
6. Return line nozzle (0.6 mm)
7. Standby ( $\Delta p$ ) pressure adjustment
8. System pressure dampening orifice (fixed)
9. Bleed-off nozzle (0.6 mm).

### Hydraulic schematic for VP1-095/-110/-130

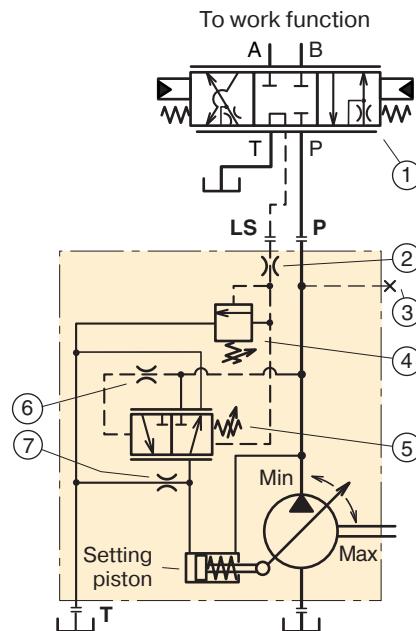

1. Directional, load sensing control valve
2. Load signal orifice (1.0 mm)
3. Gauge port
4. Signal pressure limiter adjustment
5. Standby ( $\Delta p$ ) pressure adjustment
6. System pressure dampening orifice (fixed)
7. Bleed-off nozzle (1.2 mm)

**Suction fittings for series F1, F2, F3, F4 and T1 pumps also VP1-095, -110 and -130**

**NOTE:** A suction fitting must be ordered separately (not included with the pump).

**To choice the correct dimension of suction connection, see page 14 ff.**

**Suctions fittings for VP1-045/075 see page 57.  
'Straight' suction fittings for F1, T1, F2, F3, F4,  
VP1-095/-110/-130**

Ordering no.	A mm	B mm	ØC dia. mm (in.)
378 0635 <sup>1)</sup>	0	85	38 (1 <sup>1</sup> / <sub>2</sub> ")
378 0636 <sup>2)</sup>	17	136	50 (2")
378 0637 <sup>3)</sup>	25	145	63 (2 <sup>1</sup> / <sub>2</sub> ")
378 3523 <sup>3)</sup>	32	174	75 (3")

**45° suction fittings for F1, T1, F2, F3, F4  
VP1-095/-110/-130**

Ordering no.	A mm	B mm	ØC dia. mm (in.)
378 1234 <sup>1)</sup>	60	104	32 (1 <sup>1</sup> / <sub>4</sub> ")
378 0633 <sup>1)</sup>	60	104	38 (1 <sup>1</sup> / <sub>2</sub> ")
378 0364 <sup>2)</sup>	67	110	50 (2")
378 0634 <sup>3)</sup>	75	117	63 (2 <sup>1</sup> / <sub>2</sub> ")
378 3367 <sup>3)</sup>	95	138	75 (3")
378 1062	67	110	40
378 0975	67	110	45

**90° suction fittings for F1, T1, F2, F3, F4  
VP1-095/-110/-130**

Ordering no.	A mm	B mm	ØC dia. mm (in.)
378 0978 <sup>1)</sup>	126	83	38 (1 <sup>1</sup> / <sub>2</sub> ")
378 0979 <sup>2)</sup>	135	83	50 (2")
378 1980 <sup>3)</sup>	147	83	63 (2 <sup>1</sup> / <sub>2</sub> ")
378 0976	135	83	45
378 8690 <sup>3)</sup>	185	83	75 (3")

**145° suction fitting for F1, T1, F2, F3, F4  
VP1-095/-110/-130**

Ordering no.	A mm	B mm	ØC dia. mm (in.)
378 1867	165	73	50 (2")

<sup>1)</sup> Recommended for frame size F1-25.

<sup>2)</sup> Recommended for frame size F1-41,-51,-61,-81, -101.

<sup>3)</sup> (3 clamps and 3 screws)

**Spare parts**

Additional Hold-down-clamp kit consists of:


hold-down-clamp cap screw and O-ring

Ordering no. 378 1321

Additional Hold-down-clamp kit for mounting on BPV

Ordering no. 378 2439

A 'suction fitting' consists of a straight, 45°, 90° or 135° suction fitting, clamps, cap screws and O-ring.

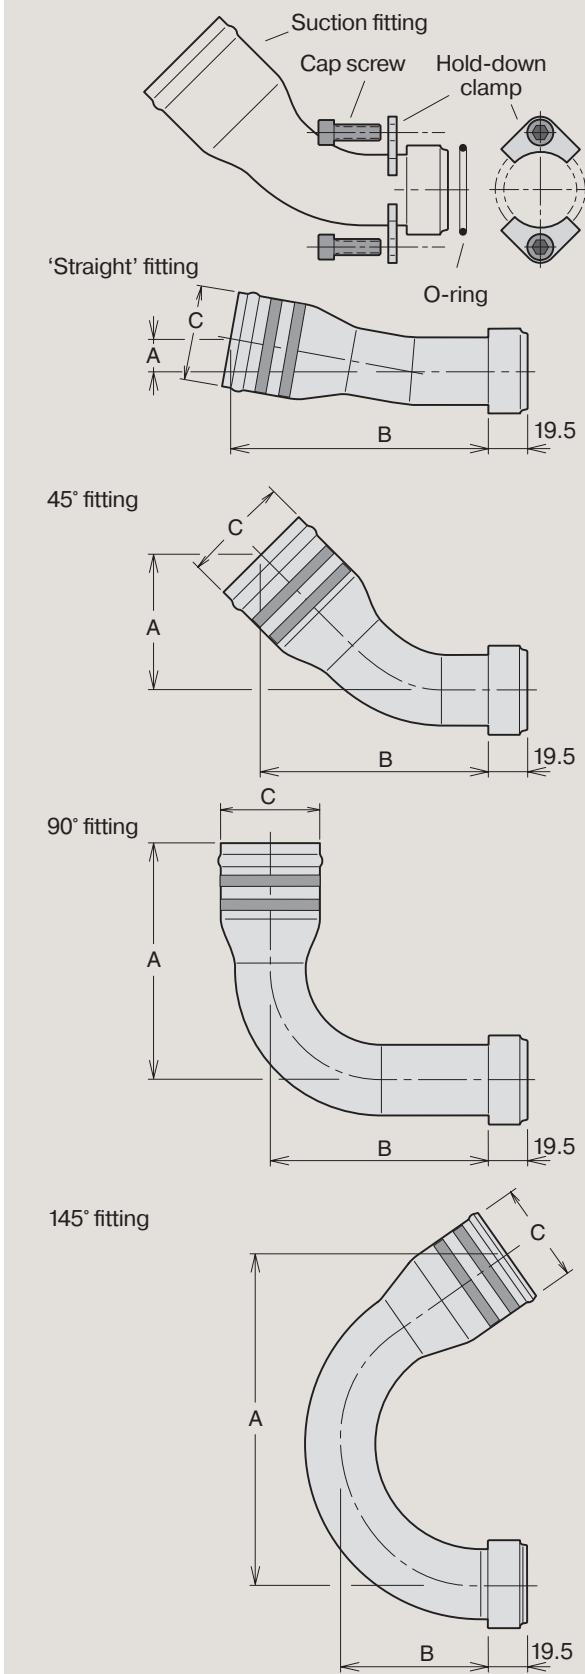


## Suitable suction fittings for F1 and VP1-045/-060/-075 with BSP port treads

**NOTE:** A suction fitting must be ordered separately (not included with the pump).  
To choose the correct dimension of suction connection, see page 14 ff.

### 45° suction fittings

Ordering no.	ØA	ØB inch	C mm
00509035016	BSP 1" <sup>1)</sup>	2"	18
00509035116	BSP 1 1/4"	2"	18
00509021916	BSP 1 1/4"	2 1/2"	18


<sup>1)</sup> Not for VP1-045/-060/-075

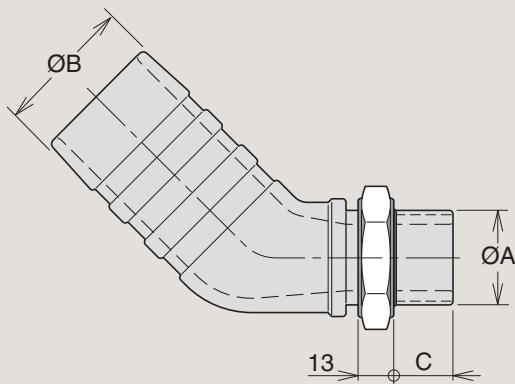

### 90° suction fittings

Ordering no.	ØA	ØB inch	C mm
00509034516	BSP 1" <sup>1)</sup>	2"	18
00509034616	BSP 1 1/4"	2"	18

<sup>1)</sup> Not for VP1-045/-060/-075

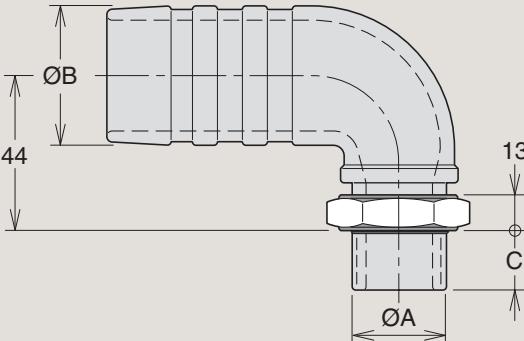


## Fitting kits for VP1-045/-060/-075 pumps

### Kits with 45° suction fitting

Order no.	C <sub>1</sub>	ØC <sub>2</sub> inch	A mm	B mm
379 9563	BSP 3/4"	2"	71	154
379 9562	BSP 1" *	2 3/2"	64	147

\* Above 100 l/min

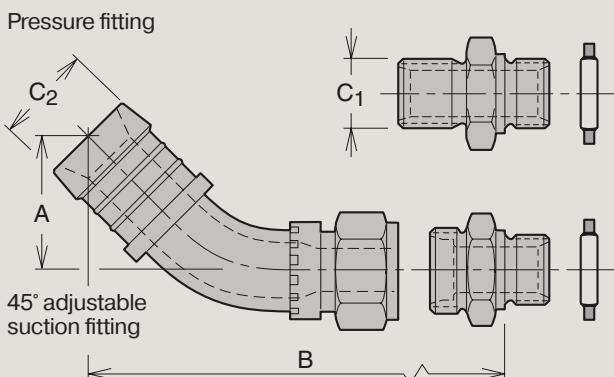

## ● Auxiliary Valves

### Bypass Valves and Unloading Valves for F1, F2, F3, F4, T1 and VP1 pumps


<b>Contents.....</b>	<b>Page</b>
<b>BPV-F1 and BPV-T1 bypass valve</b>	65
Technical Information .....	65
Ordering information and Drawings .....	66
BPV-F1 and BPV-T1 Bypass valve without manual override .....	66
BPV-F1 and BPV-T1 Bypass valve with manual override .....	66
<b>BPV-F2 bypass valve</b> .....	67
Ordering information and Drawings .....	68
BPV-F2 Bypass valve without manual override .....	68
BPV-F2 Bypass valve with manual override.....	69
<b>BPV-F1, -T1, -F2, -F3 and -F4 Accessories / Spare Parts</b> .....	70
<b>BPV-L line mounted bypass valve</b> .....	71
<b>BPV-VP1 unloading valve</b> .....	72

## BPV-F1 and BPV-T1 bypass valve


- The bypass valve is mainly utilised in applications where the F1 pump is driven from the crank-shaft through a cardan shaft, or when it is installed on an engine PTO.
- The BPV bypass valve should be disengaged during transportation when the pump is operating constantly and the engine is running at max rpm; the hydraulic system is not sized for the large flow that would otherwise go through it.
- The BPV valve substantially reduces the energy loss during transportation.
- The valve installs directly on top of the pump end cap with a pressure port 'banjo' fitting and an inlet port spacer bushing with two cap screws; refer to the illustration to the right.
- As the BPV valve is symmetrical, it can be 'turned 180°' to prevent interference with chassis components; it can be utilised for either left hand or right hand pumps.
- The valve function must only be activated or released (by means of the 24 VDC solenoid) at no-load (below 20 bar) system pressure.

### IMPORTANT INFORMATION

- In order to secure a cooling flow through the system, a separate drain line **must** be connected from the BPV-F1 drain line fitting directly to tank; (shown in the Installation Information Bulletin MSG30-8227-INST/ UK/DE) refer also to the schematic.
- The pressure connector must be tightened (to 50 Nm) before the suction fitting clamp screws are tightened.

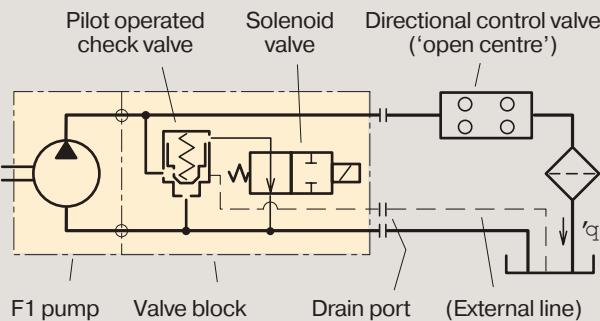

Bypass valve schematic.

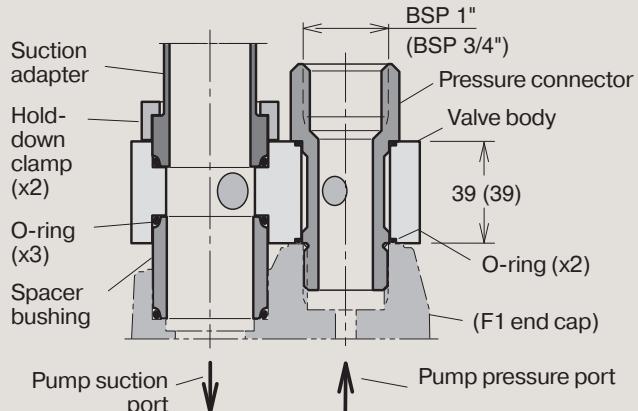

## BPV-F1 and BPV-T1 Bypass valve

Without manual override

Bypass valve, type	BPV-F1-25 to -101 and BPV-T1-81 and -121
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage (option)	24 VDC, (12 VDC)
Power requirement	14 W
Operating mode	Activated solenoid: Check valve closed

Bypass valve	Voltage	Ordering number	For F1 and T1 size	Torque <sup>1)</sup>
BPV-F1, BPV-T1	24 VDC 12 VDC	378 7201 378 7202	F1-25 <sup>2)</sup> , -41, -51, -61 and <b>T1-81</b>	50 Nm
	24 VDC 12 VDC	378 7203 378 7204	<b>F1-81, -101</b> and <b>T1-121</b>	100 Nm
Drain fitting kit <sup>2)</sup> F1-025	378 1640		Contains a drain line fitting a bonded seal and nozzle.	
Drain fitting kit other F1, T1 and F2	378 3039		Contains a drain line fitting and a bonded seal. <b>N.B.</b> Included in the complete bypass valve.	

- <sup>1)</sup> Torque pressure connector to:  
<sup>2)</sup> Drain fitting kit **378 1640** must be ordered separately for **F1-025**.



## BPV-F1 and BPV-T1 Bypass valve

With manual override

Bypass valve, type	BPV-F1-25 to -101 and BPV-T1-81 and -121
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage	24 VDC
Power requirement	14 W
Operating mode	Activated solenoid: Check valve closed

Bypass valve	Voltage	Ordering number	For F1 and T1 size	Torque <sup>1)</sup>
BPV-F1, BPV-T1	24 VDC	378 4179	F1-25 <sup>2)</sup> , -41, -51, -61 and <b>T1-81</b>	50 Nm
	24 VDC	378 4180	<b>F1-81, -101</b> and <b>T1-121</b>	100 Nm
Drain fitting kit <sup>2)</sup> F1-025	378 1640		Contains a drain line fitting a bonded seal and nozzle.	
Drain fitting kit other F1, T1 and F2	378 3039		Contains a drain line fitting and a bonded seal. <b>N.B.</b> Included in the complete bypass valve.	

- <sup>1)</sup> Torque pressure connector to:  
<sup>2)</sup> Drain fitting kit **378 1640** must be ordered separately for **F1-025**.

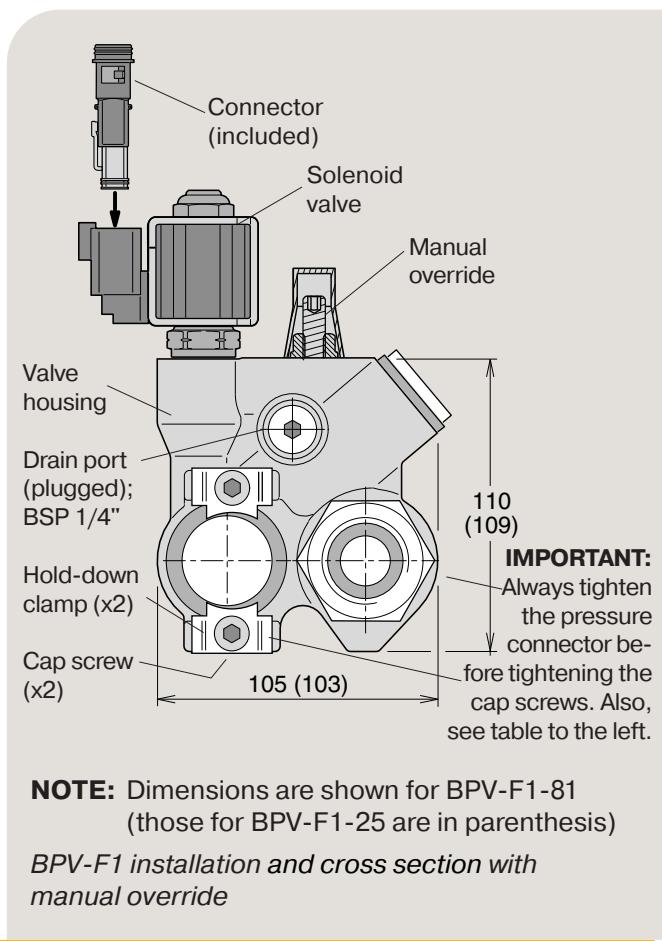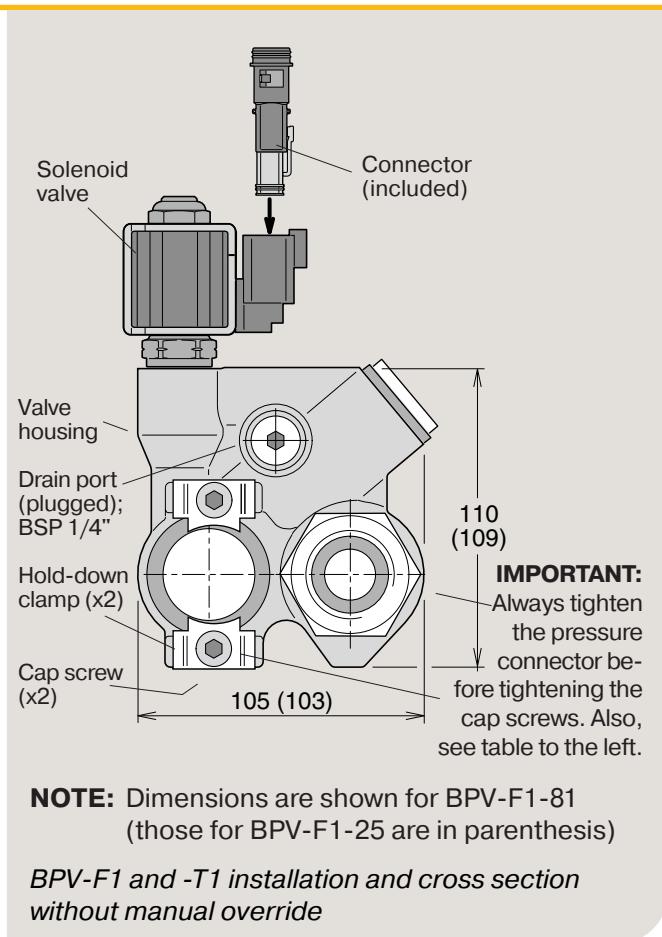


## BPV-F2 bypass valve

- An F2 twin pump fitted with a bypass valve can be utilised in applications where the pump is operating constantly i.e. when the pump is driven from the crank-shaft through a cardan shaft, or when it is installed on an engine-PTO. In addition, it can be used when, temporarily, one of the two circuits is not required; the power loss is thus reduced as the non-required flow is not forced through lines and 'open center' valves.
- The BPV bypass valve should be disengaged during transportation when the pump is operating constantly and the engine is running at max rpm; the hydraulic system is not sized for the large flow that would otherwise go through it.
- The BPV valve connects the outlet and inlet ports of the pump, and only a small oil flow goes through the system and to the reservoir.
- The valve is installed directly on top of the pump port surface with 'banjo' fittings and two cap screws (refer to the split view to the right).
- As the BPV valve is symmetrical it can be 'turned 180°' so as not to interfere with chassis components. The valve can accommodate left hand as well as right hand rotating pumps.
- The valve can only be engaged or disengaged (through the 24 or 12 VDC solenoid) at low system pressures (below 20 bar).

## IMPORTANT INFORMATION

- In order to secure a cooling flow through the system, a separate drain line **must** be connected from the BPV-F2 drain line fitting (shown in the split view) directly to tank; refer also to the schematic.
- The pressure connectors must be tightened (to 50 Nm) before the suction fitting clamp screws are tightened.

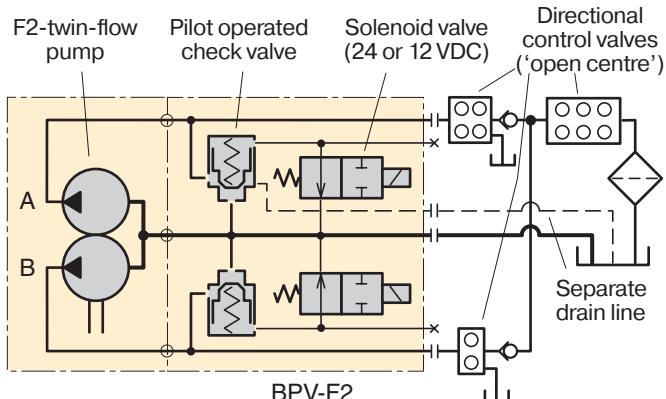

Bypass valve circuit schematic (example).


## BPV-F2 Bypass valve

Without manual override

Bypass valve, type	BPV-F2
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage (option)	24 VDC, (12 VDC)
Power requirement	14 W (each solenoid)
Operating mode	Activated solenoid: Check valve closed

Bypass valve <sup>1)</sup>	Voltage	Ordering number	For F2 size	Torque <sup>3)</sup>
BPV-F2,	24 VDC	<b>378 7424</b>	42/42, 53/53, 55/28, 70/35, 70/70	50 Nm
	12 VDC	<b>378 7425</b>		

- 1) The BPV-F2 valve kit contains parts designated '1' in the split view to the right.
- 2) A suction fitting kit (parts designated '2' in the split view) is not included with the F2 pump; it must be ordered separately (refer to page 62).
- 3) Torque pressure connector to:

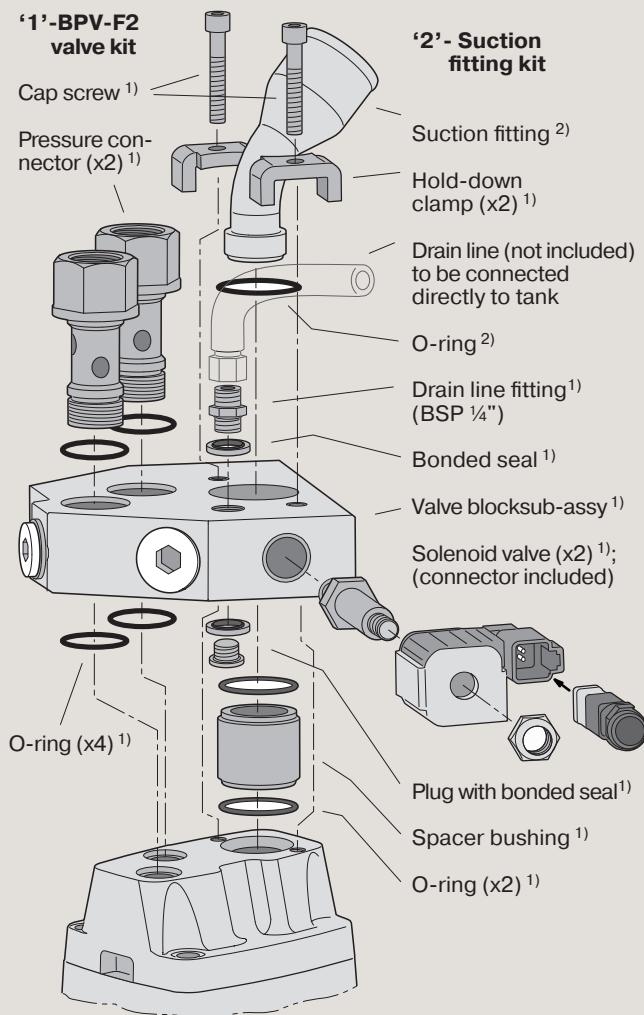

Bypass valve split view without manual override (with F2 end cap).

**NOTE:** A suction fitting kit (parts designated '2' in the split view) is **not** included with the F2 pump; it must be ordered separately (refer to page 62ff).



## BPV-F2 Bypass valve

With manual override

Bypass valve, type	BPV-F2
Max pressure, continuous	350 bar
intermittent	400 bar
Solenoid voltage (option)	24 VDC
Power requirement	14 W (each solenoid)
Operating mode	Activated solenoid: Check valve closed

Bypass valve <sup>1)</sup>	Voltage	Ordering number	For F2 size	Torque <sup>3)</sup>
BPV-F2,	24 VDC	<b>378 4377</b>	42/42, 53/53, 55/28, 70/35, 70/70	50 Nm



- 1) The BPV-F2 valve kit contains parts designated '1' in the split view to the right.
- 2) A suction fitting kit (parts designated '2' in the split view) is not included with the F2 pump; it must be ordered separately (refer to page 62).
- 3) Torque pressure connector to:

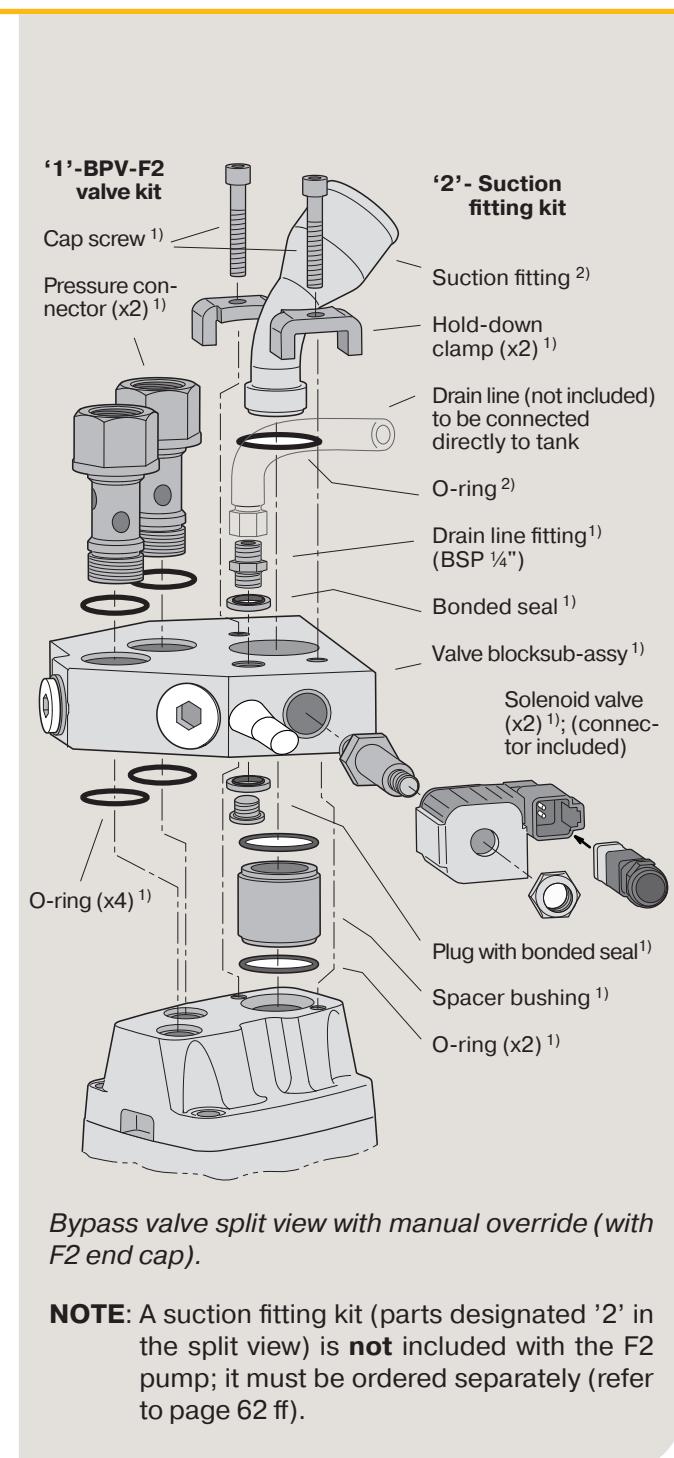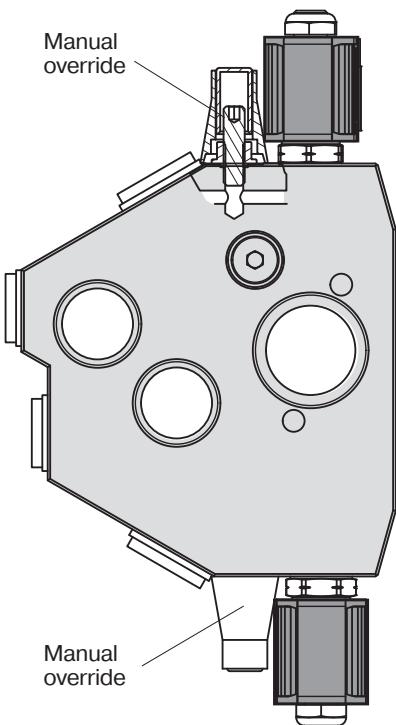

**NOTE:** A suction fitting kit (parts designated '2' in the split view) is **not** included with the F2 pump; it must be ordered separately (refer to page 62 ff).

BPV-F1, -T1, -F2, -F3 and -F4 Accessories / Spare Parts

Part No	Description	Remarks
3787496	Solenoid 24 V	Incl. new connector
3787497	Solenoid 12 V	Incl. new connector
3787494	Cartridge valve assy 24 V	Incl. new connector
3787495	Cartridge valve assy 12 V	Incl. new connector
3785948	Nut for cartridge valve	
3787488	Male contact kit	

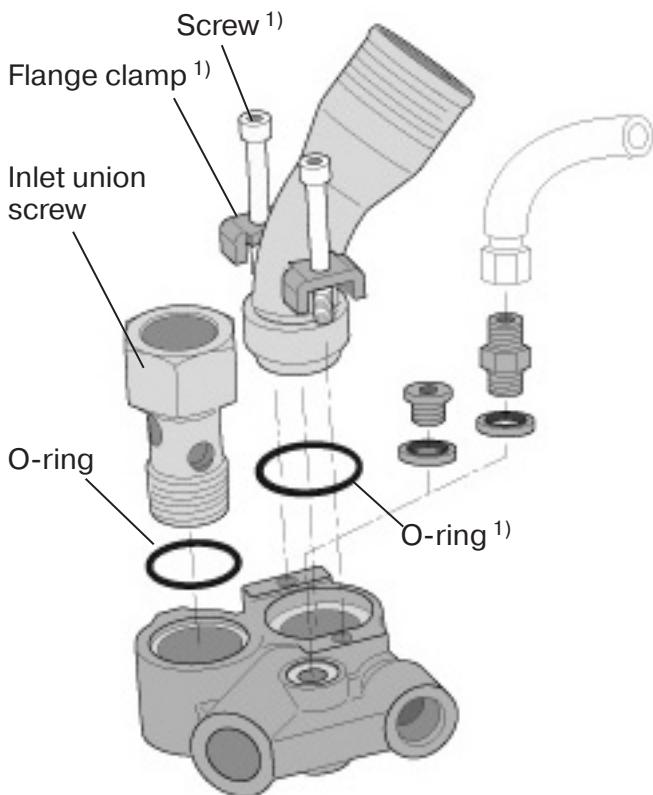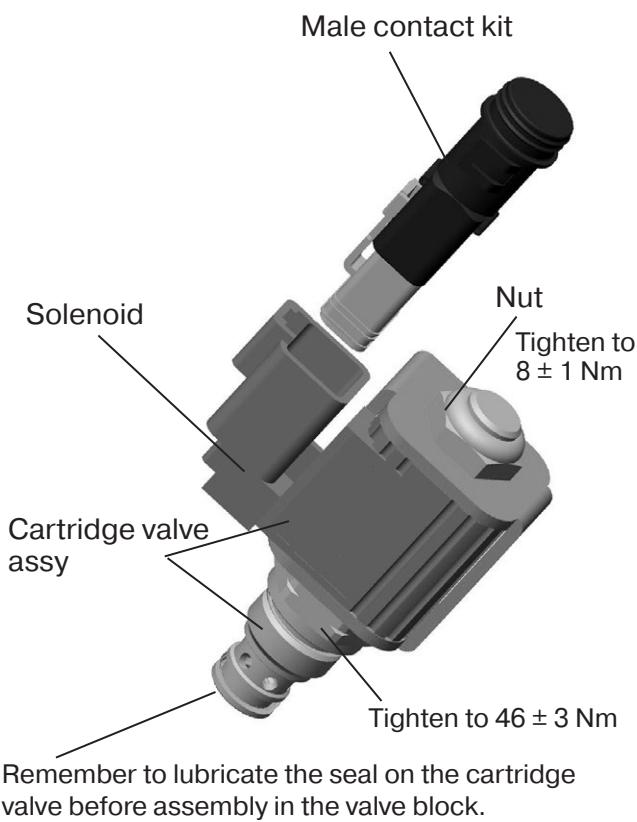


Part No	Description	Remarks
3781480	Inlet union screw	F2 (all sizes)
3781082	Inlet union screw	F1-25, -41, -51, -61 and T1-81
3781094	Inlet union screw	F1-81, -101, T1-121, and F3-81, -101
3780641	O-ring kit	For F1, T1, F2, F3 and F4 (all sizes)
3782439	Hold-down clamp Suction fitting <sup>1)</sup>	For BPV F1, T1, F2, F3 and F4

<sup>1)</sup> Hold-down clamp for suction fitting on bypass valve for F1, T1, F2 and F3 (parts designated '1' in the split view).


## BPV-L line mounted bypass valve

- The unloading valve BPV-L is utilised in hydraulic systems where the fixed displacement pump is engaged constantly and no flow is required, i.e. during transportation. The flow is directed through the unloading valve which has a low pressure loss and less heat is being generated in the system.

- When the solenoid is activated the unloading valve closes and the pump flow is directed to the directional control valve or other user.

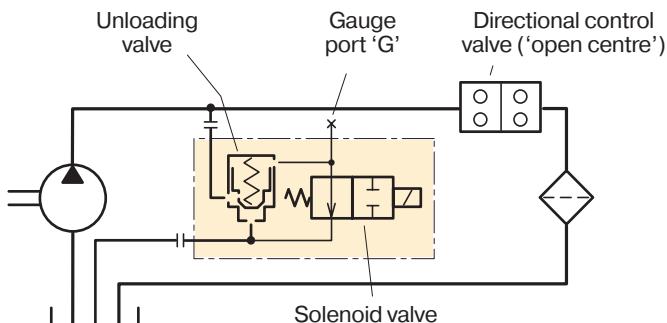

Unloading valve, type	BPV-L
Max operating pressure [bar]	350
Max flow [l/min]	250
Solenoid voltage [VDC]	24
Required power [W]	14
Operating mode	Activated solenoid: Check valve closed
<b>Ordering number</b>	<b>378 1487</b>

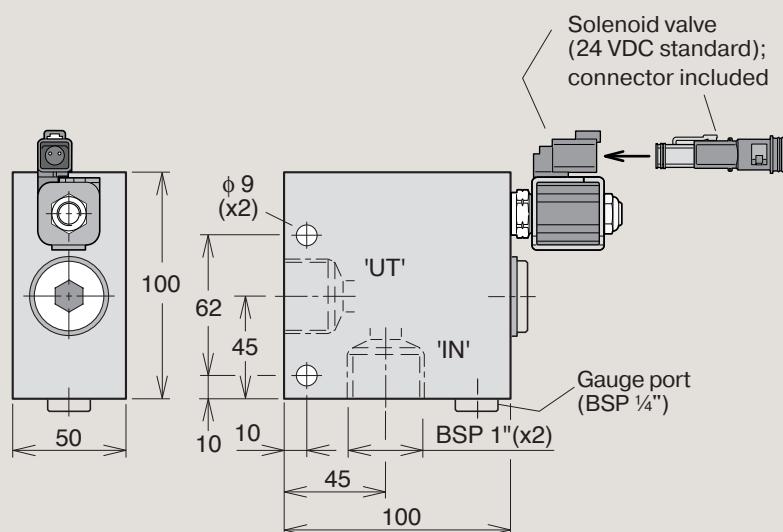

## ● VP1 installation on an engine PTO


### BPV-VP1 unloading valve

The BPV-VP1 unloading valve is utilized in hydraulic systems where the pump is in constant operation.

- The valve protects the pump from being overheated in the off-load mode by allowing a small flow through the pump. When load sensing valve function is engaged, the bypass flow is cut off (as port 'X' is being pressurized).
- The valve will also de-air the suction line and the pump body after a long standstill.
- (The pump is assembled above the oil-tank and during the standstill some of the oil in the pump housing has been drained back to the oil-tank)

Valve type	Ordering number
BPV-VP1	<b>379 8799</b>


**NOTE:** - BPV-VP1 with VP1-045, -060 or -075 and  
- BPV-VP1 with VP1-095, -110 or -130,  
see next page.

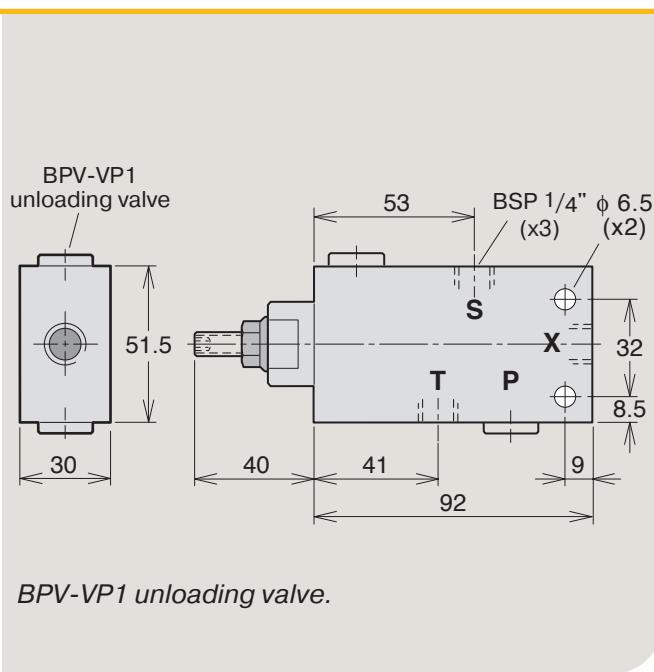

BPV-VP1 unloading valve.


For more information also see MSG30-8226-INST/UK,  
Installation Information Unloading Valve BPV for VP1

## BVP-VP1 with VP1-045/-060/-075 pumps

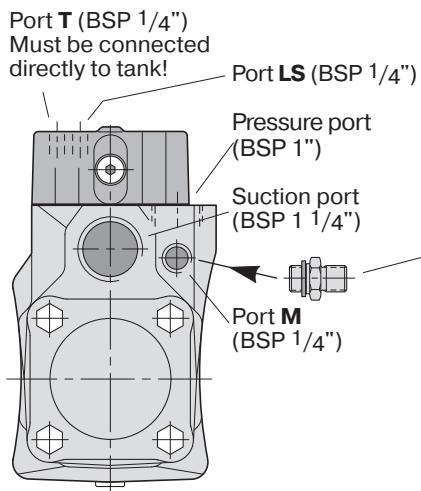

### NOTE:



- Install the fitting (included) in port M and connect it, in turn, to port S of the unloading valve (see schematic).
- An orifice is included in the fitting. Connection on the fitting is 1/4" BSP threads. Size of orifice in the fitting is Ø 1.5 mm.

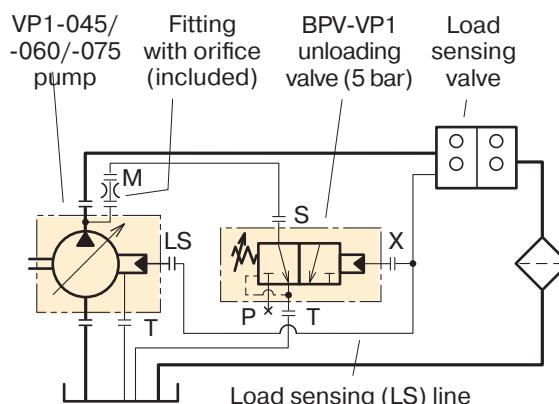

VP1-045/-060/-075 end view (showing ports).

BPV-VP1 installation schematic with VP1-045/-060/-075 pump.

## BVP-VP1 with VP1-095/-110/-130 pumps

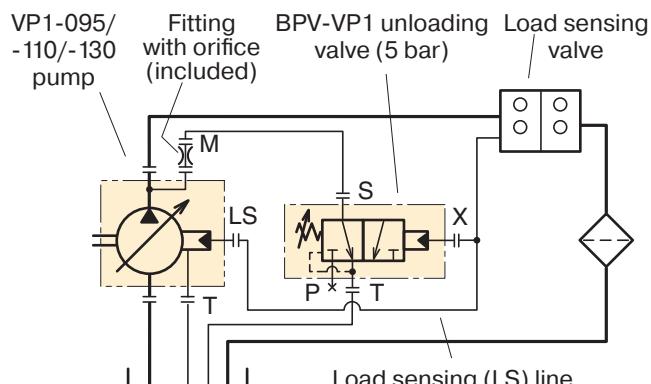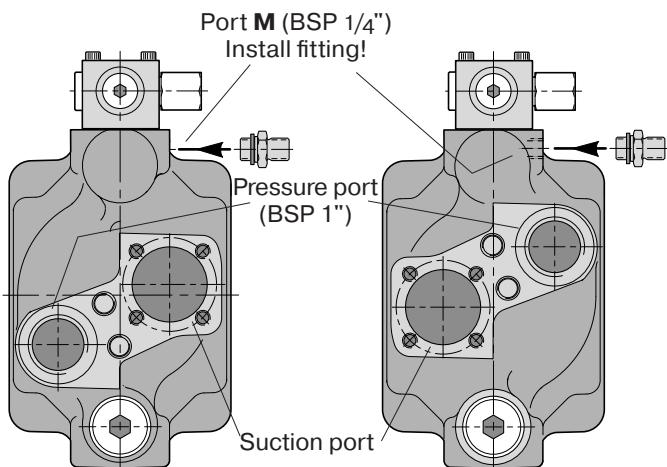


VP1-095/-110/-130 main ports (with fitting installation).

BPV-VP1 installation schematic with VP1-095/-110/-130 pump.

### NOTE:

- Install the fitting (included) in port M and connect it, in turn, to port S of the unloading valve (see schematic).
- An orifice is included in the fitting. Connection on the fitting is 1/4" BSP threads. Size of orifice in the fitting is Ø 1.5 mm.

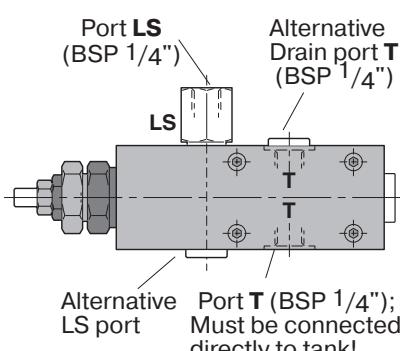

VP1-095/-110/-130 control valve ports.

● **Accessories**


**Contents..... Page**

**PTO Adapter Kits:**

PTO adapter kit for Scania ED 120 and 160 engine - PTO .....	75
PTO adapter kit for Mercedes engines (R6) .....	76
PTO adapter kit for Mercedes engines (V6, V8).....	76
PTO adapter kit for MAN (D20, D26) .....	76
Pump couplings .....	77

## ● PTO adapter kit for Scania ED 120 and 160 engine - PTO

- With the adapter kit, a hydraulic pump (e.g. F1 or VP1) that meets the ISO standard can be installed on the PTO of the Scania engine.
- The PTO gear is supplied with the chassis.
- Please note:** The engine must be ordered with a PTO.

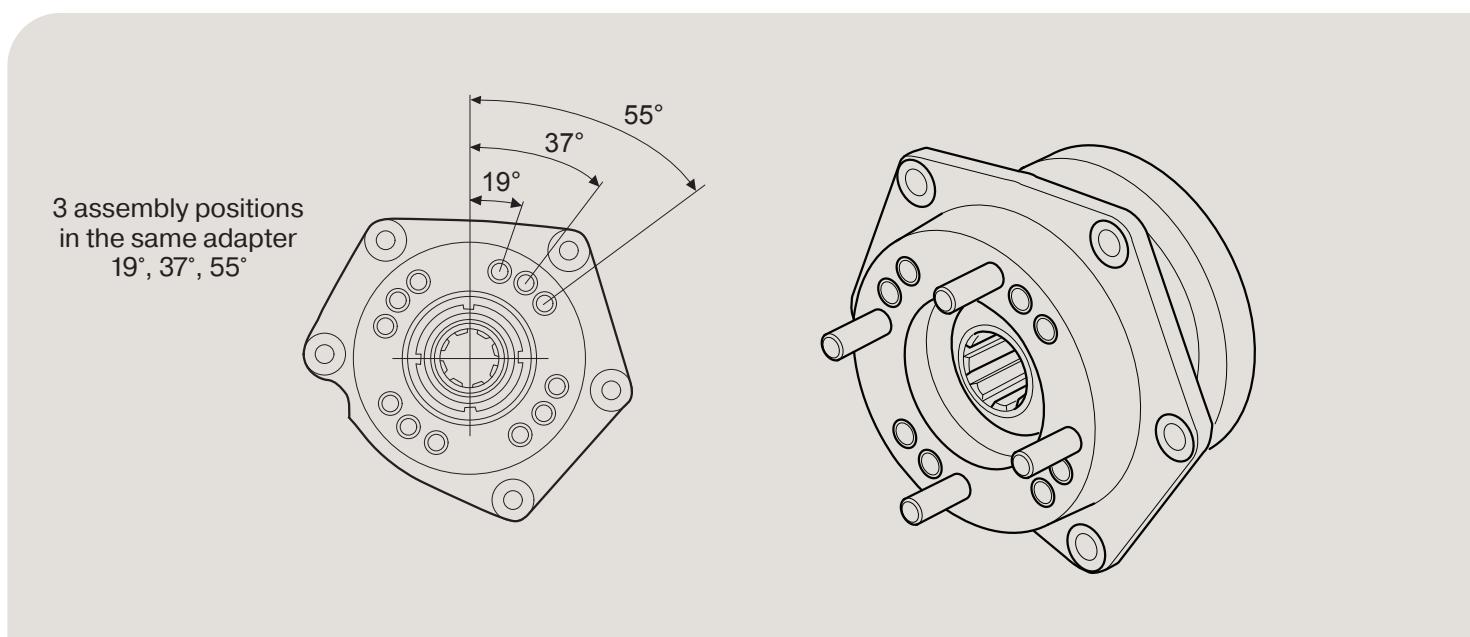

### ED 120

Technical Information	
Max. torque [Nm]	600
Gear ratio (engine : pump)	1 : 1.19
Pump rotation	Right hand (clockwise)

### ED 160

Technical Information	
Max. torque [Nm]	600
Gear ratio (engine : pump)	1 : 1.19
Pump rotation	Left hand (counter clockwise)


PTO adapter kit	Ordering number
ED120, bearing supported 19°, 37°, 55°	<b>378 9592</b>

PTO adapter kit	Ordering number
ED-160, bearing supported 19°, 37°, 55°	<b>378 9970</b>

### PTO adapter kit for Mercedes engines (R6)

With the adapter kit, a hydraulic pump that meets the ISO standard can be installed on the PTO of the Mercedes R6 engines.

Torque continuous	300 Nm
Torque intermittent	330 Nm
Gear ratio (engine to pump)	1 : 1.071
Pump rotation	Right hand
Ordering No.	0050706404

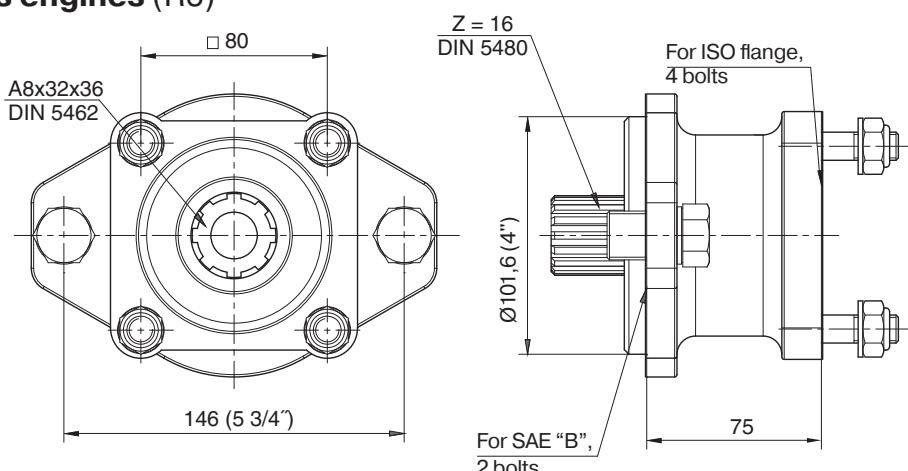


### PTO adapter kit for Mercedes engines (V6, V8)

With the adapter kit, a hydraulic pump that meets the ISO standard can be installed on the PTO of the Mercedes V6 and V8 engines.

This adapter (7012104), can be fitted on the original DC SAE-A adapter, delivered together with the new ACTROS from DC factory.

Torque continuous	390 Nm
Torque intermittent	470 Nm
Gear ratio (engine to pump)	1 : 1.15
Pump rotation	Right hand
Ordering No.	00507012104

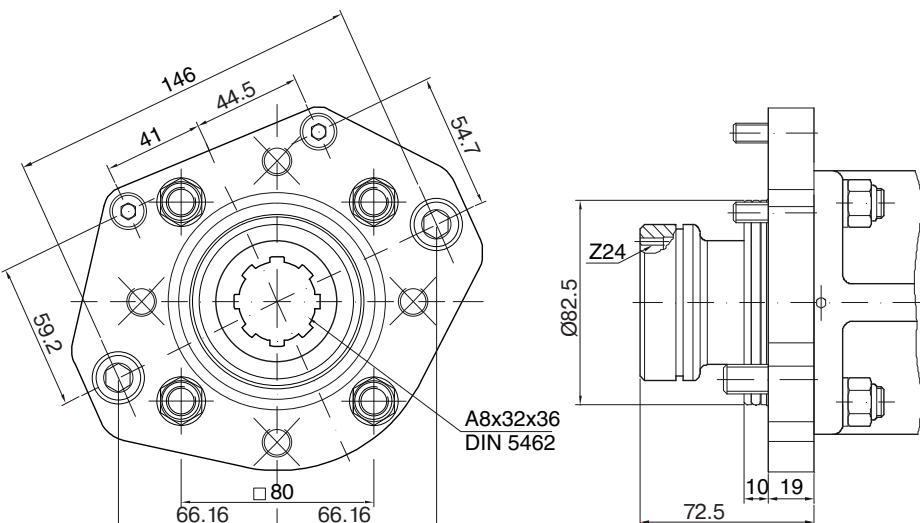


### PTO adapter kit for MAN (D20, D26)

With the adapter kit, a hydraulic pump that meets the ISO standard can be installed on the PTO of the MAN D20 engines.

PTO adapter	D20, D26
Torque continuous	400 Nm
Torque intermittent	570 Nm
Gear ratio (engine to pump)	1 : 1.233
Pump rotation	Right hand

PTO adapter	Ordering No.
D20, D26	0050081903

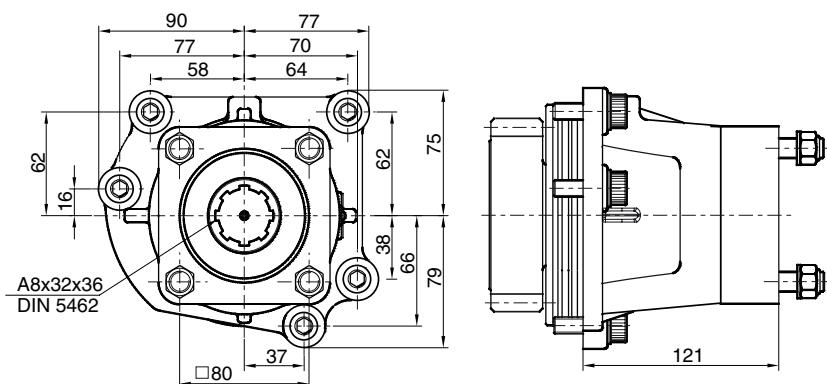

## Pump couplings

Designation	DIN 90 (fig. 1)
A	90
B	74.5
C	47 h7
D	M8
E <sub>1</sub>	61.5
E <sub>2</sub> (F1)	57.2
VP1, F2, F1*	<b>370 4634</b>
F1	<b>378 0642</b>

**NOTE:** Max torque is limited by the cardan shaft.

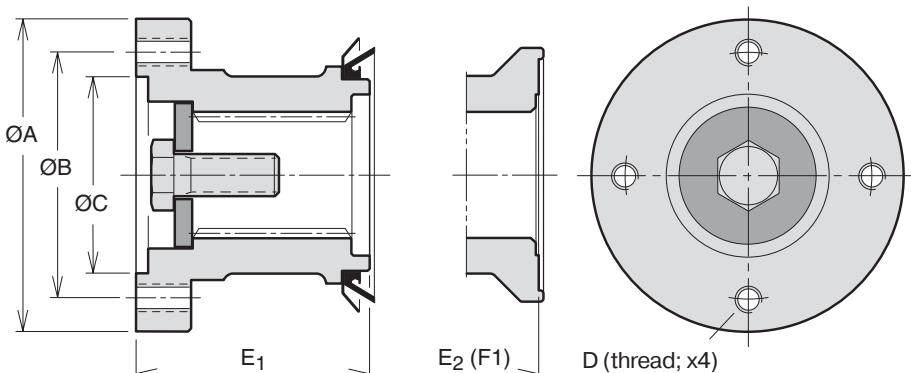


Fig. 1. DIN 90 (370 4634) (378 0642)

Designation	DIN 90 (fig. 2)
A	90
B	74.5
C	47 h7
D	8.2
E <sub>1</sub>	61.5
VP1, F2, F1*	<b>370 7423</b>

**NOTE:** Max torque is limited by the cardan shaft.

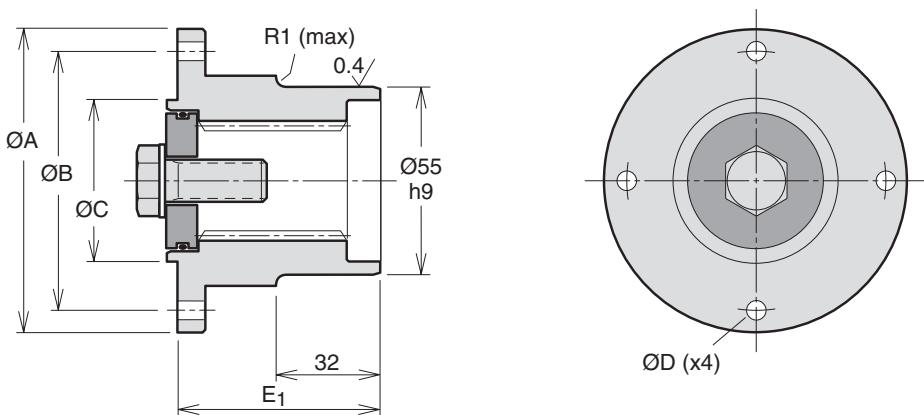


Fig. 2. DIN 90 (370 7423)

Designation	SAE88 (fig. 3)
A	88
B	69.9
C	57.15 H8
D	5/16" UNC
E <sub>1</sub>	59.5
Max torque [Nm] interm./contin.	600/300
F1	<b>378 0644</b>

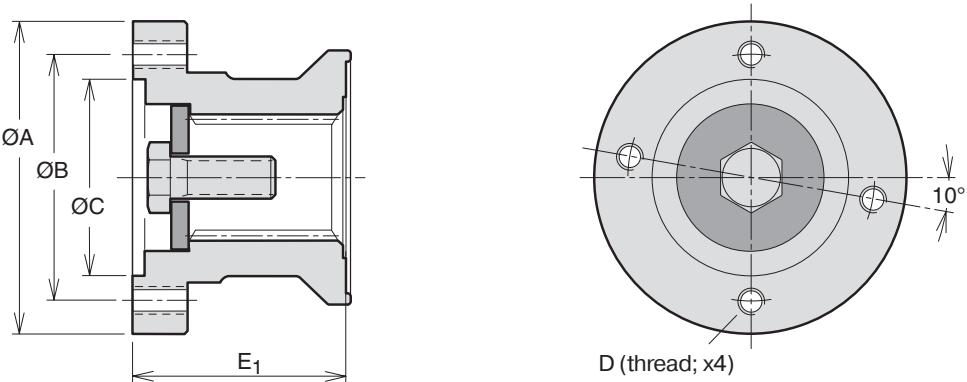


Fig. 3. SAE 88 (378 0644)

Designation	SAE97 (fig. 4)
A	97
B	79.4
C	60.33 H8
D	3/8" UNC
E <sub>1</sub>	65
E <sub>2</sub> (F1)	59.5
Max torque [Nm] interm./contin.	1000/500
VP1, F2, F1*	<b>370 4631</b>
F1	<b>378 0645</b>

F1\* Old versions

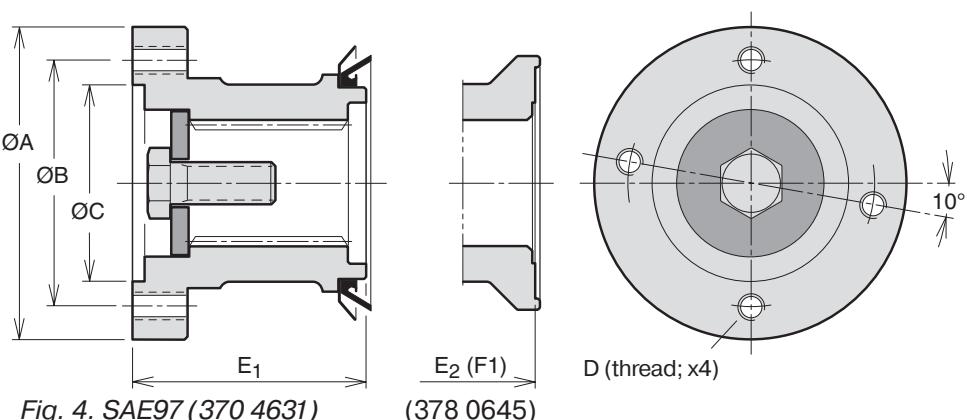


Fig. 4. SAE97 (370 4631) (378 0645)

## Installation and start up

### Installing couplings, sleeves, and gears on the pump shaft.

This is a short installation and start up information. To have the complete and latest installation information, always see the installation info supplied together with the pump.

### PTO installation

- 'Left hand' and 'Right hand' rotation defined in the illustrations on page 77.
- The driving gear of the PTO and the driven gear of the pump are shown in the illustration below. (A right hand rotating pump is shown).

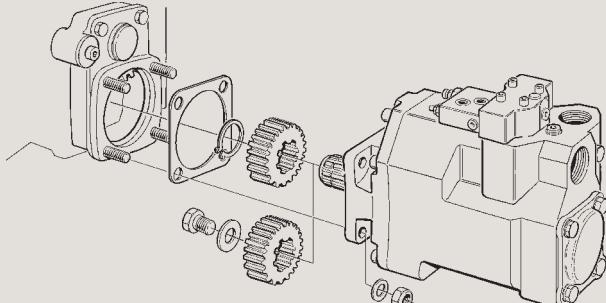
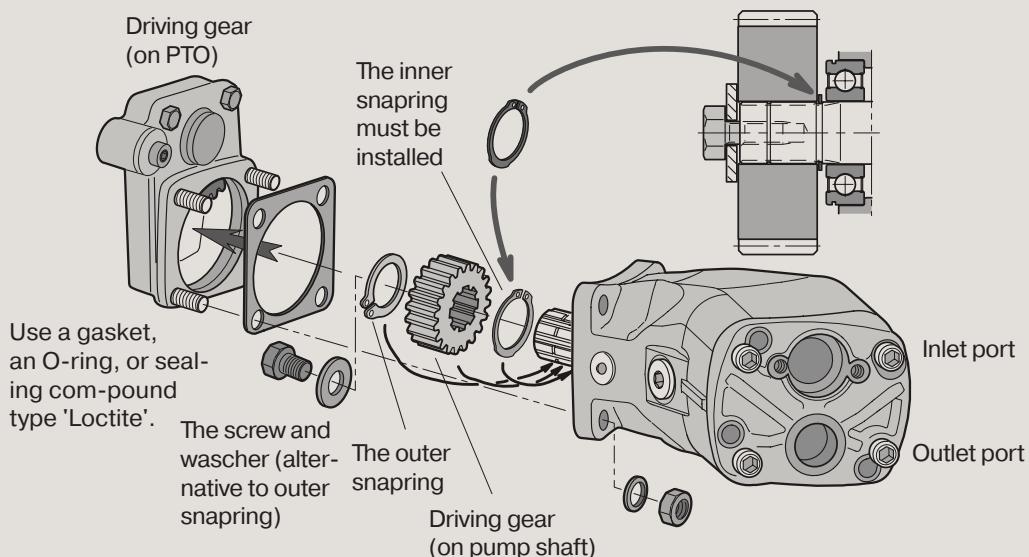


Fig. 6. VP1-to-PTO installation.

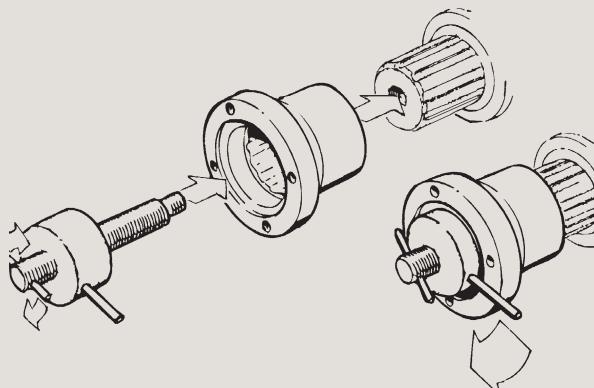



Fig. 7 Mounting tool.

#### IMPORTANT

Use some kind of special tool when you install couplings, sleeves, and gears on the pump shaft. Force must never be used when installing these parts on the F1 shaft.

## 1) Flow vs. shaft rotation

- The gear pumps are bi-directional (and internally drained)
- Port connector assembly:
  - Screw in the connector until it firmly touches the pump housing; then tighten the connector 30° ( $\frac{1}{12}$  turn).

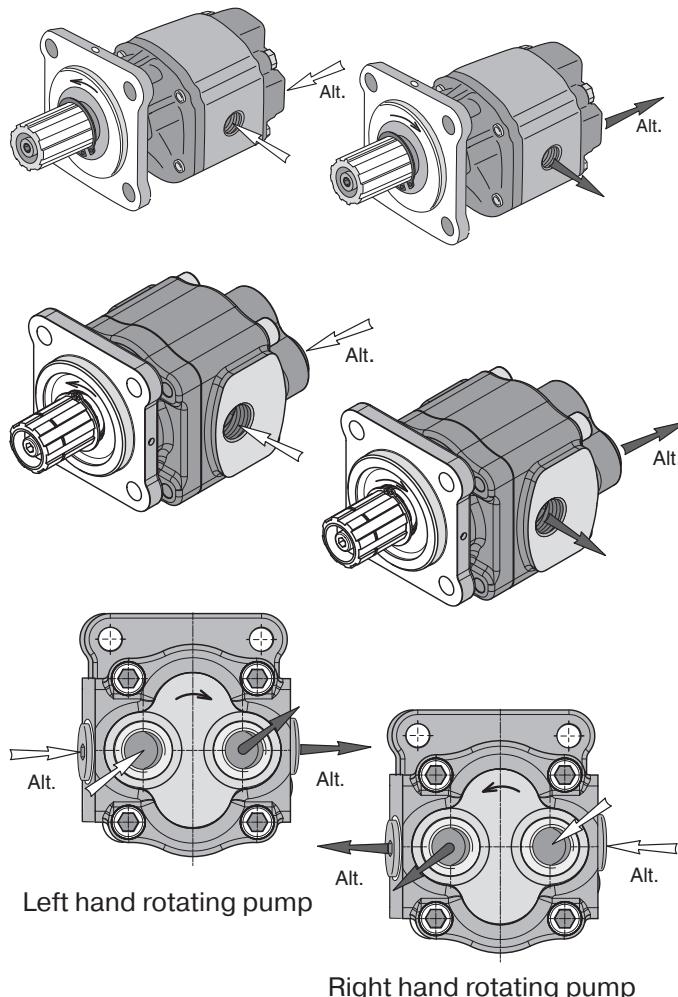

## 2) Suction fitting selection


Flow speed [m/s] at indicated line size [mm/in]

[l/min]	19 $\frac{3}{4}$ "	25 $\frac{1}{4}$ "	32 $\frac{1}{4}$ "	38 $\frac{1}{2}$ "	50 $\frac{2}{3}$ "
5	0.3	0.2	0.1	< 0.1	< 0.1
15	0.9	0.5	0.3	0.2	0.1
25	1.5	0.8	0.5	0.4	0.2
40	-	1.4	0.8	0.6	0.3
60	-	2.0	1.2	0.9	0.5
80	-	-	1.7	1.2	0.7
100	-	-	-	1.5	0.8

The gearpump must not be installed more than 0.5 m above the min. oil level in the reservoir.


## 3) Lubricate the spline

When the PTO has a sealed-off output sleeve (as shown in the illustration), the gearpump shaft spline **must be lubricated with a heat-resistant grease before start-up**; repeat periodically (at least once a year).

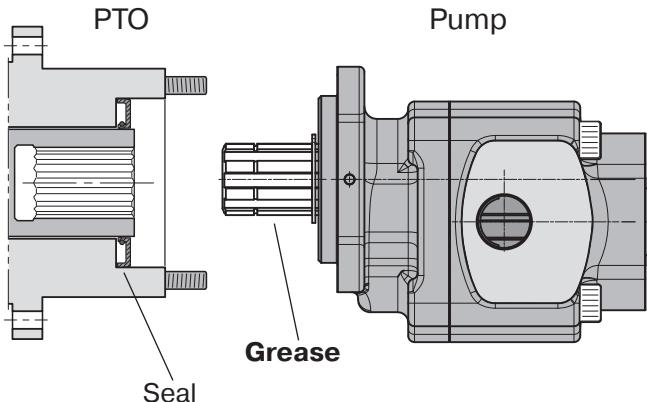

## 4) No external shaft loads

- No external radial or axial shaft loads are allowed on the pump shaft.
- In case of radial and/or axial shaft loads an external, bearing supported coupling must be utilized.

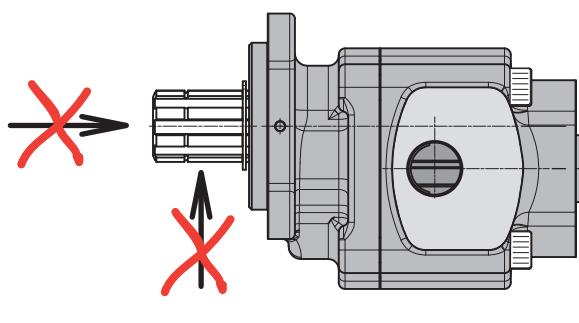

## 5) Hydraulic fluid

Use, exclusively, good quality hydraulic fluid with anti-foam and anti-wear additives. The fluid must meet the following specifications: DIN 51 524 / 51 525 (type HLP).

### Viscosity

Acceptable:

- 8 – 1000 cSt (mm<sup>2</sup>/s)

Recommended:

- 22 cSt (in cold climate)
- 37 cSt (in temperate climate)
- 46 cSt (in hot climate)


### Temperature

- Min. -15 °C
- Max. +80 °C


### Filtration

- Suction line: Not recommended
- Pressure line: 10 to 25 µm.


## Installation and start-up for F1, T1, F2, F3 and F4

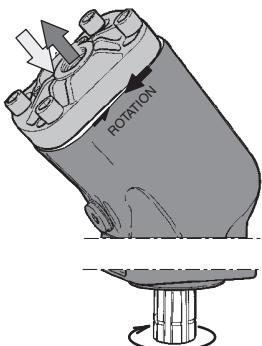

*Left hand (L.H.); counter clockwise rotating pump.*

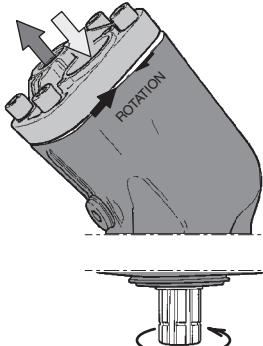

*Right hand (R.H.); clockwise rotating pump.*

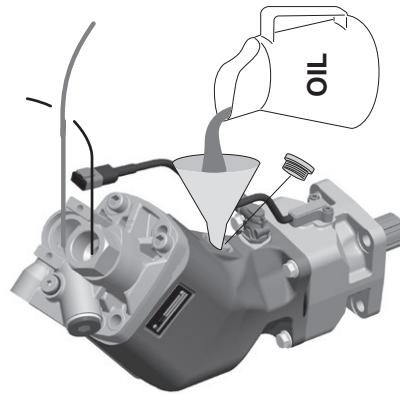

*Before start-up, the housing must be filled with hydraulic fluid.*

### Direction of rotation

The pictures above show direction of flow vs. shaft rotation.

The direction of rotation can be changed (i.e. from right hand to left hand) by turning the end cap.

Remove the four cap screws and turn the end cap about half a turn while making sure it stays in contact with the barrel housing.

Re-fit the cap screws and torque to 80 – 100 Nm.

### Installation

Make sure max torque and bending moment (due to the weight of the pump) of the utilised PTO are not exceeded. (The approx. center of gravity of the various pump sizes are shown in the installation drawings).

The top illustration on page 78 shows two ways of installing a gear on the shaft of fixed displacement pumps. The pump shaft spline end usually fits directly in the PTO internal spline coupling.

**NOTE:** In order to obtain the longest bearing life, the pump should be installed according to the information shown on page 81 "Pump bearing life".

### Fluid viscosity

Recommended viscosity:  
20 to 30 mm<sup>2</sup>/s (cSt).

Operating viscosity limits:

- Min 10 mm<sup>2</sup>/s; max 400 mm<sup>2</sup>/s.
- At start-up, max 4000 mm<sup>2</sup>/s.

### Fluids

The fixed displacement pumps data shown in the specifications for each pump are valid when operating on high quality, mineral based hydraulic oil.

Type HLP (according to DIN 51524) hydraulic oil is suitable as well as biologically degradable fluids like natural and synthetic esters and polyalphaolefins.

The utilised hydraulic fluid shall meet one of the following Swedish standards:

- SS 15 54 34
  - SMR Hydraulic Oil Standard 1996-2.
- Contact Parker Hannifin for further information.
- NOTE:** - ATF (automatic transmission fluid) and API type CD engine oils may also be useable.  
- Seals are made of nitrile rubber; make sure the utilised fluid is compatible with this material.

### Fluid temperature

Main circuit: Max 75 °C.

### Drain line

Fixed displacement pumps don't need an external drain line as they are internally drained.

When the pump is mounted in a Engine-PTO we recommend a drain line from the bypass valve directly to oil tank.

### Filtration

Filtration should follow ISO standard 4406, code 20/18/13.


To obtain the longest life of fixed displacement pumps, we recommend an oil cleanliness of 10 µm (absolute).

### Start-up

Make sure the entire hydraulic system is clean before filling it with a recommended hydraulic fluid.

In particular, make sure the pump is illed (to at least 50 %) as the internal leakage does not provide sufficient lubrication at start-up.

**NOTE:** - The suction port should always be above the pressure port when the pump is installed above the reservoir oil level.  
- During operation, the pump must be filled with oil to at least 50 %.

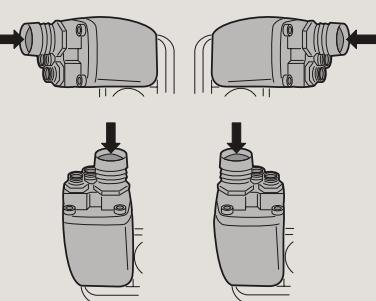


**If any oil should drop out of the indication-hole on the pump;**


- Stop the system immediately.
- Determine the cause of leakage.
- Replace damaged parts.
- Make sure you have corrected the source of the problem, not only the symptom.

Parker can not be held responsible for damage to PTO, engine and gearbox caused by improper maintenance of the hydraulic system.

**F3**

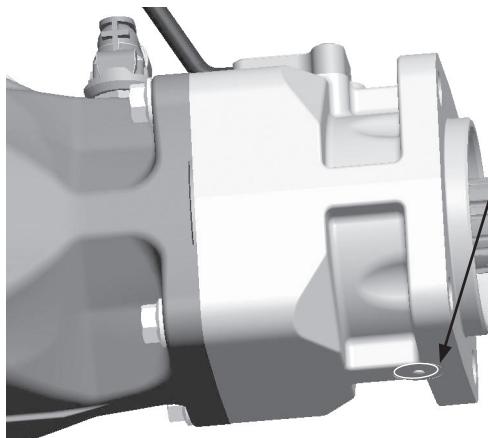


**F1**

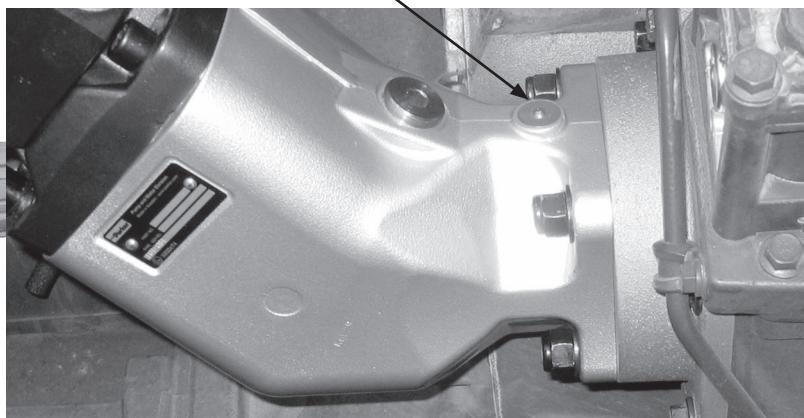


**Pump bearing life**

Bearing life is dependent on how the pump is installed on the PTO as shown in the illustrations below.


A pump mounted according to fig. 1 gives the lowest bearing life; the highest is obtained when installed according to fig. 3.

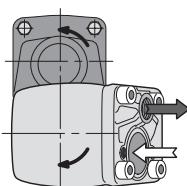


Left hand (L.H.)  
rotating pump

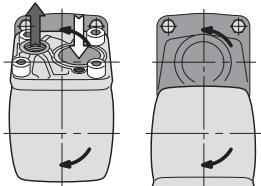


L.H.

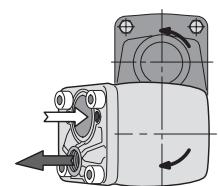


L.H.

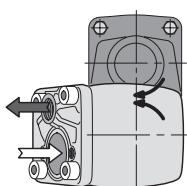

Right hand (R.H.)  
rotating pump

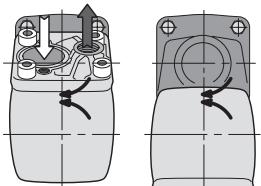

R.H.

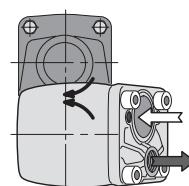

R.H.

*Fig. 1.*

*Fig. 2.*

*Fig. 3.*

## Installation and start-up for VP1

### Direction of rotation

The basic VP1 pump is uni-directional; there is a left hand and a right hand version (indicated by the arrow on the side of the VP1 pump (fig. 4 and 5)).

Consequently, the required direction of rotation must be stated when ordering the pump.

### Installation

The VP1 can be installed (close-coupled) directly on a PTO (which meets ISO DIN 5462).

Before start-up, the pump must be filled with hydraulic fluid and purged. Utilise the uppermost purge plug (refer to the installation drawing on pages 56 and 59).

Figure 6 (page 78) shows two ways of installing a gear on the VP1 shaft. On a non/geared or a geared PTO with support bearings, the pump shaft is usually installed directly in the internally splined PTO output shaft.

Make sure max torque and bending moment (due to the weight of the pump) of the utilised PTO are not exceeded. (The approx. center of gravity of the various pump sizes are shown in the installation drawings).

### Hydraulic fluids

The VP1 data shown in the specifications on page 55, are valid when operating on a high quality, mineral based fluid.

Hydraulic fluids type HLP (DIN 51524), ATF (automatic transmission fluids), and API type CD engine oils are suitable.

### Fluid temperature

Main circuit: Max 75 °C.

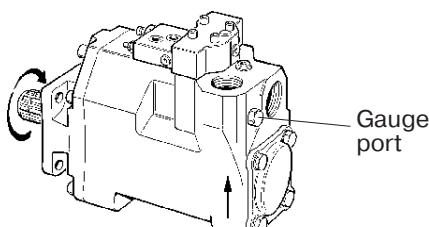


Fig. 4. Left hand rotating pump.

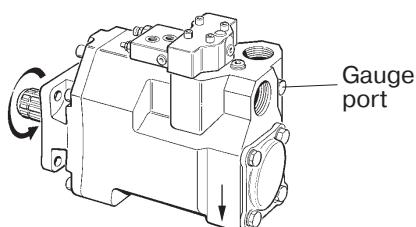


Fig. 5. Right hand rotating pump.

### Viscosity

Recommended viscosity: 20 to 30 mm<sup>2</sup>/s (cSt).

Operating viscosity limits: 10 to 400 mm<sup>2</sup>/s.

At start-up: Max 1000 mm<sup>2</sup>/s.

### Filtration

To obtain long VP1 life, we recommend a filtration level of:

- 25 µm (absolute) in clean environment or at low pressures.
- 10 µm (absolute) in contaminated environment or at high pressures.

Filtration should meet ISO standard 4406: code 20/18/13.

### Drain line

The LS valve requires a separate drain line; it should be routed directly to the reservoir (refer to fig. 8).

### Start-up

Make sure the entire hydraulic system is clean before filling it with a recommended fluid.

In addition, the VP1 pump must be purged to remove any entrapped air in the pump housing; utilise the uppermost purge port (fig. 8).

### IMPORTANT

As shown in fig. 8, the pump inlet must always be below the lowest reservoir oil level.

Before start-up, open the plug, purge the pump, and re-tighten the plug

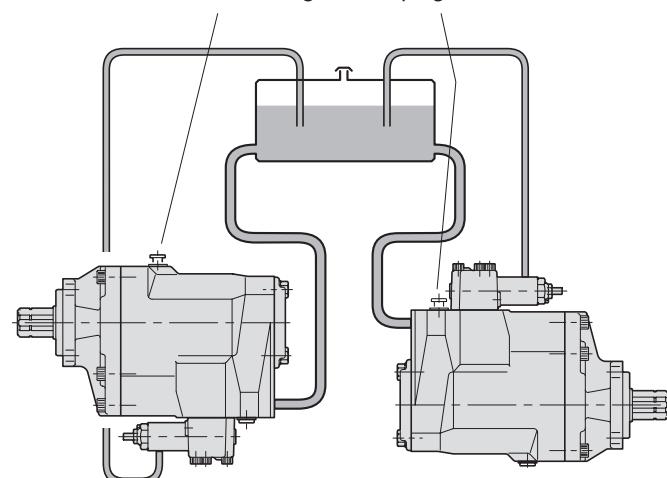


Fig. 8. VP1 should be installed below the reservoir fluid level.

Purging should be performed when the pump is connected to the reservoir and the system is filled with fluid.



# **WARNING – USER RESPONSIBILITY**

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN  
OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

## **Offer of Sale**

Please contact your Parker representation for a detailed "Offer of Sale".

[www.parker.com](http://www.parker.com)



**European Headquarters**  
La Tuilière 6, 1163 Ettoy,  
Switzerland  
Tel: +41 21 821 85 00

Your authorized Distributor